


2-4. Simple MA remote controller [PAC-YT51CRB]

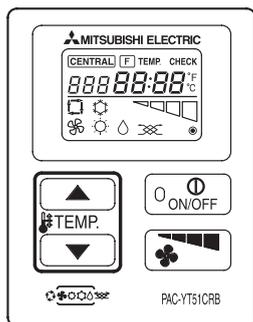


- Control:ON/OFF, room temperature, fan speed, and operation mode
 - The only wiring required is cross-over wiring based on two-wire signal lines.
 - Room temperature sensors are built-in.
 - Set temperature range limit
 - Can operate all types of indoor units
- * : Since this controller has limited functions, it should always be used in conjunction with standard controller or centralized controller.

■ Functions

□ :Each unit ○:Each group ■:Each block
 △:Each floor ◎:Collective ×:Not available

Item	Description	Operations	Display
ON/OFF	ON and OFF operation for a single group	○	○
Operation mode switching	Switches between Cool / Dry / Auto / Fan / Heat. Operation modes vary depending on the air conditioner unit. *Auto only supported for the City Multi R2 and WR2 series.	○	○
Temperature setting	Sets the temperature for a single group Range of temperature setting Cool/Dry : 19°C - 30°C (14°C - 30°C) / 67°F - 87°F (57°F - 87°F) Heat : 17°C - 28°C (17°C - 28°C) / 63°F - 83°F (63°F - 83°F) Auto : 19°C - 28°C (17°C - 28°C) / 67°F - 83°F (63°F - 83°F)	○	○
Fan speed setting	Models with 4 air flow speed settings: Hi/Mid-2/Mid-1/Low Models with 3 air flow speed settings: Hi/Mid/Low Models with 2 air flow speed settings: Hi/Low Fan speed setting (including Auto) varies depending on the model.	○	○
Air flow direction setting	Air flow direction angles (4-angle, Swing) Louver ON/OFF Air flow direction settings vary depending on the model.	×	×
Timer operation	Not available	×	×
Permit / Prohibit local operation	Individually prohibit operation of each local remote control function (ON/OFF, Set temperature). * 1: When the local remote controller inactivation command is received from the main system controller, "CENTRAL" is displayed.	×	○ ^{*1}
Indoor unit intake temperature	Measures the intake temperature of the indoor unit only when the indoor unit is operating.	×	×
Error	When an error is currently occurring on an air conditioner unit, the afflicted unit and the error code are displayed.	×	□
Test run	This operates air conditioner units in test run mode. * 2: The display for test run mode will be the same as for normal ON/OFF (no display "test run").	○	○ ^{*2}
Ventilation equipment	Up to 16 indoor units can be connected to an interlocked system that has one LOSSNAY.	○	×
Function to limit the setting range of room temperature (Set temperature range limit)	Set temperature range limit to cooling, heating, or auto mode.	○	○
Prohibition/permission of specified mode /heating prohibited /cooling-heating prohibited	By the setting from System Controller, the operation for the following modes is prohibited. At cooling prohibited : Cool, Dry, Auto, At heating prohibited : Heat, Auto, At cooling-heating prohibited : Cool, Heat, Dry, Auto	×	○

■ System example

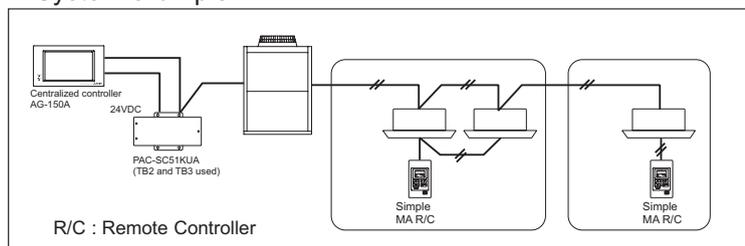

■ External dimension

