
PAR-21MAA User Guide

CONTROLS

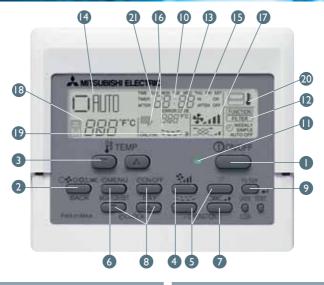

Operation Buttons

- ON/OFF Switches between run and stop.
 The light flashes when a malfunction occurs.
- OPERATION MODE SWITCHING Switches between Cool / Dry / Auto / Fan / Heat
 Operation modes vary depending on the air conditioning system.
 Auto mode is dependant on model.
- 3 TEMPERATURE SETTING -

Sets the room temperature: Range of temperature setting: Cool / Dry: 19°C-30°C / Heat: 17°C-28°C / Auto: 19°C-28°C

4 FAN SPEED SETTING -

Models with 4 airflow speed settings: Hi / Mid-2 / Mid-1 / Low Models with 3 airflow speed settings: Hi / Mid / Low Models with 2 airflow speed settings: Hi / Low

5 AIR FLOW DIRECTION SETTING -

Air flow direction angles 100% - 80% - 60% - 40%, Swing, Louver ON/OFF. Air flow direction setting buttons vary depending on the model.

6 TIMER SELECTION BUTTON -

Switches between: Daily timer, weekly timer and auto off timer (30 minutes to 4 hours).

- 7 This is the Lossnay interlock button.
- 8 This sets the current time, timer start and stop times.
- 9 This resets the Filter service indication display.

Display

- ERROR When an error is occurring on an air conditioner unit, the affected unit and the error code are displayed. Phone number may also be displayed for maintenance purposes.
- 11 This lamp lights during operation, goes off when the unit stops and flashes when a malfunction occurs.
- 12 FILTER DISPLAY -

Indicates that it is time to clean the filter.

- 13 INDOOR UNIT INTAKE TEMPERATURE Measures the intake temperature of the indoor unit when
 the indoor unit is operating.
- 14 OPERATION MODE Displays the operation mode.
- 15 **TIMERS** Displays the current time and timer set times.
- 16 This displays the air direction.
- 17 The selected fan speed is displayed.
- 18 This displays the selected temperature.
- 19 This lamp lights when electricity is supplied to the unit.
- 20 SENSOR DISPLAY -

Displayed when the remote controller sensor is used.

21 This displays the time and the day.

