

# Air-Conditioners For Building Application

## INDOOR UNIT

### PFFY-P·VKM-E

For use with the R410A, R407C & R22    Για χρήση με τα R410A, R407C και R22  
Bei Verwendung von R410A, R407C & R22    Para utilização com o R410A, R407C e o R22  
A utiliser avec le R410A, R407C et le R22    R410A, R407C ve R22 ile beraber kullanmak için  
Bij gebruik van R410A, R407C & R22    Для использования с моделями R410A, R407C и R22  
Para utilizar con el R410A, R407C y el R22    使用R410A, R407C和R22制冷剂  
Uso del refrigerante R410A, R407C e R22

#### INSTALLATION MANUAL

For safe and correct use, please read this installation manual thoroughly before installing the air-conditioner unit.

**FOR INSTALLER**

#### INSTALLATIONSHANDBUCH

Zum sicheren und ordnungsgemäßen Gebrauch der Klimaanlage das Installationshandbuch gründlich durchlesen.

**FÜR INSTALLATEURE**

#### MANUEL D'INSTALLATION

Veuillez lire le manuel d'installation en entier avant d'installer ce climatiseur pour éviter tout accident et vous assurer d'une utilisation correcte.

**POUR L'INSTALLATEUR**

#### INSTALLATIEHANDLEIDING

Voor een veilig en juist gebruik moet u deze installatiehandleiding grondig doorlezen voordat u de airconditioner installeert.

**VOOR DE INSTALLATEUR**

#### MANUAL DE INSTALACIÓN

Para un uso seguro y correcto, lea detalladamente este manual de instalación antes de montar la unidad de aire acondicionado.

**PARA EL INSTALADOR**

#### MANUALE DI INSTALLAZIONE

Per un uso sicuro e corretto, leggere attentamente questo manuale di installazione prima di installare il condizionatore d'aria.

**PER L'INSTALLATORE**

#### ΕΓΧΕΙΡΙΔΙΟ ΟΔΗΓΙΩΝ ΕΓΚΑΤΑΣΤΑΣΗΣ

Για ασφάλεια και σωστή χρήση, παρακαλείστε διαβάσετε προσεκτικά αυτό το εγχειρίδιο εγκατάστασης πριν αρχίσετε την εγκατάσταση της μονάδας κλιματισμού.

**ΓΙΑ ΑΥΤΟΝ ΠΟΥ ΚΑΝΕΙ ΤΗΝ ΕΓΚΑΤΑΣΤΑΣΗ**

#### MANUAL DE INSTALAÇÃO

Para segurança e utilização correctas, leia atentamente este manual de instalação antes de instalar a unidade de ar condicionado.

**PARA O INSTALADOR**

#### MONTAJ ELKİTABI

Emniyetli ve doğru biçimde nasıl kullanılacağını öğrenmek için lütfen klima cihazını monte etmeden önce bu elkitabını dikkatle okuyunuz.

**MONTÖR İÇİN**

#### РУКОВОДСТВО ПО УСТАНОВКЕ

Для осторожного и правильного использования прибора необходимо тщательно ознакомиться с данным руководством по установке до выполнения установки кондиционера.

**ДЛЯ УСТАНОВИТЕЛЯ**

#### 安装说明书

在安装空调机之前，请先通读此安装说明书，以便安全正确地使用。

**安装人员适用****English****Deutsch****Français****Nederlands****Español****Italiano****Ελληνικά****Português****Türkçe****Русский****中文**

# Contents

1. Safety precautions .....	2	6. Embedding the indoor unit in a wall .....	6
2. Installation location .....	2	7. Electrical work .....	7
3. Installing the indoor unit .....	3	8. Test run .....	8
4. Refrigerant pipe .....	4	9. Air outlet selection .....	9
5. Drainage piping work .....	5		

## 1. Safety precautions

- ▶ Before installing the unit, make sure you read all the "Safety precautions".
- ▶ Please report to your supply authority or obtain their consent before connecting this equipment to the power supply system.

**⚠ Warning:**  
Describes precautions that must be observed to prevent danger of injury or death to the user.

**⚠ Caution:**  
Describes precautions that must be observed to prevent damage to the unit.

After installation work has been completed, explain the "Safety Precautions," use, and maintenance of the unit to the customer according to the information in the Operation Manual and perform the test run to ensure normal operation. Both the Installation Manual and Operation Manual must be given to the user for keeping. These manuals must be passed on to subsequent users.

- ⚠ Warning:**
- Ask the dealer or an authorized technician to install the air conditioner.
  - Install the unit at a place that can withstand its weight.
  - Use the specified cables for wiring.
  - Use only accessories authorized by Mitsubishi Electric and ask the dealer or an authorized technician to install them.
  - Do not touch the heat exchanger fins.
  - Install the air conditioner according to this Installation Manual.

- ⚠ Caution:**
- Do not use the existing refrigerant piping, when use R410A or R407C refrigerant.
  - Use ester oil, either oil or alkylbenzene (small amount) as the refrigerator oil to coat flares and flange connections, when use R410A or R407C refrigerant.
  - Do not use the air conditioner where food, pets, plants, precision instruments, or artwork are kept.
  - Do not use the air conditioner in special environments.

- ⊘ : Indicates an action that must be avoided.
- ⚠ : Indicates that important instructions must be followed.
- ⚡ : Indicates a part which must be grounded.
- ⚠ : Indicates that caution should be taken with rotating parts.
- ⚠ : Indicates that the main switch must be turned off before servicing.
- ⚠ : Beware of electric shock.
- ⚠ : Beware of hot surface.
- ⚠ ELV: At servicing, please shut down the power supply for both the Indoor and Outdoor Unit.

**⚠ Warning:**  
Carefully read the labels affixed to the main unit.

- Have all electric work done by a licensed electrician according to local regulations.
- If the air conditioner is installed in a small room, measures must be taken to prevent the refrigerant concentration from exceeding the safety limit even if the refrigerant should leak.
- The cut face punched parts may cause injury by cut, etc. The installers are requested to wear protective equipment such as gloves, etc.

- Ground the unit.
- Install an leak circuit breaker, as required.
- Use power line cables of sufficient current carrying capacity and rating.
- Use only a circuit breaker and fuse of the specified capacity.
- Do not touch the switches with wet fingers.
- Do not touch the refrigerant pipes during and immediately after operation.
- Do not operate the air conditioner with the panels and guards removed.
- Do not turn off the power immediately after stopping operation.

## 2. Installation location

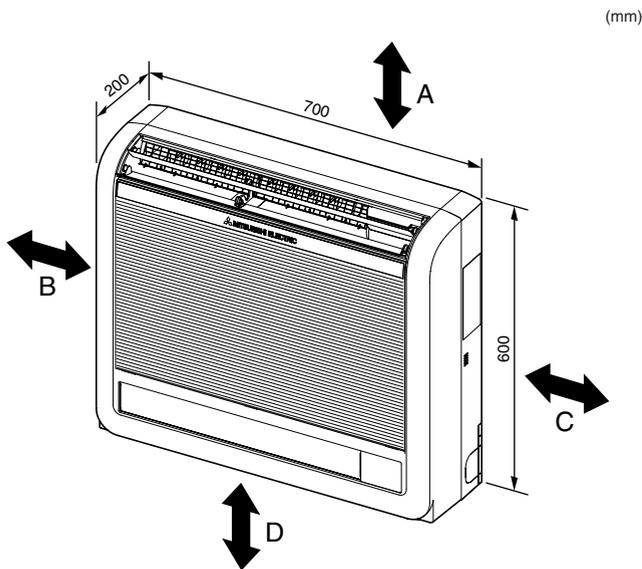


Fig. 2-1

The indoor unit should be supplied with the following accessories.

PARTNUMBER	ACCESSORY	QUANTITY
①	Drain hose	1
②	Pipe cover	1
③	Band	2
④	Indoor unit mounting bracket	1
⑤	Fixing screw for ④ 4 × 25 mm	5
⑥	Wood screw for the indoor unit fixation	4
⑦	Washer of ⑥	4
⑧	Felt tape (Used for left or left-rear piping)	1
⑨	MA Remote controller cable	1

### 2.1. Outline dimensions (Indoor unit) (Fig. 2-1)

The unit must be securely installed on a structure that can sustain its weight.

Models	A	B	C	D
P20/25/32/40	100 mm or more	100 mm or more	100 mm or more	150 mm or below from the floor

**⚠ Warning:**  
Mount the indoor unit on a wall structure strong enough to withstand the weight of the unit.

### 3. Installing the indoor unit

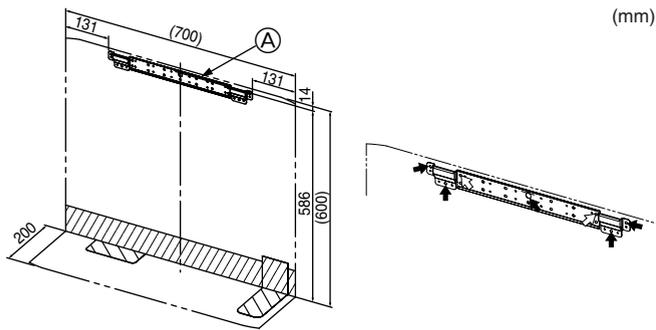


Fig. 3-1

Fig. 3-2

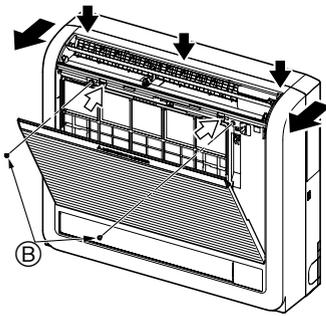


Fig. 3-3

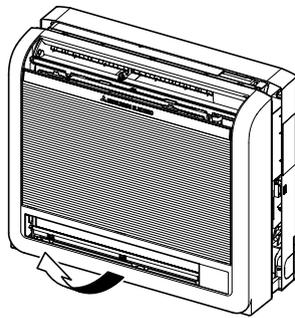


Fig. 3-4

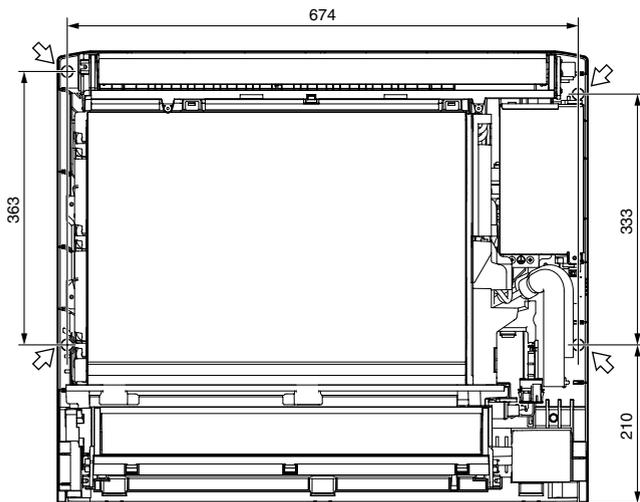


Fig. 3-5

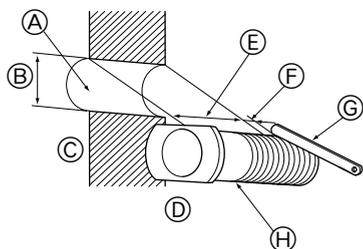


Fig. 3-6

1)

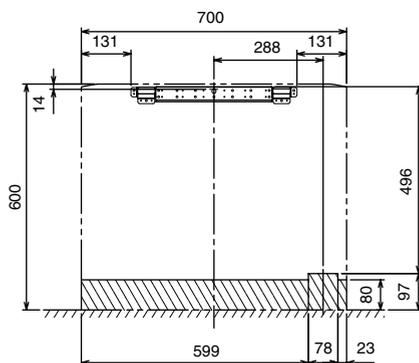


Fig. 3-7

#### 3.1. Indoor unit mounting bracket installation

- Install the bracket firmly to the wall structure (stud, etc.). (Fig. 3-1)
- Use a level to install the mounting bracket horizontally.
- Install the indoor unit 150 mm or below from the floor.
  - Ⓐ Indoor unit mounting bracket

#### Note:

To prevent the indoor unit mounting bracket from vibrating slightly, be sure to fasten the bracket at the holes indicated by ◀. In addition, fasten the bracket at the holes indicated by ⇨ if possible. (Fig. 3-2)

#### 3.2. Indoor unit preparation

- 1) Press the 2 positions indicated by the arrows ⇨ and open the front grille. (Fig. 3-3)
- 2) Open the front grille and remove the two screws.
- 3) Open the horizontal vane for the upper air outlet, push the top of the front panel in three locations, and then pull the top of the grille away from the indoor unit.
  - Ⓑ Screws
- 4) Lift up the front grille to remove it. (Fig. 3-4)

#### 3.3. Indoor unit installation (Fig. 3-5)

- Hook the top of the indoor unit on the indoor unit mounting bracket.
- Use the included wood screws and washer, and fasten the indoor unit at 2 locations (⇨) each at the top and the middle of the unit.

#### Note:

Install the indoor unit securely to the wall, making sure that there is no gap between the unit and the wall.

#### 3.4. Making holes in the wall and floor

##### 3.4.1. Making holes (Fig. 3-6)

- 1) Make  $\phi 65$  mm or  $\phi 75$  mm holes that are approximately 5–7 mm deep and angled slightly downward outward from the room.
- 2) Insert the wall hole sleeves into the holes.
  - Ⓐ Wall hole
  - Ⓑ 65 mm or 75 mm dia.
  - Ⓒ Indoor side
  - Ⓓ Wall hole cross section
  - Ⓔ Wall thickness
  - Ⓕ One scale
  - Ⓖ Cut with 1 extra scale length.
  - Ⓗ Wall hole sleeve

#### ⚠ Caution:

Be sure to use the wall hole sleeves. Otherwise, the indoor/outdoor unit connecting wires may contact a metal object in the wall or, in the case of hollow walls, small rodents may gnaw on the wires, resulting in a very dangerous situation.

##### 3.4.2. Determining hole positions

The areas where the piping can be routed are indicated with oblique lines in the figure.

##### 1) For rear or left-rear piping (Fig. 3-7)

(The following figure is a front view of the indoor unit installation location.)

### 3. Installing the indoor unit

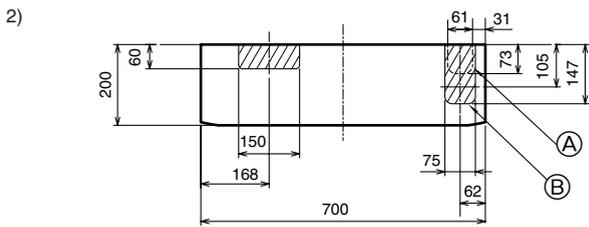


Fig. 3-8

#### 2) For right downward or left downward piping (Fig. 3-8)

(The following figure is a view of the bottom of the indoor unit from above.)

- Ⓐ When the unit is installed on the wall.
- Ⓑ When the unit is installed on the floor.

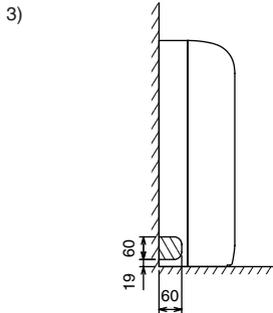


Fig. 3-9

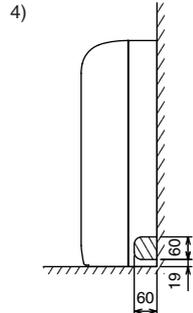


Fig. 3-10

#### 3) For left piping (Fig. 3-9)

#### 4) For right piping (Fig. 3-10)

#### 3.4.3. Sealing the holes

Use putty or a caulking compound to seal the holes.

### 4. Refrigerant pipe

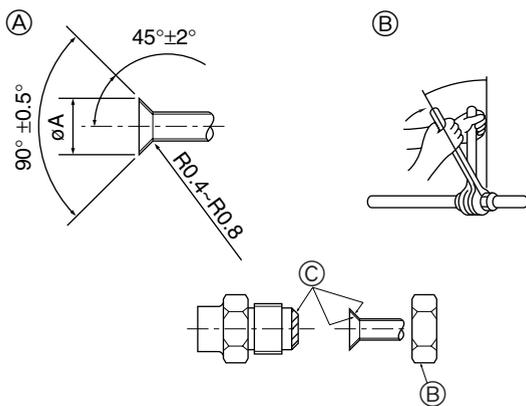


Fig. 4-1

#### 4.1. Connecting pipes (Fig. 4-1)

- When commercially available copper pipes are used, wrap liquid and gas pipes with commercially available insulation materials (heat-resistant to 100 °C or more, thickness of 12 mm or more).
- The indoor parts of the drain pipe should be wrapped with polyethylene foam insulation materials (specific gravity of 0.03, thickness of 9 mm or more).
- Apply thin layer of refrigerant oil to pipe and joint seating surface before tightening flare nut.
- Use two wrenches to tighten piping connections.
- Use refrigerant piping insulation provided to insulate indoor unit connections. Insulate carefully.

##### Ⓐ Flare cutting dimensions

Copper pipe O.D. (mm)	Flare dimensions $\phi A$ dimensions (mm)
$\phi 6.35$	8.7 - 9.1
$\phi 9.52$	12.8 - 13.2
$\phi 12.7$	16.2 - 16.6
$\phi 15.88$	19.3 - 19.7
$\phi 19.05$	22.9 - 23.3

##### Ⓑ Refrigerant pipe sizes & Flare nut tightening torque

	R407C or R22				R410A				Flare nut O.D.	
	Liquid pipe		Gas pipe		Liquid pipe		Gas pipe		Liquid pipe (mm)	Gas pipe (mm)
	Pipe size (mm)	Tightening torque (N.m)	Pipe size (mm)	Tightening torque (N.m)	Pipe size (mm)	Tightening torque (N.m)	Pipe size (mm)	Tightening torque (N.m)		
P20/25/32/40	O.D. $\phi 6.35$ (1/4")	14 - 18	O.D. $\phi 12.7$ (1/2")	49 - 61	O.D. $\phi 6.35$ (1/4")	14 - 18	O.D. $\phi 12.7$ (1/2")	49 - 61	17	26

- Ⓒ Apply refrigerating machine oil over the entire flare seat surface.

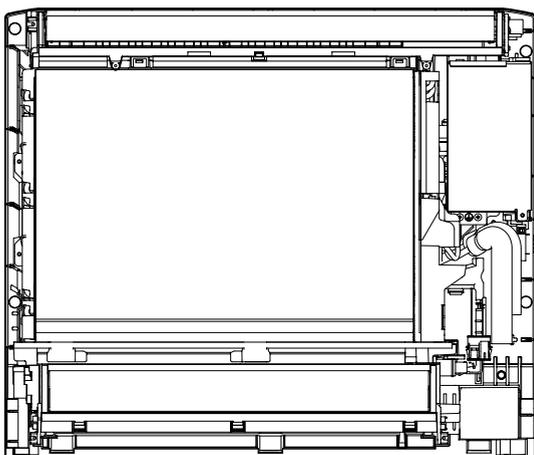


Fig. 4-2

#### 4.2. Refrigerant piping

##### 4.2.1. Connecting pipe installation

Install the connecting pipes so that the piping can move slightly to the front, back, left, and right. (Fig. 4-2)

## 4. Refrigerant pipe

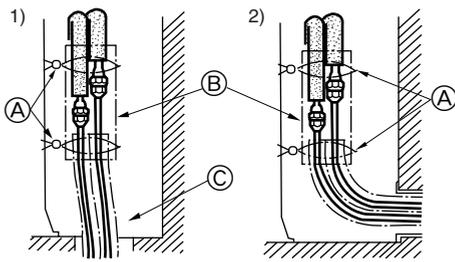


Fig. 4-3

Fig. 4-4

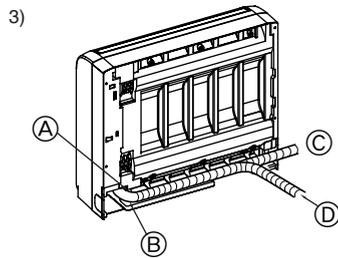


Fig. 4-5

Installing flush against a wall with molding

For left or right piping

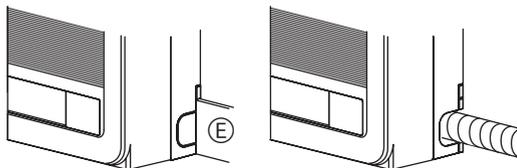


Fig. 4-6

1) For right downward piping (Fig. 4-3)

2) For piping other than right downward (Fig. 4-4)

- Ⓐ Bands
- Ⓑ Pipe covers
- Ⓒ Remove the cover.

- Be sure to insulate the connecting pipes and place them near the rear of the indoor unit so that they do not contact the front panel.
- Be careful not to crush the connecting pipes when bending them.

3) For left or left-rear piping (Fig. 4-5)

Bundle the connecting pipes and drain hose together, and then wrap them in felt tape.

- Ⓐ Make sure that the drain hose is not routed upward.
- Ⓑ Felt tape

\* Wrap the felt tape tightly around the pipes and hose starting near where the pipes and hose are routed from the indoor unit. (The overlap width of the felt tape should not be more than 1/2 of the tape width.)

- Ⓒ Start wrapping the piping tape around the pipes and hose 10 mm inside the indoor unit.
- Ⓓ Fasten the end of the felt tape with a bandage stopper.

Cut and use the lower side panels on the left and right sides of the indoor unit as shown.

Smooth the cut edges of the side panels so that they will not damage the insulation coating. (Fig. 4-6)

- Ⓔ Cut the lower side panels to match the height of the molding.

## 5. Drainage piping work

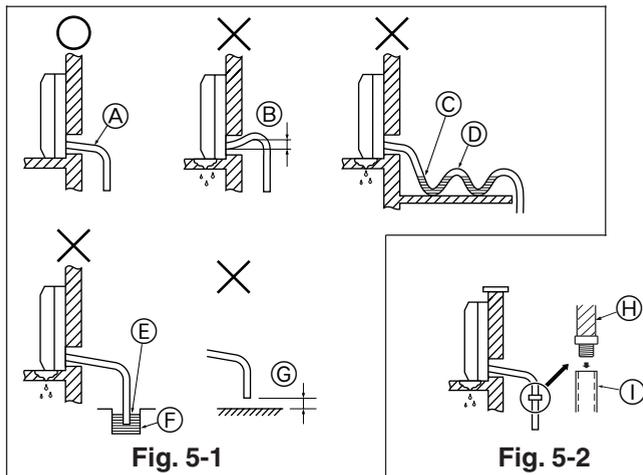


Fig. 5-1

Fig. 5-2

### 5.1. Drainage piping work

- Be sure to route the drain piping slightly downward (1/100 or more) so that the drain water flows easily.
- Do not route the drain piping as shown in the examples mark with an "X" in the figure. (Fig. 5-1)
- If the drain hose is too short, refer to Fig. 5-2 to extend the length of the hose.
- If the indoor unit is installed in a high location such as a high-rise apartment, strong winds may cause the drain water to flow back through the drain hose and leak from the unit. If necessary, contact your nearest Mitsubishi Electric representative for the optional parts to prevent this problem.
- If the drain hose is routed indoors, be sure to wrap it in commercially-available insulation.
- Do not connect the drain piping directly to a septic tank, sewage tank, etc., where ammonia gases or hydrogen sulfide are produced.
- If there is slack in the drain hose or the end of the drain hose is raised up, the drain water may not flow smoothly and some drain water may collect in the hose. This can lead to a strange sound (burbling) being produced during strong winds or when a ventilation fan, etc., is used in a residence that is well-sealed. If necessary, contact your nearest Mitsubishi Electric representative for the optional parts to prevent this problem.

- Ⓐ Sloping downward
- Ⓑ No upward slope
- Ⓒ Accumulated drain water
- Ⓓ Air
- Ⓔ End of drain hose is immersed in water.
- Ⓕ Drainage channel
- Ⓖ 50 mm or less from ground
- Ⓗ Drain hose
- Ⓘ Fixable PVC hose (inner diameter: 15 mm) or rigid PCV pipe (VP-15)

- When routing the drain piping, make sure that the drain hose is routed as shown. (Fig. 5-3)

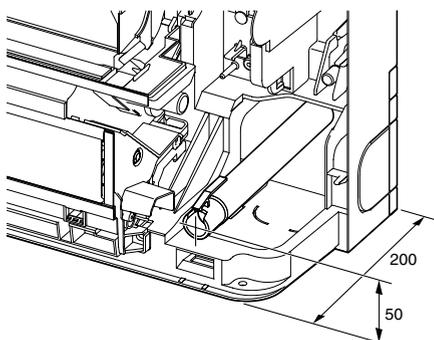


Fig. 5-3

## 5. Drainage piping work

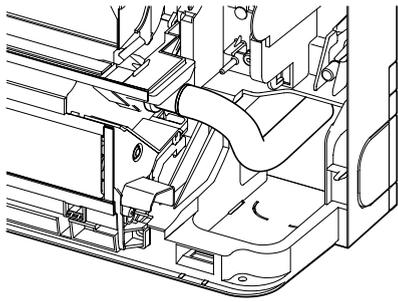


Fig. 5-4

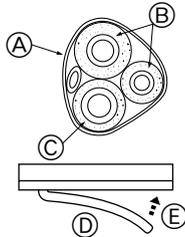


Fig. 5-5

- Insert the drain hose all the way to the base of the drain pan. (Fig. 5-4)  
Make sure that the drain hose is securely caught on the projection in the hole in the drain pan.

- Route the drain hose diagonally below the connecting pipes. (Fig. 5-5)
  - Ⓐ Piping tape
  - Ⓑ Refrigerant piping
  - Ⓒ Drain hose
- Make sure that the drain hose is not routed upward and that there are no waves in the hose.
- Do not pull the drain hose, and then wrap tape around it.
- Route the piping so that it does not project past the rear of the indoor unit. (Refer to the figure to the left.)
  - Ⓓ Piping bent outward
  - Ⓔ Push

## 6. Embedding the indoor unit in a wall

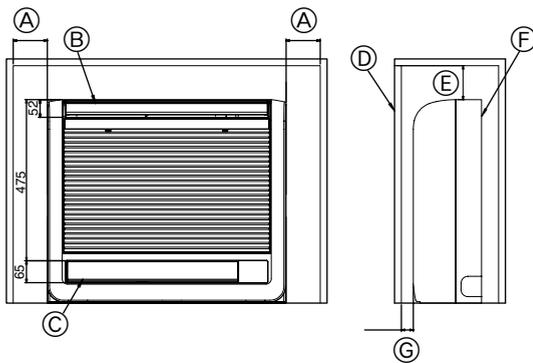


Fig. 6-1

### 6.1. Embedding the indoor unit in a wall (Fig. 6-1)

- On the indoor unit and right and left space (100 mm or more) are the service space.
- On a right side of the indoor unit, there is a hole for the room temperature sensor, and do not close it, please.
- When installing a grating, use a grating with narrow upper and lower horizontal bars so that the airflow from the upper and lower air outlets does not contact the bars. If the horizontal bars will block the lower air outlet, use a stand, etc., to adjust the height of the indoor unit. If the upper or lower air outlet is blocked, the air conditioner will not be able to cool or warm the room well.
- Use a grating with vertical bars, etc., that has at least 75% open area. If the grating has horizontal bars or if the open area is less than 75%, performance could be reduced.
- When the indoor unit is embedded in a wall (built-in), the time it takes for the room temperature to reach the set temperature will increase.
  - Ⓐ 100 mm or more
  - Ⓑ Upper air outlet
  - Ⓒ Lower air outlet
  - Ⓓ Grating
  - Ⓔ 100 mm or more
  - Ⓕ Indoor unit
  - Ⓖ 35 mm or more

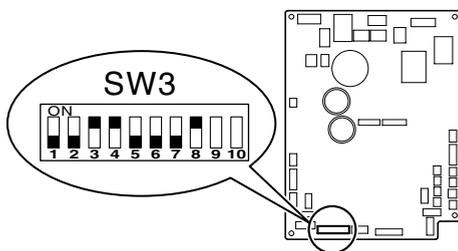


Fig. 6-2


### 6.2. Embedded indoor unit setting (must be performed) (Fig. 6-2)

- When embedding the indoor unit in a wall, restrict the movement of the horizontal vane for the upper air outlet so that it only operates horizontally.
- If this setting is not performed, heat will build up in the wall and the room will not be cooled or warmed properly.
- Remove the electrical part cover and pull out the control board.
- Set DIP switches 3-5 and 3-6 on the control board to ON.
- After setting the switches, reinstall the control board in its original position and install the electrical part cover.

#### ⚠ Caution:

To avoid damage to the control board due to static electricity, be sure to discharge the static buildup before handling it.

## 7. Electrical work

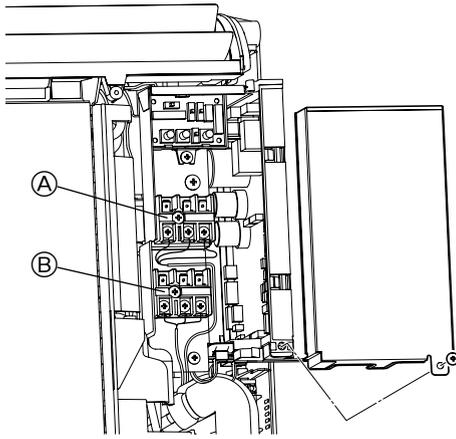

Ⓐ Power supply terminal block (TB2)  
Ⓑ Outdoor unit terminal block (TB5)

Fig. 7-1

### 7.1. Indoor unit (Fig. 7-1)

#### ① Remove the electrical cover.

- Remove one screw holding the electrical cover, then move the cover.
- Remove one screw holding the cord clamp, then move the clamp.

#### ② Connect the power line, control line from the outdoor unit, and remote control lines.

After connecting, secure the wires with the cord clamp.

#### ▶ Fix power source wiring to control box using buffer bushing for tensile force. (PG connection or the like.)

- Since the electric box may need to be pulled out for servicing or other occasions, wires must have enough slack.
- Class 3 grounding work must be conducted (grounding wire diameter: 1.6 mm or more)

After wiring is completed, reinstall the parts in the reverse order of removal.

#### Note:

- Power supply codes of appliance shall not be lighter than design 60245 IEC 53 or 60227 IEC 53.
- Install an earth longer and thicker than other cables.
- Power cable size: more than 1.5 mm<sup>2</sup>.
- A means for the disconnection of the supply with an isolation switch, or similar device, in all active conductors shall be incorporated in the fixed wiring.
- Selecting non-fuse breaker (NF) or earth leakage breaker (NV).
- A switch with at least 3 mm contact separation in each pole shall be provided by the air conditioner installation.

#### ⚠ Warning:

Wiring should be done so that the power lines are not subject to tension. Otherwise, heat may be generated or fire may occur.

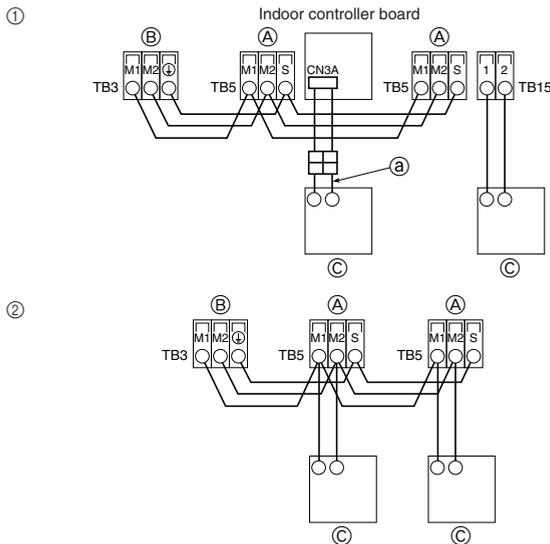


Fig. 7-2

### 7.2. Connecting remote controller, indoor and outdoor transmission cables (Fig. 7-2)

- Connect indoor unit TB5 and outdoor unit TB3. (Non-polarized 2-wire)  
The "S" on indoor unit TB5 is a shielding wire connection. For specifications about the connecting cables, refer to the outdoor unit installation manual.
  - Install a remote controller following the manual supplied with the remote controller.
  - Connect the remote controller's transmission cable within 10 m using a 0.75 mm<sup>2</sup> core cable. If the distance is more than 10 m, use a 1.25 mm<sup>2</sup> junction cable.
- ① MA Remote controller
- Connect the connector for MA remote controller. (Non-polarized 2-wire)
  - DC 9 to 13 V between 1 and 2 (MA remote controller)
  - ③ MA remote controller cable (ACCESSORY ③)
- ② M-NET Remote controller
- Connect the "M1" and "M2" on indoor unit TB5 to a M-NET remote controller. (Non-polarized 2-wire)
  - DC 24 to 30 V between M1 and M2 (M-NET remote controller)
  - Ⓐ Terminal block for indoor transmission cable
  - Ⓑ Terminal block for outdoor transmission cable
  - Ⓒ Remote controller

### Constraints on transmission cable (Fig. 7-3)

Longest wiring length (L1+L2+L4 or L1+L3 or L2+L3+L4): less than 200 m  
Length between indoor unit and remote controller (ℓ): within 10 m

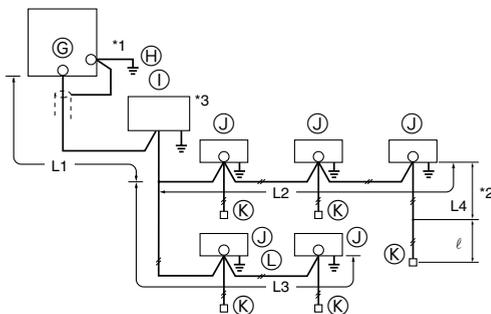


Fig. 7-3

#### Note:

- \*1 Put the transmission cable earth via the outdoor unit's earth terminal (Ⓒ) to the ground.
- \*2 If the remote controller cable exceeds 10 m, use a 1.25 mm<sup>2</sup> diameter cable over the exceeded portion, and add that exceeded portion to within 200 m.
- \*3 The BC controller is required only for simultaneous cooling and heating series R2.

## 7. Electrical work

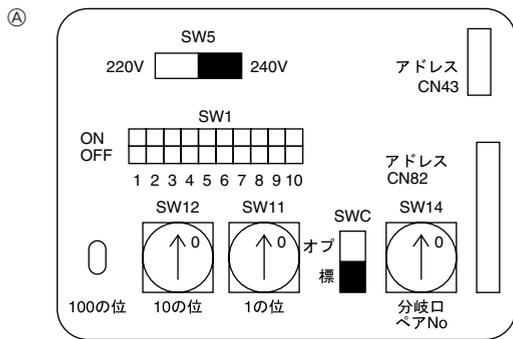


Fig. 7-4

### 7.3. Setting addresses (Fig. 7-4)

(Be sure to operate with the main power turned OFF.)

- There are two types of rotary switch setting available: setting addresses 1 to 9 and over 10, and setting branch numbers.

**Note:**

- Please set the switch SW5 according to the power supply voltage.
- Set SW5 to 240 V side when the power supply is 230 and 240 volts.
- When the power supply is 220 volts, set SW5 to 220 V side.

Ⓐ Address board

### 7.4. Types of control cables

#### 1. Wiring transmission cables: Shielding wire CVVS or CPEVS

- Cable diameter: More than 1.25 mm<sup>2</sup>

#### 2. M-NET Remote control cables

Kind of remote control cable	Shielding wire MVVS
Cable diameter	More than 0.5 to 1.25 mm <sup>2</sup>
Remarks	When 10 m is exceeded, use cable with the same specifications as transmission line wiring.

#### 3. MA Remote control cables

Kind of remote control cable	2-core cable (unshielded)
Cable diameter	0.3 to 1.25 mm <sup>2</sup>

## 8. Test run

### 8.1. Before test run

- ▶ After completing installation and the wiring and piping of the indoor and outdoor units, check for refrigerant leakage, looseness in the power supply or control wiring, wrong polarity, and no disconnection of one phase in the supply.
- ▶ Use a 500-volt megohmmeter to check that the resistance between the power supply terminals and ground is at least 1.0 MΩ.

- ▶ Do not carry out this test on the control wiring (low voltage circuit) terminals.

⚠ **Warning:**

Do not use the air conditioner if the insulation resistance is less than 1.0 MΩ. Insulation resistance

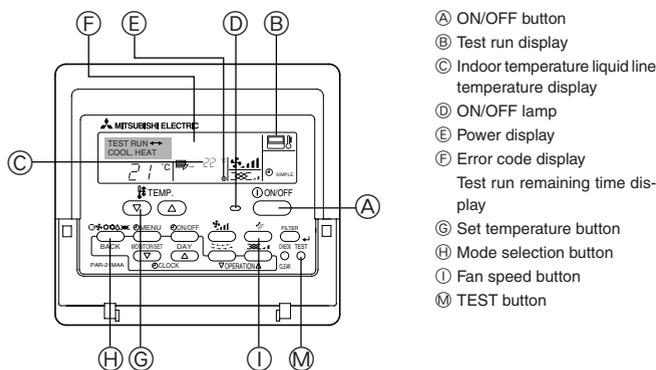


Fig. 8-1

### 8.2. Test run (Using wired remote controller) (Fig. 8-1)

- ① Turn on the power at least 12 hours before the test run.
- ② Press the [TEST] button twice. ⇒ "TEST RUN" liquid crystal display
- ③ Press the [Mode selection] button. ⇒ Make sure that wind is blown out.
- ④ Press the [Mode selection] button and switch to the cooling (or heating) mode. ⇒ Make sure that cold (or warm) wind is blown out.
- ⑤ Press the [Fan speed] button. ⇒ Make sure that the wind speed is switched.
- ⑥ Check operation of the outdoor unit fan.
- ⑦ Release test run by pressing the [ON/OFF] button. ⇒ Stop
- ⑧ Register a telephone number.

The telephone number of the repair shop, sales office, etc., to contact if an error occurs can be registered in the remote controller. The telephone number will be displayed when an error occurs. For registration procedures, refer to the operation manual for the indoor unit.

**Note:**

- If an error code is displayed on the remote controller or if the air conditioner does not operate properly, refer to the outdoor unit installation manual or other technical materials.
- The OFF timer is set for the test run to automatically stop after 2 hours.
- During the test run, the time remaining is shown in the time display.
- During the test run, the temperature of the indoor unit refrigerant pipes is shown in the room temperature display of the remote controller.
- When the VANE or LOUVER button is pressed, the message "NOT AVAILABLE" may appear on the remote controller display depending on the indoor unit model, but this is not a malfunction.
- For the PFFY-P-VKM series, the airflow direction displayed on the remote controller is different from the actual airflow direction. Refer to the following table.

Display	
Actual	

- The lower air outlet damper automatically opens and closes according to the piping temperature, intake air temperature, and operation time. The airflow direction cannot be set.

## 9. Air outlet selection


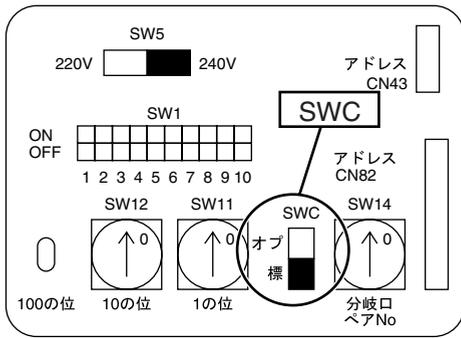


Fig. 9-1


With this function, air comes out simultaneously from the upper and lower air outlets so that the room can be cooled or heated effectively. This function is set using the switch SWC on the address board.

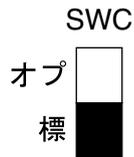

### How to set to blow out air from the upper and lower air outlets:

- ▶ Set the SWC to lower side ("標"). (Factory setting)

Air blows out automatically from the upper and lower air outlets as shown in the table below.

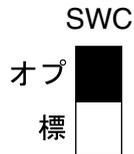

### How to set to blow out air from the upper air outlet only:

- ▶ Set the SWC to upper side ("オブ").

#### Note:

Be sure to operate with the main power turned off.

#### Description of operation

Operation	COOL		DRY	HEAT		FAN
Air flow	 Upper and lower air flow	 Upper air flow	 Upper air flow only	 Upper and lower air flow	 Upper air flow	 Upper and lower air flow
Conditions	Room temperature and set temperature are different.	Room temperature is close to set temperature or thermo-off.	—	(Normal condition (in heating))	During defrosting operation, start of operation, thermo-off	—

- Be sure to keep the area around the damper of the lower air outlet free of any objects.

This product is designed and intended for use in the residential,  
commercial and light-industrial environment.

The product at hand is based on the following EU regulations:

- Low Voltage Directive 73/23/ EEC
- Electromagnetic Compatibility Directive 89/336/ EEC

Please be sure to put the contact address/telephone number on  
this manual before handing it to the customer.