

# Air-Conditioners For Building Application INDOOR UNIT

**PEFY-P-VML-E****PDFY-P-VM-E****PEFY-P-VMM-E****PFFY-P-VLEM-E****PEFY-P-VMH-E****PFFY-P-VLRM-E****PLFY-P-VLMD-E**

## OPERATION MANUAL

For safe and correct use, please read this operation manual thoroughly before operating the air-conditioner unit.

## BEDIENUNGSHANDBUCH

Zum sicheren und einwandfreien Gebrauch der Klimaanlage dieses Bedienungshandbuch vor Inbetriebnahme gründlich durchlesen.

## MANUEL D'UTILISATION

Pour une utilisation correcte sans risques, veuillez lire le manuel d'utilisation en entier avant de vous servir du climatiseur.

## MANUAL DE INSTRUCCIONES

Lea este manual de instrucciones hasta el final antes de poner en marcha la unidad de aire acondicionado para garantizar un uso seguro y correcto.

## ISTRUZIONI DI FUNZIONAMENTO

Leggere attentamente questi istruzioni di funzionamento prima di avviare l'unità, per un uso corretto e sicuro della stessa.

## BEDIENINGSHANDLEIDING

Voor een veilig en juist gebruik moet u deze bedieningshandleiding grondig doorlezen voordat u de airconditioner gebruikt.

## MANUAL DE OPERAÇÃO

Para segurança e utilização correctas, leia atentamente o manual de operação antes de pôr a funcionar a unidade de ar condicionado.

## ΕΓΧΕΙΡΙΔΙΟ ΟΔΗΓΙΩΝ ΧΡΗΣΕΩΣ

Για ασφάλεια και σωστή χρήση, παρακαλείστε διαβάσετε προσεχτικά αυτό το εγχειρίδιο χρήσεως πριν θέσετε σε λειτουργία τη μονάδα κλιματισμού.

## РУКОВОДСТВО ПО ЭКСПЛУАТАЦИИ

Для обеспечения правильного и безопасного использования следует ознакомиться с инструкциями, указанными в данном руководстве по эксплуатации, тщательным образом до того, как приступить к использованию кондиционера.

## İŞLETME ELKİTABI

Emniyetli ve doğru biçimde nasıl kullanılacağını öğrenmek için lütfen klima cihazını işletmeden önce bu elkitabını dikkatle okuyunuz.

## 操作手册

为了确保安全和正确使用，请在使用空调器之前仔细阅读本操作手册。

## NÁVOD K OBSLUZE

Přečtěte si důkladně tento návod k obsluze před použitím klimatizační jednotky. Budete ji pak moci využívat bezpečně a správně.

## NÁVOD NA POUŽITIE

Skôr, než začnete používať klimatizačnú jednotku, prečítajte si dôkladne návod na použitie, aby ste jednotku používali bezpečne a správne.

## HASZNÁLATI KÉZIKÖNYV

A megfelelő és biztonságos használat érdekében, kérjük, hogy figyelmesen olvassa el a használati kézikönyvben leírtakat a légkondicionáló berendezés üzembe helyezése előtt.

## INSTRUKCJA OBSŁUGI

Przed rozpoczęciem użytkowania klimatyzatora dokładnie przeczytaj niniejszą instrukcję, w celu uzyskania informacji na temat bezpiecznego i prawidłowego korzystania z urządzenia.

GB

D

F

E

I

NL

P

GR

RU

TR

中

CZ


SV

HG

PO

**GB Remote controller-Button**  
**D Fernbedienungs-Taste**  
**F Touche Commande à distance**

**I Botone dell'unità del comando a distanza**  
**E Controlador remoto-Botón**  
**NL Knop afstandbediening**  
**P Botão do controlo remoto**

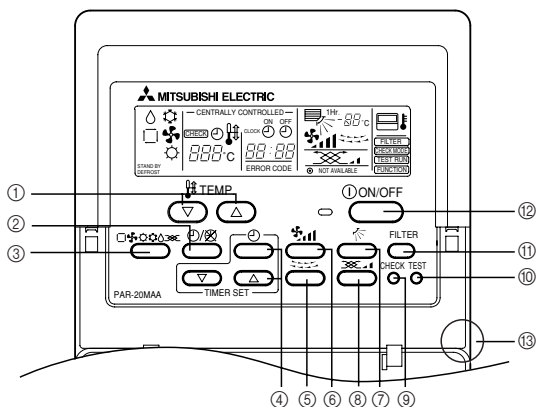

- ① [Room temperature adjustment] Button
  - ② [Timer/continuous] Button
  - ③ [Selecting operation] Button
  - ④ [Time selection] Button  
[Time-setting] Button
  - ⑤ [Louver] Button
  - ⑥ [Fan speed adjustment] Button
  - ⑦ [Up/down airflow direction] Button
  - ⑧ [Ventilation] Button
  - ⑨ [Checking/built-in] Button
  - ⑩ [Test run] Button
  - ⑪ [Filter] Button
  - ⑫ [ON/OFF] Button
  - ⑬ Position of built-in room temperature
- Never expose the remote controller to direct sunlight. Doing so can result in the erroneous measurement of room temperature.
  - Never place any obstacle around the lower right-hand section of the remote controller. Doing so can result in the erroneous measurement of room temperature.

- ① Raumtemperatur-Tasten
  - ② Zeitschalter-/Dauerbetrieb-Taste
  - ③ Betriebsart-Taste
  - ④ Zeitemenschalt-Taste  
Zeiteinstell-Tasten
  - ⑤ Klappen-Taste
  - ⑥ Luftstromgeschwindigkeit-Taste
  - ⑦ Vertikale Luftstromrichtung-Tasten
  - ⑧ Belüftung-Tasten
  - ⑨ Überprüfen/Eingebauten-Tasten
  - ⑩ Testlauf-Tasten
  - ⑪ Filter-Taste
  - ⑫ Betrieb-/Stop-Taste
  - ⑬ Position der eingebauten Raumtemperatur
- Die Fernbedienung nicht direkter Sonneneinstrahlung aussetzen. Die Raumtemperatur wird sonst nicht korrekt gemessen.
  - Den rechten unteren Teil der Fernbedienung nicht blockieren. Die Raumtemperatur wird sonst nicht korrekt gemessen.

- ① Touche de [réglage de la température de la pièce]
  - ② Touche de [fonctionnement continu/minuterie]
  - ③ Touche de [sélection du mode de fonctionnement]
  - ④ Touche de [sélection de l'heure]  
Touche de [réglage de l'heure]
  - ⑤ Touche de [pivotement]
  - ⑥ Touche de [réglage de la vitesse du ventilateur]
  - ⑦ Touche de [sens de la soufflerie vers le haut/vers le bas]
  - ⑧ Touche [Ventilation]
  - ⑨ Touche [Vérification/Intégré]
  - ⑩ Touche [Essai de fonctionnement]
  - ⑪ Touche de [filtre]
  - ⑫ Touche [ON/OFF]
  - ⑬ Position du capteur intégré de la température de la pièce
- Ne jamais laisser la commande à distance en plein soleil sinon les données de température ambiante risquent d'être erronées.
  - Ne jamais placer d'obstacle devant la partie inférieure droite de la commande à distance sinon la lecture des températures ne sera pas correcte.

- ① Pulsante [Regolazione della temperatura ambiente]
  - ② Pulsante [Timer/continuo]
  - ③ Pulsante [Selezione modalità di funzionamento]
  - ④ Pulsante [Selezione ora]  
Pulsante [Impostazione dell'ora]
  - ⑤ Pulsante [Regolazione deflettore]
  - ⑥ Pulsante [Regolazione della velocità di ventilazione]
  - ⑦ Pulsante [Regolazione della direzione di soffiaggio verso l'alto/il basso]
  - ⑧ Pulsante [Ventilazione]
  - ⑨ Pulsante [Controllo/Incorporata]
  - ⑩ Pulsante [Prova di funzionamento]
  - ⑪ Pulsante [Filtro]
  - ⑫ Pulsante [ACCENSIONE/SPEGNIMENTO]
  - ⑬ Posizione temperatura ambiente incorporata
- Non esporre mai il comando a distanza alla luce diretta del sole, in quanto questo può alterare la corretta rilevazione della temperatura ambiente.
  - Non porre alcun ostacolo attorno alla sezione inferiore destra del comando a distanza, in quanto questo può alterare la corretta rilevazione della temperatura ambiente.

- ① Botón [Ajuste de la temperatura de la habitación]
  - ② Botón [Temporizador/continuo]
  - ③ Botón [Selección del modo de funcionamiento]
  - ④ Botón [Selección de la hora]  
Botón [Determinación de la hora]
  - ⑤ Botón [Persiana]
  - ⑥ Botón [Ajuste de la velocidad del ventilador]
  - ⑦ Botón [Dirección de la corriente ascendente/descendente de aire]
  - ⑧ Botón [Ventilación]
  - ⑨ Botón [Comprobación/Incorporada]
  - ⑩ Botón [Prueba de funcionamiento]
  - ⑪ Botón [Filtro]
  - ⑫ Botón [ON/OFF]
  - ⑬ Posición de temperatura ambiente incorporada
- Nunca exponga el mando a distancia a la luz directa del sol. Si lo hace, se producirá una lectura errónea de la temperatura de la habitación.
  - Nunca ponga ningún obstáculo alrededor de la sección inferior derecha del mando a distancia. Si lo hace, se producirá una lectura errónea de la temperatura de la habitación.

- ① [Aanpassen kamertemperatuur] Knop
  - ② [Timer/continu] Knop
  - ③ [Standselectie] Knop
  - ④ [Tijdselectie] Knop  
[Tijdstellings] Knop
  - ⑤ [Ventilatie-jaloezie] Knop
  - ⑥ [Aanpassen van de ventilatorsnelheid] Knop
  - ⑦ [Blaasrichting naar boven/ naar beneden] Knop
  - ⑧ Knop [Ventilatie]
  - ⑨ Knop [Controle/Ingebouwd]
  - ⑩ Knop [Proefdraaien]
  - ⑪ [Filter] Knop
  - ⑫ [ON/OFF (AAN/UIT)] Knop
  - ⑬ Plaats van ingebouwde kamertemperatuursensor
- Laat de afstandsbediening nooit in direct zonlicht liggen. Als u dit toch doet kan het zijn dat de kamertemperatuur onjuist gemeten wordt.
  - Zet of hang nooit iets in de buurt van het gedeelte rechtsonder op de afstandsbediening. Als u dit toch doet kan het zijn dat de kamertemperatuur onjuist gemeten wordt.

- ① Tecla de [regulação da temperatura da peça]
  - ② Tecla de [temporização/contínuo]
  - ③ Tecla de [selecção de funcionamento]
  - ④ Tecla de [selecção da hora]  
Tecla de [programação da hora]
  - ⑤ Tecla [Veneziana]
  - ⑥ Tecla de [regulação da velocidade da ventoinha]
  - ⑦ Tecla de [direção do fluxo de ar para cima/para baixo]
  - ⑧ Botão [Ventilação]
  - ⑨ Botão [Verificação/Incorporada]
  - ⑩ Botão [Teste de funcionamento]
  - ⑪ Tecla [filtro]
  - ⑫ Tecla [ON/OFF] (Ligar/Desligar)
  - ⑬ Posição da temperatura ambiente incorporada
- Nunca exponha o controlo remoto à luz directa do sol, porque pode dar-lhe valores de temperatura da peça anormais.
  - Nunca coloque nenhum obstáculo em volta da secção inferior direita do controlo remoto, pois isso pode dar-lhe valores de temperatura da peça anormais.

- ① Κουμπί [Ρύθμισης θερμοκρασίας δωματίου]
  - ② Κουμπί [Χρονόμετρο/συνεχής]      ③ Κουμπί [Εκλογής λειτουργίας]
  - ④ Κουμπί [Εκλογής χρόνου]  
Κουμπί [Ρύθμισης ώρας]
  - ⑤ Κουμπί [γρίλλιας]
  - ⑥ Κουμπί [Ρύθμισης ταχύτητας ανεμιστήρα]
  - ⑦ Κουμπί [Πάνω/κάτω κατεύθυνσης ροής αέρα]
  - ⑧ Κουμπί [Εξαερισμού]      ⑨ Κουμπί [Ελέγχου/ενσωματωμένου]
  - ⑩ Κουμπί [Δοκιμαστικής λειτουργίας]      ⑪ Κουμπί [φίλτρου]
  - ⑫ Κουμπί [ON/OFF]
  - ⑬ Θέση του ενσωματωμένου θερμομέτρου δωματίου
- Μην εκτίθετε ποτέ το χειριστήριο εξ αποστάσεως στο ηλιακό φώς. Αυτό μπορεί να έχει σαν αποτέλεσμα λανθασμένες μετρήσεις της θερμοκρασίας δωματίου.
  - Μην τοποθετείτε ποτέ εμπόδια γύρω από το κάτω δεξιό τμήμα το χειριστήριο εξ αποστάσεως. Αυτό μπορεί να έχει σαν αποτέλεσμα λανθασμένες μετρήσεις της θερμοκρασίας δωματίου.

- ① Кнопка [Регулирование температуры в помещении]
  - ② Кнопка [Таймер/постоянно]      ③ Кнопка [Выбор операции]
  - ④ Кнопка [Выбор времени]  
Кнопка [Настройка времени]
  - ⑤ Кнопка [жалюзи]
  - ⑥ Кнопка [Регулировки скорости вентилятора]
  - ⑦ Кнопка [Направления потока воздуха вверх/вниз]
  - ⑧ Кнопка [Вентиляция]      ⑨ Кнопка [Проверка/встроенного датчика]
  - ⑩ Кнопка [Тестовый прогон]      ⑪ Кнопка [Фильтр]
  - ⑫ Кнопка [ВКЛ./ВЫКЛ.]
  - ⑬ Позиция встроенного датчика температуры помещения
- Никогда не подвергайте пульт дистанционного управления воздействию прямых солнечных лучей. Это может привести к неправильным замерениям температуры в помещении.
  - Никогда не помещайте какое-либо препятствие перед нижней правой секцией пульта дистанционного управления. Это может привести к неправильному замерению температуры в помещении.

- ① [Oda Sıcaklığı Ayarı] Düğmesi
  - ② [Saatli/Sürekli Çalışma] Düğmesi      ③ [Program Seçme] Düğmesi
  - ④ [Saat Seçme] Düğmesi  
[Saat Ayarı] Düğmesi
  - ⑤ [Pancur] Düğmesi
  - ⑥ [Ventilatör Hızı Ayarlamak] Düğmesi
  - ⑦ [Hava Akımını Aşağı/Yukarı Yönlendirme] Düğmesi
  - ⑧ [Havalandırma] Düğme      ⑨ [Kontrol/Entegre] Düğme
  - ⑩ [Deneme Çalıştırması] Düğme      ⑪ [Filtre] Düğmesi
  - ⑫ [Açma/Kapama] Düğmesi
  - ⑬ Entegre oda sıcaklığı konumu
- Uzaktan Kumanda Ünitesini güneş ışığına maruz bırakmayın. Aksi takdirde oda sıcaklığının yanlış ölçülmesine neden olabilirsiniz.
  - Uzaktan Kumanda Ünitesinin sağ alt köşesinin önünü hiçbir şekilde kapatmayın. Aksi takdirde oda sıcaklığının yanlış ölçülmesine neden olabilirsiniz.

- ① [调节室温]按钮
  - ② [定时器/连续]按钮
  - ③ [运行模式选择]按钮
  - ④ [选择时间]按钮  
[时间设定]按钮
  - ⑤ [风门片]按钮
  - ⑥ [风扇速度调节]按钮
  - ⑦ [上/下风向]按钮
  - ⑧ [通风]按钮
  - ⑨ [检查/内置]按钮
  - ⑩ [试运行]按钮
  - ⑪ [滤网]按钮
  - ⑫ [开/关]按钮
  - ⑬ 内置室温位置
- 切勿将遥控器暴露在直射阳光下，否则可能会引起室温测量误差。
  - 切勿在遥控器右下方放置任何障碍物，否则可能会引起室温测量误差。

- ① Tlačítko [Úpravy pokojové teploty]
  - ② Tlačítko [Časovač/nepřetržitě]      ③ Tlačítko [Výběru provozního režimu]
  - ④ Tlačítko [Výběru času]  
Tlačítko [Nastavení času]
  - ⑤ Tlačítko [Žaluziový větrák]
  - ⑥ Tlačítko [Nastavení rychlosti větráku]
  - ⑦ Tlačítko [Směru proudění vzduchu nahoru/dolů]
  - ⑧ Tlačítko [Větrání]      ⑨ Tlačítko [Kontrola/vestavěné]
  - ⑩ Tlačítko [Testovací provoz]      ⑪ Tlačítko [Filtr]
  - ⑫ Tlačítko [ZAPNUTO/VYPNUTO]
  - ⑬ Umístění vestavěného snímače pokojové teploty
- Nikdy dálkové ovládání nevystavujte přímému slunečnímu svitu. Mohlo by to způsobit chybné naměření pokojové teploty.
  - Neumísťujte kolem pravé spodní části dálkového ovládání žádné překážky. Mohlo by to způsobit chybné naměření pokojové teploty.


- ① Tlačidlo [Nastavenie teploty v miestnosti]
  - ② Tlačidlo [Časovač/nepretržitý]      ③ Tlačidlo [Voľba činnosti]
  - ④ Tlačidlo [Voľba času]  
Tlačidlo [Nastavenie času]
  - ⑤ Tlačidlo [Žalúziiový vetrák]
  - ⑥ Tlačidlo [Nastavenie rýchlosti ventilátora]
  - ⑦ Tlačidlo [Smer prúdu vzduchu nahor/nadol]
  - ⑧ Tlačidlo [Ventilácia]      ⑨ Tlačidlo [Kontrola/zabudované]
  - ⑩ Tlačidlo [Testovací chod]      ⑪ Tlačidlo [Filter]
  - ⑫ Vypínač [ON/OFF]
  - ⑬ Poloha zabudovaného snímača izbovej teploty
- Diaľkový ovládač nikdy nevystavujte priamemu slnečnému žiareniu. V opačnom prípade bude chybné nameraná teplota v miestnosti.
  - Okolo pravej spodnej časti diaľkového ovládača nikdy nestavajte žiadne prekážky. V opačnom prípade bude chybné nameraná teplota v miestnosti.

- ① [Helyiség hőmérséklet beállítás] Nyomógomb
  - ② [Timer/folyamatos] Nyomógomb      ③ [Művelet kiválasztása] Nyomógomb
  - ④ [Idő kiválasztása] Nyomógomb  
[Idő beállítás] Nyomógomb
  - ⑤ [Szellőzőzsalu] Nyomógomb
  - ⑥ [Ventilátor sebesség beállítás] Nyomógomb
  - ⑦ [Levegőáramlás fel/le irány] Nyomógomb
  - ⑧ [Szellőztetés] Nyomógomb      ⑨ [Ellenőrzés/beépített] Nyomógomb
  - ⑩ [Próbaüzem] Nyomógomb      ⑪ [Szűrő] Nyomógomb
  - ⑫ [BE/KI] Nyomógomb
  - ⑬ Beépített helyiség hőmérséklet pozíciója
- A távirányítót ne tegye ki közvetlen napfénynek, mert az a helyiség hőmérsékletének hibás mérését eredményezheti.
  - Ne helyezzen akadályt a távirányító jobb oldali alsó részének környékére, mert az a helyiség hőmérsékletének hibás mérését eredményezheti.

- ① Przycisk [Regulacja temperatury pomieszczenia]
  - ② Przycisk [Programator/praca ciągła]      ③ Przycisk [Wybór trybu pracy]
  - ④ Przycisk [Ustawianie zegara]  
Przycisk [Ustawianie programatora]
  - ⑤ Przycisk [Zaluzje]
  - ⑥ Przycisk [Regulacja prędkości wentylatora]
  - ⑦ Przycisk [Kierunek strumienia powietrza góra/dół]
  - ⑧ Przycisk [Wentylacja]      ⑨ Przycisk [Sprawdzenie/wbudowany]
  - ⑩ Przycisk [Próba działania]      ⑪ Przycisk [Filtr]
  - ⑫ Przycisk [WŁ/WYŁ]
  - ⑬ Położenie wbudowanego czujnika temperatury pomieszczenia
- Nie wystawiaj pilota na bezpośrednie działanie promieni słonecznych. Może to spowodować nieprawidłowy pomiar temperatury pomieszczenia.
  - Nie zasłaniaj dolnej części pilota po prawej stronie. Może to spowodować nieprawidłowy pomiar temperatury pomieszczenia.

(GB) Remote controller-Display  
 (D) Fernbedienung-Anzeige  
 (F) Affichage Commande à distance

(I) Display dell'unità del comando a distanza  
 (E) Controlador remoto-Indicador  
 (NL) Display afstandbediening  
 (P) Visualização do controlo remoto

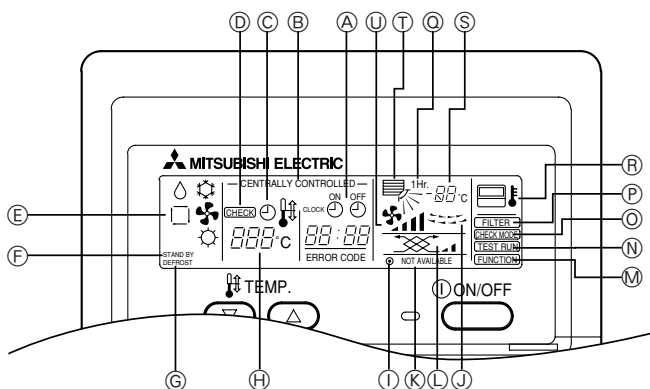

- (A) Current time/Timer
- (B) Centralized control
- (C) Timer ON
- (D) Abnormality occurs
- (E) Operation mode: COOL, DRY, AUTO, FAN, HEAT
- (F) Preparing for Heating mode
- (G) Defrost mode
- (H) Set temperature
- (J) Louver
- (L) Ventilation
- (N) Test run mode
- (P) Filter sign
- (R) Sensor position
- (T) Airflow
- (I) Power ON
- (K) Not available function
- (M) Function setting mode
- (O) Error check mode
- (Q) Set effective for 1 hr.
- (S) Room temperature
- (U) Fan speed

- (A) Aktuelle Zeit/Timer (Zeitschalter)
- (B) Anzeige für Zentralsteuerung
- (C) Zeitschalter/Timer ON/EIN
- (D) Auftretende Abnormalität
- (E) Betriebsart: KÜHLEN, LUFTTROCKNEN, AUTO, GEBLÄSE, HEIZEN
- (F) Vorbereitung zur Betriebsart Heizen
- (G) Betriebsart Enteisen
- (H) Eingestellten Temperatur
- (J) Luftklappe
- (L) Ventilation
- (N) Betriebsart Testlauf
- (P) Filterzeichen
- (R) Fühlerposition
- (T) Luftstrom
- (I) Netz ON/EIN
- (K) Funktion nicht verfügbar
- (M) Betriebsart Funktion einstellen
- (O) Betriebsart Fehlerprüfung
- (Q) 1 Stunde wirksame Einstellung
- (S) Raumtemperatur
- (U) Luftstromgeschwindigkeit

- (A) Heure/Programmeur
- (B) Contrôle centralisé
- (C) Programmeur activé (ON)
- (D) En cas d'anomalie
- (E) Mode de fonctionnement: REFROIDISSEMENT, DESHUMIDIFICATION, AUTOMATIQUE, SOUFFLERIE, CHAUFFAGE
- (F) Préparation pour le mode chauffage
- (G) Mode dégivrage
- (H) Réglage de la température
- (J) Lucarne
- (L) Ventilation
- (N) Mode d'essai de fonctionnement
- (P) Signe du filtre
- (R) Position du capteur
- (T) Flux d'air
- (I) Mise sous tension (ON)
- (K) Fonction non disponible
- (M) Mode de réglage du fonctionnement
- (O) Mode de vérification des erreurs
- (Q) Réglage après une heure
- (S) Température de la pièce
- (U) Vitesse du ventilateur

- (A) Ora corrente/Timer
- (B) Comando centralizzato
- (C) Timer attivato
- (D) Si verifica un'anomalia
- (E) Modo funzionamento: COOL, DRY, AUTO, FAN, HEAT
- (F) Preparazione della modalità di riscaldamento
- (G) Modalità di sbrinatorio
- (H) Impostazione temperatura
- (I) Alimentazione attivata
- (J) Deflettore
- (K) Funzione non disponibile
- (L) Ventilazione
- (M) Modalità impostazione funzione
- (N) Modalità di prova di funzionamento
- (O) Modalità di controllo errore
- (P) Simbolo del filtro
- (R) Posizione del sensore
- (S) Temperature ambiente
- (T) Fluo de aire
- (U) Velocità di ventilazione

- (A) Hora actual/Temporizador
- (B) Control centralizado
- (C) Temporizador en ON
- (D) Se producen anomalías
- (E) Modo de funcionamiento: REFRIGERACIÓN, DESHUMIDIFICACIÓN, MODO AUTOMÁTICO, VENTILADOR, CALEFACCIÓN
- (F) Preparación para el modo Calefacción
- (G) Modo Descongelación
- (H) Temperatura programada
- (I) Activado
- (J) Rejilla
- (K) Función no disponible
- (L) Ventilación
- (M) Modo de configuración de funciones
- (N) Modo de prueba de funcionamiento
- (O) Modo de comprobación de errores
- (P) Señal del filtro
- (R) Posición del sensor
- (S) Temperatura ambiente
- (T) Flusso d'aria
- (U) Velocidad del ventilador

- (A) Huidige tijd/Timer
- (B) Centraal regelen
- (C) Timer AAN
- (D) Storing treedt op
- (E) Werkingsstand: KOELEN, DROGEN, AUTO, VENTILATOR, VERWARMEN
- (F) Bezig voor te bereiden op verwarmingsmodus
- (G) Ontdooimodus
- (H) Instellen temperatuur
- (I) Voeding AAN
- (J) Jalouzie
- (K) Niet-beschikbare functie
- (L) Ventilieren
- (M) Functie-instellingsmodus
- (N) Proefdraaimodus
- (O) Foutcontrolemodus
- (P) Filterteken
- (R) Plaats van sensor
- (S) Kamertemperatuur
- (T) Luchtstroom
- (U) Ventilatorsnelheid

- (A) Hora actual/Temporizador
- (B) Controlo centralizado
- (C) Temporizador ON (Ligado)
- (D) Ocorre uma anomalia
- (E) Modo de funcionamento: ARREFECIMENTO, DESCONGELAÇÃO, AUTO, VENTONHA, QUENTE
- (F) Preparar para o modo de Aquecimento
- (G) Modo de Descongelação
- (H) Temperatura programada
- (I) Corrente ON (Ligada)
- (J) Louver
- (K) Função não disponível
- (L) Ventilação
- (M) Modo de programação de Função
- (N) Modo de teste de funcionamento
- (O) Modo de verificação de erro
- (P) Sinal do filtro
- (R) Posição do sensor
- (S) Temperatura ambiente
- (T) Fluxo de Ar
- (U) Velocidade da ventoinha

**GR Τηλεχειριστήριο-Επίδειξη**  
**RU Дисплей контроллера ДУ**  
**TR Uzaktan Kumanda ünitesi-Göstergesi**  
**中 遥控器-显示部分**

- A Τρέχουσα ώρα/Χρονοδιακόπτης  
 B Κεντρικού ελέγχου  
 C Χρονοδιακόπτης ON  
 D Παρουσιάζεται ανωμαλία  
 E Φάση λειτουργίας: ΨΥΞΗ, Δ ΑΦΥΓΡΑΝΣΗ, □ ΑΥΤΟΜΑΤΗ ΛΕΙΤΟΥΡΓΙΑ, ANEMISΤΗΡΑΣ, ΘΕΡΜΑΝΣΗ  
 F Προετοιμασία για τη λειτουργία θέρμανσης  
 G Λειτουργία απόψυξης H Ρύθμιση θερμοκρασίας  
 I Λειτουργία ON J Γρίλιες  
 K Μη διαθέσιμη λειτουργία L Εξαερισμού  
 M Ρύθμιση λειτουργίας N Κατάσταση δοκιμαστικής λειτουργίας  
 O Κατάσταση ελέγχου σφαλμάτων P Σήμα φίλτρου  
 Q Ρύθμιση ισχύει για μία ώρα R Θέση αισθητήρα  
 S Θερμοκρασία δωματίου T Ροή αέρα  
 U Ταχύτητα ανεμιστήρα

- A Текущее время/Таймер  
 B Централизованного контроля  
 C Таймер ВКЛ. (ON)  
 D В случае неполадки  
 E Режим эксплуатации: ОХЛАЖДЕНИЕ, Δ СУШКА, □ АВТО, ВЕНТИЛЯТОР, ОБОГРЕВ  
 F Подготовка к режиму обогрева G Режим размораживания  
 H Выбора температуры I Питание ВКЛ. (ON)  
 J Заслонка K Функция недоступна  
 L Вентиляции M Режим установки функции  
 N Режим тестового прогона O Режим проверки ошибки  
 P Символ фильтра Q Задействован в течение одного часа  
 R Позиция датчика S Температура в помещении  
 T Воздушный поток U Скорости вентилятора

- A Mevcut saat/Zamanlayıcı  
 B Merkezi Kontrol Altında  
 C Zamanlayıcı AÇIK  
 D Anormal durum oluştu.  
 E Programlama modu: SOĞUTMA, Δ KURUTMA, □ OTOMATİK, FAN, ISITMA  
 F Isıtma moduna hazırlık G Buz giderme modu  
 H İstenilen Sıcaklık I Elektrik AÇIK  
 J Pancur K Kullanılmayan fonksiyon  
 L Havalandırma M Fonksiyon ayarlama modu  
 N Deneme çalıştırması modu O Hata kontrol modu  
 P Filtre işareti Q Bir Saat Boyunca Etkin Kılma  
 R Sensör konumu S Oda sıcaklığı  
 T Hava Akımı U Vanilatör Hızı

- A 当前时间/定时器  
 B 中央控制  
 C 定时器接通  
 D 出现异常  
 E 运行模式: COOL (冷气), Δ DRY (电子除湿), □ AUTO (自动), FAN (风扇), HEAT (暖气)  
 F 暖气模式准备中 G 除霜模式  
 H 设定温度 I 电源接通  
 J 叶栅 K 无此功能  
 L 通风 M 功能设定模式  
 N 试运行模式 O 错误检查模式  
 P 滤网符号 Q 1小时有效设定  
 R 传感器位置 S 室温  
 T 气流 U 风扇速度

**CZ Displej dálkového ovládání**  
**SV Displej diaľkového ovládača**  
**HG Távirányító - Kijelző**  
**PO Wyświetlacz pilota**

- A Aktuální čas/časovač  
 B Centrální ovládání  
 C Časovač zapnutý  
 D Objevila se odchylka  
 E Provozní režim: CHLADIT, Δ VYSOUŠET, □ AUTO, VĚTRÁK, VYHŘÍVAT  
 F Příprava na vyhřívací režim G Rozmrazovací režim  
 H Nastavení teploty I Napájení (ZAPNUTO)  
 J Žaluziový větrák K Funkce není dostupná  
 L Větrání M Režim nastavení funkce  
 N Režim testovacího provozu O Režim kontroly chyby  
 P Značka filtru Q Nastavit účinnost na 1 hod.  
 R Poloha snímače S Pokojová teplota  
 T Proudění vzduchu U Rychlost větráku



- A Aktuálny čas/Časovač  
 B Centrálné ovládanie  
 C Časovač zapnutý  
 D Výskyt abnormality  
 E Režim činnosti: CHLADENIE, Δ SUCHÝ, □ AUTOMATICKÝ, VENTILÁTOR, OHRIEVANIE  
 F Príprava na režim Ohrievanie G Režim Rozmrazovanie  
 H Nastavenie teploty I Napájanie (ZAPNUTÉ)  
 J Žalúziový vetrák K Funkcia nie je dostupná.  
 L Ventilácia M Režim nastavenia funkcie  
 N Režim Testovací chod O Režim kontroly chýb  
 P Znak filtra Q Nastaviť účinnosť na 1 hodinu.  
 R Poloha snímača S Teplota v miestnosti  
 T Prúd vzduchu U Rýchlosť ventilátora

- A Pontos idő / Timer  
 B Központi vezérlés  
 C Timer BE kapcsolva  
 D Hiba történt  
 E Üzem mód: HŰTÉS, Δ SZÁRÍTÁS, □ AUTOMATA, VENTILÁTOR, FŰTÉS  
 F Fűtés üzemmód előkészítése G Párátlanítás üzemmód  
 H Hőmérséklet beállítás I Áramellátás BE kapcsolva  
 J Szellőzőzsala K Nem elérhető funkció  
 L Szellőztetés M Funkció-beállítás üzemmód  
 N Próbaüzem üzemmód O Hibakeresés üzemmód  
 P Szűrő jelzés Q Beállítás 1 órára  
 R Érzékelő pozíciója S Helyiség hőmérséklet  
 T Levegőáramlás U Ventilátor sebesség



- A Aktualna godzina/Programator  
 B Sterowanie centralne  
 C Programator WŁ  
 D Nieprawidłowe działanie  
 E Tryb pracy: CHŁODZENIE, Δ OSUSZANIE, □ AUTOMATYCZNY, WENTYLATOR, NAGRZEWANIE  
 F Przygotowanie do pracy w trybie nagrzewania  
 G Tryb odszraniania H Ustawiona temperatura  
 I Zasilanie WŁ J Żaluzje  
 K Funkcja niedostępna L Wentylacja  
 M Tryb wyboru funkcji N Tryb próbny  
 O Tryb kontroli błędów P Wskaźnik filtra  
 Q Działanie przez 1 godz. R Położenie czujnika  
 S Temperatura pomieszczenia T Strumień powietrza  
 U Prędkość wentylatora

[Fig. A]


<PLFY-P20~100VLM-D-E>

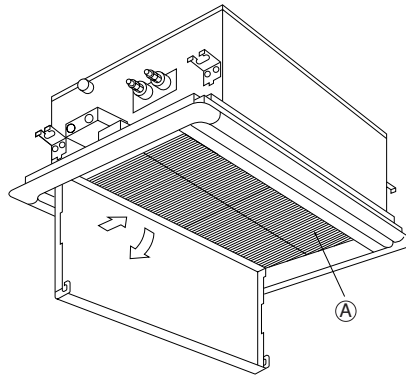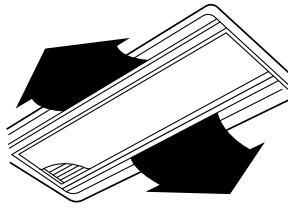



<PLFY-P125VLM-D-E>

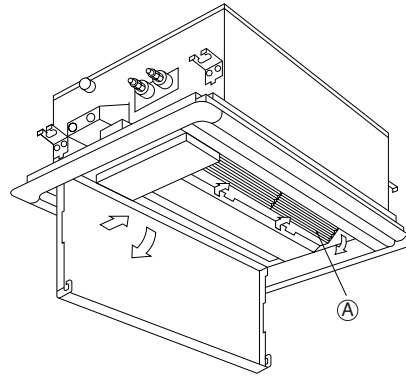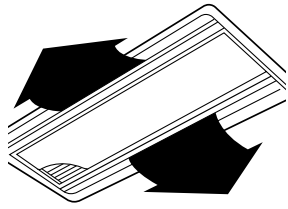


<PDFY-P-VM-E>

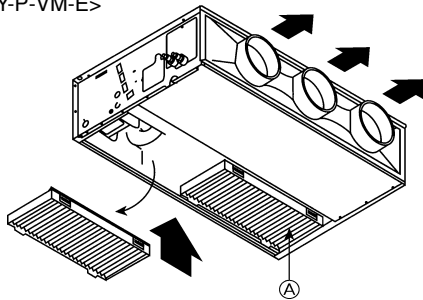

<PEFY-P-VMM-E>

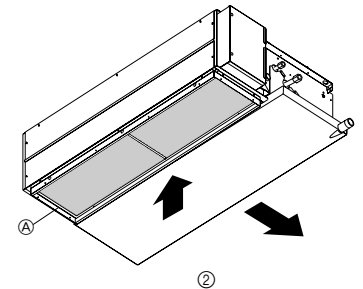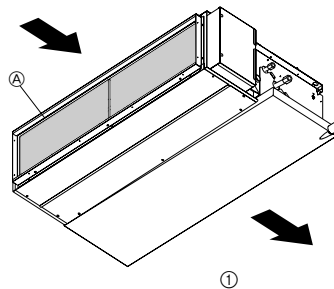


<PEFY-P-VML-E>

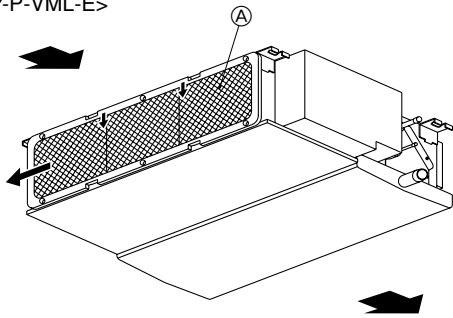


①: In case of rear inlet  
Bei Einlass von hinten  
En cas d'entrée arrière  
En el caso de unidad interior trasera  
In caso di ingresso dell'aria dalla parte posteriore  
Bij een achterinlaat  
No caso de unidade interior traseira  
Σε περίπτωση πίσω εισαγωγής  
При воздухозаборнике сзади  
Arka giriş durumunda  
使用后侧出风口时  
V případě zadního přívodu  
V prípade zadného prívodu  
Hátsó beszívás esetén  
Wlot z tyłu

②: In case of bottom inlet  
Bei Einlass von unten  
En cas d'entrée sur le dessous  
En el caso de unidad interior inferior  
In caso di ingresso dell'aria dalla parte inferiore  
Bij een onderinlaat  
No caso de unidade interior inferior  
Σε περίπτωση κάτω εισαγωγής  
При воздухозаборнике внизу  
Alt giriş durumunda  
使用底部出风口时  
V případě spodního přívodu  
V prípade spodného prívodu  
Alsó beszívás esetén  
Wlot od spodu

<PEFY-P-VMH-E>

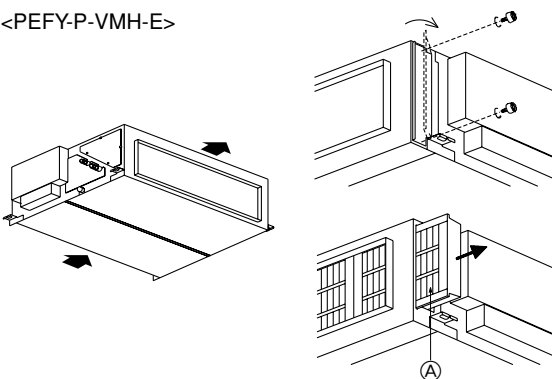

<PFFY-P-VLEM-E, VLRM-E>

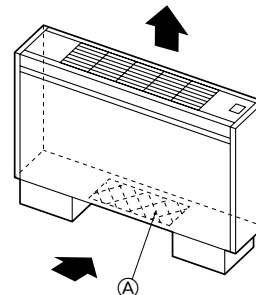

(A): Filter  
Filter  
Filtre  
Filtro  
Filtro  
Filter  
Filtro  
Фильтр  
Фильтр  
Filtre  
滤网  
Filtr  
Filter  
Szűrő  
Filtr

➔: Air Flow  
Luftstrom  
Flux d'air  
Flujo de aire  
Flusso d'aria  
Luchtstroom  
Fluxo de Ar  
Ροή αέρα  
Воздушный поток  
Hava Akımı  
气流  
Proudění vzduchu  
Prúd vzduchu  
Levegőáramlás  
Strumień powietrza


# Contents


|   |   |   |    |
|---|---|---|----|
| 1. Safety precautions .....                   | 7 | 3.5. Adjustment of up/down airflow direction .....      | 9  |
| 1.1. Installation .....                       | 7 | 3.6. Time setting .....                                 | 9  |
| 1.2. During operation .....                   | 7 | 3.7. Timer setting .....                                | 10 |
| 1.3. Disposing of the unit .....              | 8 | 3.8. Ventilation .....                                  | 10 |
| 2. Names and functions of various parts ..... | 8 | 3.9. Others .....                                       | 10 |
| 3. How to operate .....                       | 8 | 4. The smart way to use .....                           | 10 |
| 3.1. ON/OFF .....                             | 8 | 5. Caring for the machine .....                         | 11 |
| 3.2. Selecting operation .....                | 8 | 6. Troubleshooting .....                                | 11 |
| 3.3. Room temperature adjustment .....        | 9 | 7. Installation, transferring works, and checking ..... | 12 |
| 3.4. Fan speed adjustment .....               | 9 | 8. Specifications .....                                 | 12 |

## 1. Safety precautions






- ▶ Before operating the unit, make sure you read all the “Safety precautions”.
- ▶ “Safety precautions” lists important points about safety. Please be sure to follow them.

### Symbols used in the text

 **Warning:**  
Describes precautions that should be observed to avoid the risk of injury or death to the user.

 **Caution:**  
Describes precautions that should be observed to prevent damage to the unit.


### Symbols used in the illustrations

-  : Indicates an action that must be avoided.
-  : Indicates that important instructions must be followed.
-  : Indicates a part which must be grounded.
-  : Indicates that caution should be taken with rotating parts. (This symbol is displayed on the main unit label.) <Color: yellow>
-  : Beware of electric shock. (This symbol is displayed on the main unit label.) <Color: yellow>


-  **Warning:**  
Carefully read the labels affixed to the main unit.


### 1.1. Installation

- ▶ After you have read this manual, keep it and the Installation Manual in a safe place for easy reference whenever a question arises. If the unit is going to be operated by another person, make sure that this manual is given to him or her.

-  **Warning:**
  - The unit should not be installed by the user. Ask the dealer or an authorized company to install the unit. If the unit is installed improperly, water leakage, electric shock or fire may result.
  - Use only accessories authorized by Mitsubishi Electric and ask your dealer or an authorized company to install them. If accessories are installed improperly, water leakage, electric shock or fire may result.
  - The Installation Manual details the suggested installation method. Any structural alteration necessary for installation must comply with local building code requirements.
  - Never repair the unit or transfer it to another site by yourself. If repair is performed improperly, water leakage, electric shock or fire may result. If you need to have the unit repaired or moved, consult your dealer.
  - Keep the electric parts away from water (washing water) etc.
  - It might result in electric shock, catching fire or smoke.  
Note1: When washing the Heat Exchanger and Drain Pan, ensure the Control Box, Motor and LEV remain dry, using a water proof covering.  
Note2: Never drain the washing water for the Drain Pan and the Heat Exchanger using the Drain Pump. Drain separately.
  - The appliance is not intended for use by young children or infirm persons without supervision.
  - Young children should be supervised to ensure that they do not play with the appliance.
  - Do not use a leak detection additive.

#### 1) Outdoor unit


-  **Warning:**
  - The outdoor unit must be installed on a stable, level surface, in a place where there is no accumulation of snow, leaves or rubbish.
  - Do not stand on, or place any items on the unit. You may fall down or the item may fall, causing injury.

-  **Caution:**  
The outdoor unit should be installed in a location where air and noise emitted by the unit will not disturb the neighbours.


#### 2) Indoor unit

-  **Warning:**  
The indoor unit should be securely installed. If the unit is loosely mounted, it may fall, causing injury.


#### 3) Remote controller

-  **Warning:**  
The remote controller should be installed in such a way that children cannot play with it.


#### 4) Drain hose

-  **Caution:**  
Make sure that the drain hose is installed so that drainage can go ahead smoothly. Incorrect installation may result in water leakage, causing damage to furniture.


#### 5) Power line, fuse or circuit breaker


-  **Warning:**
  - Make sure that the unit is powered by a dedicated supply. Other appliances connected to the same supply could cause an overload.
  - Make sure that there is a main power switch.
  - Be sure to adhere to the unit's voltage and fuse or circuit breaker ratings. Never use a piece of wire or a fuse with a higher rating than the one specified.

#### 6) Grounding

-  **Caution:**
  - The unit must be properly grounded. Never connect the grounding wire to a gas pipe, water pipe, lightning conductor or telephone grounding wire. If the unit is not grounded properly, electric shock may result.
  - Check frequently that the ground wire from the outdoor unit is properly connected to both the unit's ground terminal and the grounding electrode.

### 1.2. During operation

-  **Caution:**
  - Do not use any sharp object to push the buttons, as this may damage the remote controller.
  - Do not twist or tug on the remote controller cord as this may damage the remote controller and cause malfunction.
  - Never remove the upper case of the remote controller. It is dangerous to remove the upper case of the remote controller and touch the printed circuit boards inside. Doing so can result in fire and failure.
  - Never wipe the remote controller with benzene, thinner, chemical rags, etc. Doing so can result in discoloration and failure. To remove heavy stains, soak a cloth in neutral detergent mixed with water, wring it out thoroughly, wipe the stains off, and wipe again with a dry cloth.
  - Never block or cover the indoor or outdoor unit's intakes or outlets. Tall items of furniture underneath the indoor unit, or bulky items such as large boxes placed close to the outdoor unit will reduce the unit's efficiency.

-  **Warning:**
  - Do not splash water over the unit and do not touch the unit with wet hands. An electric shock may result.
  - Do not spray combustible gas close to the unit. Fire may result.
  - Do not place a gas heater or any other open-flame appliance where it will be exposed to the air discharged from the unit. Incomplete combustion may result.

### ⚠ Warning:

- Do not remove the front panel or the fan guard from the outdoor unit when it is running. You could be injured if you touch rotating, hot or high-voltage parts.
- Never insert fingers, sticks etc. into the intakes or outlets, otherwise injury may result, since the fan inside the unit rotates at high speed. Exercise particular care when children are present.
- If you detect odd smells, stop using the unit, turn off the power switch and consult your dealer. Otherwise, a breakdown, electric shock or fire may result.
- When you notice exceptionally abnormal noise or vibration, stop operation, turn off the power switch, and contact your dealer.
- Do not over-cool. The most suitable inside temperature is one that is within 5 °C of the outside temperature.
- Do not leave handicapped people or infants sitting or standing in the path of the airflow from the air-conditioner. This could cause health problems.

### ⚠ Caution:

- Do not direct the airflow at plants or caged pets.
- Ventilate the room frequently. If the unit is operated continuously in a closed room for a long period of time, the air will become stale.

### In case of failure

#### ⚠ Warning:

- Never remodel the air conditioner. Consult your dealer for any repair or service. Improper repair work can result in water leakage, electric shock, fire, etc.
- If the remote controller displays an error indication, the air conditioner does not run, or there is any abnormality, stop operation and contact

your dealer. Leaving the unit as it is under such conditions can result in fire or failure.

- If the power breaker is frequently activated, get in touch with your dealer. Leaving it as it is can result in fire or failure.
- If the refrigeration gas blows out or leaks, stop the operation of the air conditioner, thoroughly ventilate the room, and contact your dealer. Leaving the unit as it is can result in accidents due to oxygen deficiency.

### When the air conditioner is not to be used for a long time

- If the air conditioner is not to be used for a long time due to a seasonal change, etc., run it for 4 - 5 hours with the air blowing until the inside is completely dry. Failing to do so can result in the growth of unhygienic, unhealthy mold in scattered areas throughout the room.
- When it is not to be used for an extended time, keep the [power supply] turned OFF.

If the power supply is kept on, several watts or several tens of watts will be wasted. Also, the accumulation of dust, etc., can result in fire.

- Keep the power switched ON for more than 12 hours before starting operation. Do not turn the power supply OFF during seasons of heavy use. Doing so can result in failure.

## 1.3. Disposing of the unit

### ⚠ Warning:


When you need to dispose of the unit, consult your dealer. If pipes are removed incorrectly, refrigerant (fluorocarbon gas) may blow out and come into contact with your skin, causing injury. Releasing refrigerant into the atmosphere also damages the environment.

## 2. Names and functions of various parts

### Attachment and detachment of filter

[Fig. A] (P.6)

## 3. How to operate

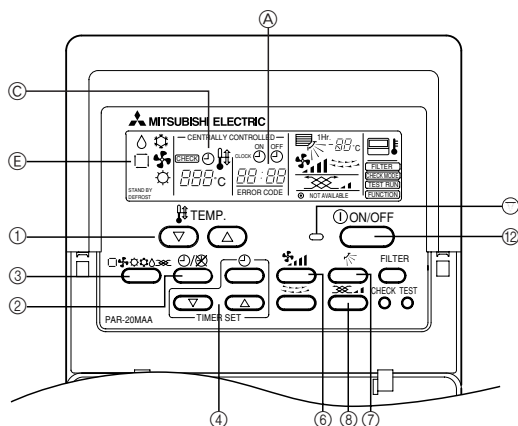

### ⚠ Caution:

- In removing the filter, precautions must be taken to protect your eyes from dust. Also, if you have to climb up on a stool to do the job, be careful not to fall.
- Turn off the power supply when the filter is changed.

### Before starting operation

- Start running after the "H0" display has disappeared. The "H0" display briefly appears on the room temperature display (max. 3 minutes) when the power is turned on and after a power failure. This does not indicate any failure of the air conditioner.
- The operation modes of the indoor units' cooling operation, dry operation, and heating operation are different from those of the outdoor units. When the operation is started with cooling/dry (heating) and other indoor units connected to the counterpart outdoor units are already running in the same operation mode, the remote control displays "❄" or "☀" ("❄") mode. However, the operation comes to stop, and you cannot get a desired mode. When this occurs, you will be notified by the "❄" or "☀" ("❄") display that flashes in the liquid crystal display of the remote controller. Set to the operation mode of other indoor unit by the operation switch button. The above does not apply to the models that simultaneously run both the cooling operation and heating operation.
- The outdoor units stop when all the indoor units connected to the counterpart outdoor units stop.
- During heating operation, even if the indoor unit is set to operation while the outdoor unit is in defrosting operation, operation starts after the defrosting operation of the outdoor unit has ended.

### 3.1. ON/OFF

#### Start an operation

1. Press the Ⓜ [ON/OFF] button  
Operation lamp Ⓟ lights up and operation starts.

#### Stop an operation

1. Press the Ⓜ [ON/OFF] button again  
Operation lamp goes off and operation stops.
- Once the buttons have been set, pressing of the [ON/OFF] button will only repeat the same operation thereafter.
  - During operation, the operation lamp above the [ON/OFF] button lights up.

### ⚠ Caution:

Even if the operation button is pressed immediately after the operation is stopped, operation will not restart for about 3 minutes. This function protects the machine. It automatically starts operation after the lapse of approximately 3 minutes.

### 3.2. Selecting operation

#### When selecting operation

1. Press the Ⓝ [selecting operation] button  
Consecutive pressing of the selecting operation button switches the operation over to Ⓝ "❄," Ⓝ "☀," Ⓝ "🌀," Ⓝ "☐", and Ⓝ "❄"). For the contents of operation, check the display.

#### For cooling

Press the Ⓝ [selecting operation] button and bring up the "❄" display.

#### For dry

Press the Ⓝ [selecting operation] button and bring up the "☀" display.

- The indoor fan turns to the low-speed operation, disabling the change of fan speed.
- Dry operation cannot be carried out at a room temperature of less than 18 °C.

#### For fan

Press the Ⓝ [selecting operation] button and bring up the "🌀" display.

- The fan operation functions to circulate the air in the room.
- The temperature of the room cannot be set by fan operation.



### ⚠ Caution:

Never expose your body directly to cool air for a long time. Excessive exposure to cool air is bad for your health, and should therefore be avoided.

### Dry operation

The dry is a microcomputer-controlled dehumidifying operation which controls excessive air-cooling according to the room temperature of your choice. (Not usable for heating.)

1. Until reaching room temperature of your choice  
The compressor and indoor fan function is linked motion according to the change of the room temperature and automatically repeats ON/OFF.
2. When reaching room temperature of your choice  
Both the compressor and indoor fan stop.  
When stop continues for 10 minutes, the compressor and indoor fan are operated for 3 minutes to keep the humidity low.

### For heating

Press the ③ [selecting operation] button to bring up the “☀” display.

#### Regarding displays during heating operation

##### “DEFROST”

Displayed only during the defrosting operation.

##### “STAND BY”

Displayed from the start of heating operation until the moment warm air blows out.

### ⚠ Caution:

- When the air conditioner is used together with burners, thoroughly ventilate the area. Insufficient ventilation can result in accidents due to oxygen deficiency.
- Never place a burner at a place where it is exposed to the airflow from the air conditioner.  
Doing so can result in imperfect combustion of the burner.
- The microcomputer functions in the following cases:
- Air does not blow out when heating starts.
  - To prevent any cool air from escaping, the indoor fan is gradually switched in sequence from faint airflow/weak airflow/set airflow according to the temperature rise of the blown out air. Wait a moment until the airflow comes out naturally.
- The fan is not moving at the set speed.
  - In some models, the system switches over to faint airflow when the temperature of the room reaches the set temperature. In other cases, it stops to prevent any cool air from escaping during the defrosting operation.
- Air flows out even if operation is stopped.
  - Approximately 1 minute after the stop of operation, the indoor fan sometimes rotates to eliminate extra heat generated by the electric heater, etc. The fan speed changes to low or high.

## 3.3. Room temperature adjustment

### To change room temperature

Press the ① [room temperature adjustment] button and set the room temperature of your choice.

Pressing  $\Delta$  or  $\nabla$  once changes the setting by 1 °C. If the pressing is continued, the setting continues to change by 1 °C.

- Indoor temperature can be set within the following range.  
Cooling/dry: 19 - 30 °C  
Heating: 17 - 28 °C
- It is impossible to set the room temperature by the air-blow operation.
- \* The range of room temperature display is 8 - 39 °C. Outside this range, the display flashes either 8 - 39 °C to inform you if the room temperature is lower or higher than the displayed temperature.

## 3.4. Fan speed adjustment

### To change fan speed

Every time you press the ⑥ [fan speed] button once, it switches from the low-speed to high-speed settings successively.

In the electronics dry operation, the indoor fan automatically turns to low-speed operation. Switching of fan speed is impossible. (Only the display on the remote controller changes.)

- \* Every time the fan speed adjustment button is pressed once, the fan speed is changed.

#### [PEFY-P200-250VMH]

Fan speed : 1 stage

Display: (High)

#### [PEFY-P-VM, PEFY-P40~140VMH, PFFY-P-VLEM, PFFY-P-VLRM] [PDFY-P100-125VM, PEFY-P100~140-VMM series]

Fan speed : 2 stages

Display: (Low) → (High)

#### [PLFY-P125VLMD, PDFY-P20~80VM series]

Fan speed : 4 stages

Display: (Low) → (Mid2) → (Mid1) → (High)

#### [PLFY-P20~100VLMD, PEFY-P-VML, PEFY-P20~80-VMM series]

Fan speed : 3 stages

Display: (Low) → (Mid) → (High)

## 3.5. Adjustment of up/down airflow direction

### To change the up/down airflow direction

Every time the ⑦ [up/down airflow direction] button is pressed, the direction of the airflow changes.

#### [PLFY-P20~100VLMD]

|                 |                |   |                 |   |   |         |
|-----------------|----------------|---|-----------------|---|---|---------|
| Display         |                |   |                 |   |   |         |
| Mode            | Fan speed      | ① | ②               | ③ | ④ | ⑤       |
| Heating/Fan     | High/Mid/Low   | ① | ②               | ③ | ④ | ⑤       |
| Cooling         | High           | ① | ②               | ③ | ④ | ⑤       |
|                 | Mid/Low        | ① | ②               | ③ | ④ | ⑤       |
| Dry             | Can not Change | ① | ②               | ③ | ④ | ⑤       |
| Initial setting |                | - | Cooling Dry Fan | - | - | Heating |

#### [Other Models]


|                 |                    |   |                 |   |   |         |
|-----------------|--------------------|---|-----------------|---|---|---------|
| Display         |                    |   |                 |   |   |         |
| Mode            | Fan speed          | ① | ②               | ③ | ④ | ⑤       |
| Heating/Fan     | High/Mid1/Mid2/Low | ① | ②               | ③ | ④ | ⑤       |
| Cooling         | High               | ① | ②               | ③ | ④ | ⑤       |
|                 | Mid1/Mid2/Low      | ① | ②               | ③ | ④ | ⑤       |
| Dry             | Can not Change     | ① | ②               | ③ | ④ | ⑤       |
| Initial setting |                    | - | Cooling Dry Fan | - | - | Heating |

- \*1 • It automatically returns to the “② 0°” when one hour passes.
- The “1 Hr.” is displayed on the remote controller (It is disappeared when one hour passes.)

- This function is not available according to the models.
- In the following cases, it is different for the display and the unit.
  1. “DEFROST” or “STAND BY” is displayed
  2. Just starting in heating mode
  3. Thermostat OFF in heating mode

### PFFY-P-VLEM

While pulling the blowout grill out toward you, raise the rear, remove it, change the direction, and set it in place.

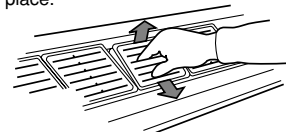

### ⚠ Caution:

Avoid putting your hand into the air outlet of the indoor unit any more than necessary. If you get your hands caught in the metal parts when adjusting the airflow-direction-adjustment board and blowout grill, or nip them in the autovane, there is a risk of injury and failure.

## 3.6. Time setting

- Set the current time after turning ON the power of the air conditioner or after restoration from a power failure.
- It can be set regardless of the operation of the indoor unit.
- During the time operation, the time-setting button becomes void, disabling time setting.


### 1. Press the ④ [time selection] button and bring up the ④ “current time” display

- Every time it is pressed, the display changes.

CLOCK (“current time”) →  $\text{ON}$  (“timer start time”) →  $\text{OFF}$  (“timer end time”) → (no display)

### ⚠ Caution:

When the current time is not yet set, the “CLOCK (current time)” display flashes, disabling the setting of timer operation.

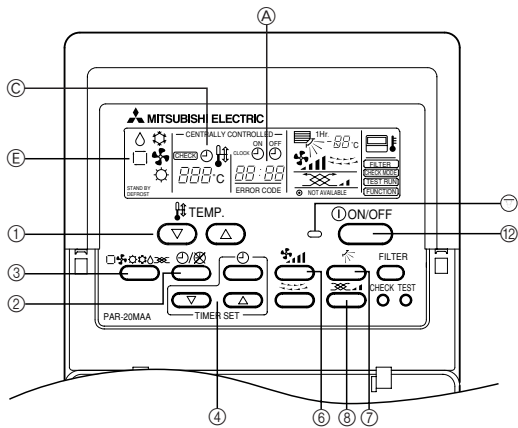

### Display example of timer setting



The example shows a timer set for operation start at 8:00 and end at 17:00.

- Press the ② [timer/continuous] button and bring up the ③ no display
- Press the ④ [time selection] button and bring up the ① "Timer start time" display
- Press the ④ [time selection] button and set the starting time  
When using it as an off-timer, set the starting time to "--:--". The "--:--" is displayed next to 23:50.
- Press the ④ [time selection] button and bring up the ② "Timer end time" display
- Press the ④ [time selection] button and set the ending time  
When using it as an on-timer, set the ending time to "--:--". The "--:--" is displayed next to 23:50.
- Press the ② [timer/continuous] button and bring up the ③ " " display  
Bringing up the ③ " " display completes the setting.

Every time the ④ [time selection] button of the ④ [time selection] is pressed once, it advances (or retrogresses) by 10 minutes.  
If the button is pressed continuously, it advances (or retrogresses) continuously. First set the hour digit and then set the minute digit.  
When the ON/OFF timer mode is set, you can run (on-timer) or stop (off-timer) operation by pressing the ② [ON/OFF] button even when there is remaining time.

### Release

Press the ② [timer/continuous] button and disappear the " " display.

## 3.8. Ventilation

- The ventilator (OA processing unit or LOSSNAY) is automatically operated with the indoor unit when it interlocks to the indoor unit.
- Press the ⑧ [Ventilation] button when indoor unit stops, only the ventilator is operated.
- ⑧ [Ventilation] button is once pressed, the fan speed is changed.
- The fan of indoor unit runs even when only the ventilator is operated according to the model of indoor unit and ventilator occasionally.

## 3.9. Others

- CENTRALLY CONTROLLED** : Displayed when control is executed by a separately sold centralized control unit, etc.
- STAND BY DEFROST** : Displayed from the start of heating operation until the moment warm air blows out.
- CHECK** : This displays indication when some abnormality occurs in the unit.
- NOT AVAILABLE** : When a button is pressed for any function which the indoor unit cannot perform, this display flashes concurrently with the display of that function.
- Remote controller** : In the system in which the [Sensor] display is indicated as the "remote controller", room temperature measurement is performed by the room temperature sensor built into the remote controller. Therefore, pay attention to the following:
- FILTER** : Displayed when it is time to clean the filter.  
Press the ⑩ [Filter] button twice, then the display is disappeared.

### 2. Set the current time by pressing the ④ [time selection] button

- The time cannot be set while the ③ "timer on" is displayed.
- While the ① "CLOCK" time is displayed, press the time setting ④ [time selection] buttons and set the time.
- The setting advances one minute every time the ④ [time selection] button is pressed once, and retrogresses one minute every time the ④ [time selection] button is pressed once.  
When respective ④ [time selection] buttons are pressed continuously, the time display goes fast forward. It advances in the order of 1 minute unit - 10 minute unit - one hour unit.
- About 10 seconds after the button operation has been completed, the ③ "current time" and ① "CLOCK" displays disappear.

### Caution:

- Remote controller is equipped with a simplified clock with a precision of about + or - one minute per month.
- The time must be readjusted (reset) every time the air conditioner is subjected to a power stop of the air conditioner or a power failure.

## 3.7. Timer setting

- If the timer is set, the unit starts (stops) at the set time, and the time mode is terminated.
- When you wish to confirm the starting and ending time, press the ④ [time selection] button while ③ " " is displayed.

### Function of timer

#### On-timer

Set the on-timer for the time the working day begins in your company. When the set start time arrives, the air conditioner starts operation.

#### Off-timer

Use the off-timer as a reminder to turn off the air conditioner. When the set end-work time arrives, the air conditioner stops operation.

There are three methods for using the timer.

- ON/OFF Timer : When setting both starting and ending time
- On-timer : When only setting the starting time (Ending time is set to "--:--")
- Off-timer : When only setting the ending time (Starting time is set to "--:--")

## 4. The smart way to use

Even minimal steps to care for your air conditioner can help make its use far more effective in terms of air-conditioning effect, electricity charges, etc.

### Set the right room temperature

- In cooling operation, a temperature difference of about 5 °C between indoors and outdoors is optimum.
- If the room temperature is raised by 1 °C during air-cooling operation, about 10 % electric power can be saved.
- Excessive cooling is bad for health. It also results in the waste of electric power.

### Clean the filter thoroughly

- If the screen of the air filter becomes clogged, the airflow and air-conditioning effect can be significantly reduced.  
Further, if the condition is left unattended, failure can result. It is particularly important to clean the filter at the beginning of the cooling and heating seasons. (When profuse dust and dirt have accumulated, clean the filter thoroughly.)

## Prevent intrusion of heat during air-cooling

- To prevent the intrusion of heat during cooling operation, provide a curtain or a blind on the window to block out direct sunlight. Also, do not open the entrance or exit except in cases of dire necessity.

## Carry out ventilation sometimes

- Since the air periodically gets dirty in a room that is kept closed for a long time, ventilation is sometimes necessary. When gas appliances are used together with the air conditioner, special precautions must be taken. If the "LOSSNAY" ventilation unit developed by our company is used, you can perform ventilation with less waste. For details on this unit, consult with your dealer.

## 5. Caring for the machine

Always have filter maintenance performed by a service person.

Before care-taking, turn the power supply OFF.

### ⚠ Caution:

- Before you start cleaning, stop operation and turn OFF the power supply. Remember that the fan is rotating inside at high speed, posing a serious risk of injury.
- Indoor units are equipped with filters to remove the dust of sucked-in air. Clean the filters using the methods shown in the following sketches. (The standard filter should normally be cleaned once a week, and the long-life filter at the beginning of each season.)
- The life of the filter depends on where the unit is installed and how it is operated.

### How to clean

- Clear dust away lightly or clean it up with a vacuum cleaner. In the case of severe staining, wash the filter in lukewarm water mixed with dissolved neutral detergent or water, and then rinse off the detergent completely. After washing, dry it and fix it back into place.

### ⚠ Caution:

- Do not dry the filter by exposing it to direct sunlight or warming it using fire, etc. Doing so can result in the deformation of the filter.
- Washing it in hot water (more than 50 °C) can also result in deformation.

### ⚠ Caution:

Never pour water or flammable sprays onto the air conditioner. Cleaning using these methods can result in the failure of the air conditioner, electric shock, or fire.

GB

## 6. Troubleshooting

Before you ask for repair service, check the following points:

| State of Machine  | Remote Controller   | Cause  | Troubleshooting   |
|---|---|--|---|
| It does not run.  | "●" display is not lit up<br>No display appears even when the [ON/OFF] button is pressed. | Power failure  | Press the [ON/OFF] button after power restoration.  |
|   |   | The power supply is turned OFF.  | Turn the power supply ON.   |
|   |   | The fuse in the power supply is gone.  | Replace fuse.   |
|   |   | The earth leakage breaker is gone.   | Put in the earth leakage breaker.   |
| Air flows out but it does not cool enough or heat enough.   | The liquid crystal display shows that it is in the state of operation.                    | Improper temperature adjustment  | After checking the set temperature and inlet temperature on the liquid crystal display, refer to [Room temperature adjustment], and operate the adjustment button.  |
|   |   | The filter is filled with dust and dirt.   | Clean up the filter. (Refer to [Caring for the machine].)   |
|   |   | There are some obstacles at the air inlet and outlet of the indoor and outdoor units.  | Remove.   |
|   |   | Windows and doors are open.  | Close.  |
| Cool air or warm air does not come out.   | The liquid crystal display shows that it is in operation.                                 | The restart-preventing circuit is in operation for 3 minutes.  | Wait for a while. (To protect the compressor, a 3-minute restart-preventing circuit is built into the indoor unit. Therefore, there are occasions sometimes when the compressor does not start running immediately. There are cases when it does not run for as long as 3 minutes.) |
|   |   | Indoor unit operation was restarted during the heating and defrosting operation.   | Wait for a while. (Heating operation starts after ending defrosting operation.)   |
| It runs briefly, but soon stops.  | The "check" and check code flashes on the liquid crystal display.                         | There are some obstacles at the air inlet and outlet of the indoor and outdoor units.  | Rerun after removal   |
|   |   | The filter is filled with dust and dirt.   | Rerun after cleaning the filter. (Refer to [Caring for the machine].)   |
| The sound of the exhaust and rotation of the motor can still be heard after stop of running.              | All lights are out except the powered display of "●".                                     | When other indoor units are engaged in cooling operation, the machine stops after running a drain-up mechanism for 3 minutes when air-cooling operation is stopped.            | Wait for 3 minutes.   |
| The sound of the exhaust and the rotation of the motor can be heard intermittently after stop of running. | All lights are out except the powered display of "●".                                     | When other indoor units are engaged in cooling operation, drained water is brought in. If the drain water is collected, the drain-up mechanism initiates a draining operation. | It soon stops. (If the noise occurs more than 2-3 times in an hour, ask for repair service.)  |
| Warm air comes out intermittently when the thermostat is OFF or during fan operation.                     | The liquid crystal display shows that it is in the state of operation.                    | When other indoor units are engaged in heating operation, the control valves are opened and closed from time to time to maintain the stability of the system.                  | It soon stops. (If the room temperature rises uncomfortably high in a small room, stop operation.)  |

- If operation stops due to a power failure, the [restart-preventing circuit at power failure] operates and disables unit operation even after power restoration. In this case, press the [ON/OFF] button again and start operation.

If malfunctions persist after you have checked the above, turn the power supply OFF and contact your dealer with information about the product name, the nature of the malfunction, etc. If the display of "[check]" and (4 digit) check code flashes, tell the dealer contents of the display (check code). Never attempt to repair by yourself.

The following symptoms are not air conditioner failures:

- The air blown out from the air conditioner can sometimes give off odors. This is due to cigarette smoke contained in the air of the room, the smell of cosmetics, the walls, furniture, etc., absorbed in the air conditioner.
- A hissing noise can be heard immediately after the air conditioner is started or stopped. This is the sound of the refrigeration flowing inside the air conditioner. This is normal.
- The air conditioner sometimes snaps or clicks at the beginning or end of cooling/heating operation. This is the sound of friction on the front panel and other sections due to expansion and contraction caused by temperature change. This is normal.

## 7. Installation, transferring works, and checking

### Regarding place for installation

Consult with your dealer for details on installation and transferring the installation.

#### Caution:

Never install the air conditioner where there is a risk of leakage of flammable gas.

If gas leaks and accumulates around the unit, fire can result.

#### Never install the air conditioner at the following place:

- where there is a lot of machine oil
- near the ocean and beach areas where there is salt air.
- where humidity is high
- where there are hot springs nearby
- where there is sulphurous gas
- where there is a high-frequency processing machinery (a high-frequency welder, etc.)
- where acid solution is frequently used
- where special sprays are frequently used
- Install the indoor unit horizontally. Otherwise, water leakage can result.
- Take sufficient measures against noise when installing the air conditioners at hospitals or communication-related businesses.

If the air conditioner is used in any of the above-mentioned environments, frequent operational failure can be expected. It is advisable to avoid these types of installation sites.

For further details, consult with your dealer.

### Regarding electrical work

#### Caution:

- The electrical work must be undertaken by a person who is qualified as an electrical engineer according to the [technical standard respecting electrical installation], [internal wiring rules], and the installation instruction manual with the absolute use of exclusive circuits. The use of other products with the power source can result in burnt-out breakers and fuses.

- Never connect the grounding wire to a gas pipe, water pipe, arrester, or telephone grounding wire. For details, consult with your dealer.
- In some types of installation sites, the installation of an earth leakage breaker is mandatory. For details, consult with your dealer.

### Regarding transfer of installation

- When removing and reinstalling the air conditioner when you enlarge your home, remodel, or move, consult with your dealer in advance to ascertain the cost of the professional engineering work required for transferring the installation.

#### Caution:

When moving or reinstalling the air conditioner, consult with your dealer. Defective installation can result in electric shock, fire, etc.

### Regarding noise

- In installing work, choose a place that can fully bear the weight of the air conditioner, and where noise and vibration can be reduced.
- Choose a place where cool or warm air and noise from the outdoor air outlet of the air conditioner does not inconvenience the neighbors.
- If any alien object is placed near the outdoor air outlet of the air conditioner, decreased performance and increased noise can result. Avoid placing any obstacles adjacent to the air outlet.
- If the air conditioner produces any abnormal sound, consult with your dealer.

### Maintenance and inspection

- If the air conditioner is used throughout several seasons, the insides can get dirty, reducing the performance.

Depending upon the conditions of usage, foul odors can be generated and drainage can deteriorate due to dust and dirt, etc.

## 8. Specifications

### PLFY-P-VLMD-E series

| Item                                    | Model               | P20VLMD-E                     | P25VLMD-E      | P32VLMD-E      | P40VLMD-E      | P50VLMD-E      | P63VLMD-E      |
|---|---------------------|-------------------------------|----------------|----------------|----------------|----------------|----------------|
| Power source                            |                     | ~220-240V 50Hz/~220-230V 60Hz |                |                |                |                |                |
| Cooling capacity*1 / Heating capacity*1 | kW                  | 2.2/2.5                       | 2.8/3.2        | 3.6/4.0        | 4.5/5.0        | 5.6/6.3        | 7.1/8.0        |
| Dimension*2                             | Height              | mm 290 (20)                   | mm 290 (20)    | mm 290 (20)    | mm 290 (20)    | mm 290 (20)    | mm 290 (20)    |
|   | Width               | mm 776 (1,080)                | mm 776 (1,080) | mm 776 (1,080) | mm 776 (1,080) | mm 946 (1,250) | mm 946 (1,250) |
|   | Depth               | mm 634 (710)                  | mm 634 (710)   | mm 634 (710)   | mm 634 (710)   | mm 634 (710)   | mm 634 (710)   |
| Net weight                              | kg                  | 23 (6.5)                      | 23 (6.5)       | 24 (6.5)       | 24 (6.5)       | 27 (7.5)       | 28 (7.5)       |
| Fan Airflow rate (Low-Middle-High)      | m <sup>3</sup> /min | 6.5-8.0-9.5                   | 6.5-8.0-9.5    | 6.5-8.0-9.5    | 7.0-8.5-10.5   | 9.0-11.0-12.5  | 10.0-13.0-15.5 |
| Noise level (Low-Middle-High)*3         | dB(A)               | 220V, 240V                    | 27-30-33       | 27-30-33       | 27-30-33       | 29-33-36       | 31-34-37       |
|   |                     | 230V                          | 28-31-34       | 28-31-34       | 28-31-34       | 30-34-37       | 32-35-38       |
| Filter                                  |                     | Long life filter              |                |                |                |                |                |

| Item                                    | Model               | P80VLMD-E                     | P100VLMD-E       | P125VLMD-E  |
|---|---------------------|-------------------------------|------------------|---|
| Power source                            |                     | ~220-240V 50Hz/~220-230V 60Hz |                  |   |
| Cooling capacity*1 / Heating capacity*1 | kW                  | 9.0/10.0                      | 11.2/12.5        | 14.0/16.0   |
| Dimension*2                             | Height              | mm 290 (20)                   | mm 290 (20)      | mm 290 (20)                                       |
|   | Width               | mm 1,446 (1,750)              | mm 1,446 (1,750) | mm 1,708 (2,010)                                  |
|   | Depth               | mm 634 (710)                  | mm 634 (710)     | mm 606 (710)                                      |
| Net weight                              | kg                  | 44 (12.5)                     | 47 (12.5)        | 56 (13)   |
| Fan Airflow rate (Low-Middle-High)      | m <sup>3</sup> /min | 15.5-18.5-22.0                | 17.5-21.0-25.0   | 24.0-27.0-30.0-33.0<br>(Low-Middle2-Middle1-High) |
| Noise level (Low-Middle-High)*3         | dB(A)               | 220V, 240V                    | 33-36-39         | 36-39-42  |
|   |                     | 230V                          | 34-37-40         | 37-41-43  |
| Filter                                  |                     | Long life filter              |                  |   |

Notes: \*1 Cooling/Heating capacity indicates the maximum value at operation under the following condition.

Cooling: Indoor: 27 °C DB/19 °C WB

Outdoor: 35 °C DB

Heating: Indoor: 20 °C DB

Outdoor: 7 °C DB/6 °C WB

\*2 The figure in ( ) indicates panel's.

\*3 The operating noise is the data that was obtained in an anechoic room.

**PEFY-P-VML-E series**

| Item                                    | Model                          | P20VML-E            | P25VML-E    | P32VML-E    |
|---|--------------------------------|---------------------|-------------|-------------|
| Power source                            |                                | ~220-240V 50/60Hz   |             |             |
| Cooling capacity*1 / Heating capacity*1 | kW                             | 2.2/2.5             | 2.8/3.2     | 3.6/4.0     |
| Dimension Height / Width / Depth        | mm                             | 225/720/550         | 225/720/550 | 225/720/550 |
| Net weight                              | kg                             | 18                  | 18          | 18          |
| Fan                                     | Airflow rate (Low-Middle-High) | m <sup>3</sup> /min | 4.8/5.8/7.9 | 4.8/5.8/7.9 |
|   | External static pressure       | Pa                  | 5           | 5           |
| Noise level (Low-Middle-High)*5         | dB(A)                          | 25/29/36            | 25/29/36    | 25/29/40    |
| Filter                                  |                                | Standard filter     |             |             |

**PEFY-P-VMM-E series**

| Item                                    | Model                          | P20VMM-E            | P25VMM-E    | P32VMM-E    | P40VMM-E     | P50VMM-E       |
|---|--------------------------------|---------------------|-------------|-------------|--------------|----------------|
| Power source                            |                                | ~220-240V 50Hz      |             |             |              |                |
| Cooling capacity*1 / Heating capacity*1 | kW                             | 2.2/2.5             | 2.8/3.2     | 3.6/4.0     | 4.5/5.0      | 5.6/6.3        |
| Dimension Height / Width / Depth        | mm                             | 295/815/700         | 295/815/700 | 295/815/700 | 295/935/700  | 295/935/700    |
| Net weight                              | kg                             | 27                  | 27          | 27          | 33           | 33             |
| Fan                                     | Airflow rate (Low-Middle-High) | m <sup>3</sup> /min | 6.0-7.2-8.5 | 6.0-7.2-8.5 | 7.5-9.0-10.5 | 10.0-12.0-14.0 |
|   | External static pressure*2     | Pa                  | 30/50/100   | 30/50/100   | 30/50/100    | 30/50/100      |
| Noise level (Low-Middle-High)*5         | dB(A)                          | 27-30-32            | 27-30-32    | 28-32-35    | 31-34-37     | 31-35-38       |
| Filter                                  |                                | Standard filter     |             |             |              |                |

| Item                                    | Model                          | P63VMM-E            | P71VMM-E       | P80VMM-E       |
|---|--------------------------------|---------------------|----------------|----------------|
| Power source                            |                                | ~220-240V 50Hz      |                |                |
| Cooling capacity*1 / Heating capacity*1 | kW                             | 7.1/8.0             | 8.0/9.0        | 9.0/10.0       |
| Dimension Height / Width / Depth        | mm                             | 295/1,175/700       | 295/1,175/700  | 295/1,175/700  |
| Net weight                              | kg                             | 42                  | 42             | 42             |
| Fan                                     | Airflow rate (Low-Middle-High) | m <sup>3</sup> /min | 13.5-16.2-19.0 | 14.5-18.0-21.0 |
|   | External static pressure*2     | Pa                  | 30/50/100      | 30/50/100      |
| Noise level (Low-Middle-High)*5         | dB(A)                          | 31-35-38            | 32-36-39       | 32-36-39       |
| Filter                                  |                                | Standard filter     |                |                |

| Item                                    | Model                      | P100VMM-E           | P125VMM-E     | P140VMM-E     |
|---|----------------------------|---------------------|---------------|---------------|
| Power source                            |                            | ~220-240V 50Hz      |               |               |
| Cooling capacity*1 / Heating capacity*1 | kW                         | 11.2/12.5           | 14.0/16.0     | 16.0/18.0     |
| Dimension Height / Width / Depth        | mm                         | 325/1,415/740       | 325/1,415/740 | 325/1,715/740 |
| Net weight                              | kg                         | 62                  | 65            | 70            |
| Fan                                     | Airflow rate (Low-High)    | m <sup>3</sup> /min | 23.0-33.0     | 28.0-40.0     |
|   | External static pressure*2 | Pa                  | 50/130        | 50/130        |
| Noise level (Low-High)*5                | dB(A)                      | 40-44               | 42-45         | 42-45         |
| Filter                                  |                            | Standard filter     |               |               |

**PEFY-P-VMH-E series**

| Item                                    | Model                      | P40VMH-E                  | P50VMH-E    | P63VMH-E    | P71VMH-E      | P80VMH-E      |
|---|----------------------------|---------------------------|-------------|-------------|---------------|---------------|
| Power source                            |                            | ~220-240V 50/60Hz         |             |             |               |               |
| Cooling capacity*1 / Heating capacity*1 | kW                         | 4.5/5.0                   | 5.6/6.3     | 7.1/8.0     | 8.0/9.0       | 9.0/10.0      |
| Dimension Height / Width / Depth        | mm                         | 380/750/900               | 380/750/900 | 380/750/900 | 380/1,000/900 | 380/1,000/900 |
| Net weight                              | kg                         | 44                        | 44          | 45          | 50            | 50            |
| Fan                                     | Airflow rate (Low-High)    | m <sup>3</sup> /min       | 10.0-14.0   | 10.0-14.0   | 13.5-19.0     | 15.5-22.0     |
|   | External static pressure*3 | Pa                        | 50/100/200  | 50/100/200  | 50/100/200    | 50/100/200    |
|   |                            | 230, 240 V                | 100/150/200 | 100/150/200 | 100/150/200   | 100/150/200   |
| Noise level (Low-High)*5                | dB(A)                      | 220 V                     | 27-34       | 27-34       | 27-34         | 32-39         |
|   | 230, 240 V                 | 31-37                     | 31-37       | 36-41       | 35-41         | 38-43         |
| Filter                                  |                            | Long life filter (option) |             |             |               |               |

| Item                                    | Model                      | P100VMH-E                 | P125VMH-E     | P140VMH-E     |
|---|----------------------------|---------------------------|---------------|---------------|
| Power source                            |                            | ~220-240V 50/60Hz         |               |               |
| Cooling capacity*1 / Heating capacity*1 | kW                         | 11.2/12.5                 | 14.0/16.0     | 16.0/18.0     |
| Dimension Height / Width / Depth        | mm                         | 380/1,200/900             | 380/1,200/900 | 380/1,200/900 |
| Net weight                              | kg                         | 70                        | 70            | 70            |
| Fan                                     | Airflow rate (Low-High)    | m <sup>3</sup> /min       | 26.5-38.0     | 26.5-38.0     |
|   | External static pressure*3 | Pa                        | 50/100/200    | 50/100/200    |
|   |                            | 230, 240 V                | 100/150/200   | 100/150/200   |
| Noise level (Low-High)*5                | dB(A)                      | 220 V                     | 34-42         | 34-42         |
|   | 230, 240 V                 | 38-44                     | 38-44         | 38-44         |
| Filter                                  |                            | Long life filter (option) |               |               |

| Item                                    | Model                      | P200VMH-E                 | P250VMH-E       |
|---|----------------------------|---------------------------|-----------------|
| Power source                            |                            | 3N~380-415V 50/60Hz       |                 |
| Cooling capacity*1 / Heating capacity*1 | kW                         | 22.4/25.0                 | 28.0/31.5       |
| Dimension Height / Width / Depth        | mm                         | 470/1,250/1,120           | 470/1,250/1,120 |
| Net weight                              | kg                         | 100                       | 100             |
| Fan                                     | Airflow rate               | m <sup>3</sup> /min       | 58.0            |
|   | External static pressure*4 | Pa                        | 110/220         |
|   |                            | 380V, 400, 415V           | 130/260         |
| Noise level*5                           | dB(A)                      | 380V                      | 42              |
|   | 400, 415V                  | 44                        | 52              |
| Filter                                  |                            | Long life filter (option) |                 |

Notes: \*1 Cooling/Heating capacity indicates the maximum value at operation under the following condition.

Cooling: Indoor: 27 °C DB/19 °C WB      Outdoor: 35 °C DB

Heating: Indoor: 20 °C DB      Outdoor: 7 °C DB/6 °C WB

\*2 The external static pressure is set to 50 Pa at factory shipment.

\*3 The external static pressure is set to 100 Pa (at 220 V)/150 Pa (at 230, 240 V) at factory shipment.

\*4 The external static pressure is set to 220 Pa (at 380 V)/260 Pa (at 400, 415 V) at factory shipment.

\*5 The operating noise is the data that was obtained in an anechoic room.

**PFFY-P-VLEM-E/PFFY-P-VLRM-E series**

| Item                                    | Model                   | P20VLEM-E                        | P25VLEM-E     | P32VLEM-E     | P40VLEM-E     | P50VLEM-E     | P63VLEM-E     |
|---|-------------------------|----------------------------------|---------------|---------------|---------------|---------------|---------------|
| Power source                            |                         | ~220-240V 50Hz / ~208V-230V 60Hz |               |               |               |               |               |
| Cooling capacity*1 / Heating capacity*1 | kW                      | 2.2/2.5                          | 2.8/3.2       | 3.6/4.0       | 4.5/5.0       | 5.6/6.3       | 7.1/8.0       |
| Dimension                               | Height / Width / Depth  | 630/1,050/220                    | 630/1,050/220 | 630/1,170/220 | 630/1,170/220 | 630/1,410/220 | 630/1,410/220 |
| Net weight                              | kg                      | 23                               | 23            | 25            | 26            | 30            | 32            |
| Fan                                     | Airflow rate (Low-High) | m <sup>3</sup> /min              | 5.5-6.5       | 5.5-6.5       | 7.0-9.0       | 9.0-11.0      | 12.0-14.0     |
| Noise level (Low-High)*5 *6             | dB(A)                   | 34-40                            | 34-40         | 35-40         | 38-43         | 38-43         | 40-46         |
| Filter                                  |                         | Standard filter                  |               |               |               |               |               |

| Item                                    | Model                   | P20VLRM-E                        | P25VLRM-E   | P32VLRM-E     | P40VLRM-E     | P50VLRM-E     | P63VLRM-E     |
|---|-------------------------|----------------------------------|-------------|---------------|---------------|---------------|---------------|
| Power source                            |                         | ~220-240V 50Hz / ~208V-230V 60Hz |             |               |               |               |               |
| Cooling capacity*1 / Heating capacity*1 | kW                      | 2.2/2.5                          | 2.8/3.2     | 3.6/4.0       | 4.5/5.0       | 5.6/6.3       | 7.1/8.0       |
| Dimension                               | Height / Width / Depth  | 639/886/220                      | 639/886/220 | 639/1,006/220 | 639/1,006/220 | 639/1,246/220 | 639/1,246/220 |
| Net weight                              | kg                      | 18.5                             | 18.5        | 20            | 21            | 25            | 27            |
| Fan                                     | Airflow rate (Low-High) | m <sup>3</sup> /min              | 5.5-6.5     | 5.5-6.5       | 7.0-9.0       | 9.0-11.0      | 12.0-14.0     |
| Noise level (Low-High)*5 *6             | dB(A)                   | 34-40                            | 34-40       | 35-40         | 38-43         | 38-43         | 40-46         |
| Filter                                  |                         | Standard filter                  |             |               |               |               |               |

**PDFY-P-VM-E series**

| Item  | Model                                   | P20VM-E                     | P25VM-E         | P32VM-E         | P40VM-E         | P50VM-E             |
|---|---|-----------------------------|-----------------|-----------------|-----------------|---------------------|
| Power source                                |   | ~220-240V 50Hz / ~220V 60Hz |                 |                 |                 |                     |
| Cooling capacity*1/Heating capacity*1       | kW                                      | 2.2/2.5                     | 2.8/3.2         | 3.6/4.0         | 4.5/5.0         | 5.6/6.3             |
| Dimension*2                                 | Height                                  | mm                          | 295 (58)        | 295 (58)        | 295 (58)        | 295 (58)            |
|   | Width                                   | mm                          | 710 (790)       | 710 (790)       | 710 (790)       | 960 (1,040)         |
|   | Depth                                   | mm                          | 735 (600)       | 735 (600)       | 735 (600)       | 735 (600)           |
| Net weight                                  | kg                                      | 25.5 (5)                    | 25.5 (5)        | 27 (5)          | 32 (6)          | 34 (6)              |
| Fan   | Airflow rate (Low-Middle2-Middle1-High) | m <sup>3</sup> /min         | 6.0-6.5-7.5-8.5 | 6.0-6.5-7.5-8.5 | 6.0-6.5-7.5-8.5 | 10.0-11.0-12.5-14.0 |
|   | External static pressure*3              | Pa                          | 30/50/100       | 30/50/100       | 30/50/100       | 30/50/100           |
| Noise level (Low-Middle2-Middle1-High)*4 *6 | dB(A)                                   | 28-30-33-36                 | 28-30-33-36     | 28-30-33-36     | 34-36-37-39     | 34-36-37-39         |
| Filter                                      |   | Long life filter            |                 |                 |                 |                     |

| Item  | Model                                   | P63VM-E                     | P71VM-E             | P80VM-E             | P100VM-E            | P125VM-E      |
|---|---|-----------------------------|---------------------|---------------------|---------------------|---------------|
| Power source                                |   | ~220-240V 50Hz / ~220V 60Hz |                     |                     |                     |               |
| Cooling capacity*1/Heating capacity*1       | kW                                      | 7.1/8.0                     | 8.0/9.0             | 9.0/10.0            | 11.2/12.5           | 14.5/16.3     |
| Dimension*2                                 | Height                                  | mm                          | 295 (58)            | 295 (58)            | 295 (58)            | 335 (58)      |
|   | Width                                   | mm                          | 1,160 (1,240)       | 1,160 (1,240)       | 1,160 (1,240)       | 1,510 (1,590) |
|   | Depth                                   | mm                          | 735 (600)           | 735 (600)           | 735 (600)           | 775 (600)     |
| Net weight                                  | kg                                      | 39 (7)                      | 39 (7)              | 39 (7)              | 52 (8.5)            | 52 (8.5)      |
| Fan   | Airflow rate (Low-Middle2-Middle1-High) | m <sup>3</sup> /min         | 12.5-14.0-16.0-18.0 | 13.5-15.5-17.5-19.5 | 14.5-16.5-18.5-21.0 | 19.5-28.0     |
|   | External static pressure*3              | Pa                          | 30/50/100           | 30/50/100           | 30/50/100           | 50/100/130    |
| Noise level (Low-Middle2-Middle1-High)*4 *6 | dB(A)                                   | 30-34-36-39                 | 32-35-37-40         | 34-37-40-42         | 34-42 <37-44>       | 40-45 <42-46> |
| Filter                                      |   | Long life filter            |                     |                     |                     |               |

Notes: \*1 Cooling/Heating capacity indicates the maximum value at operation under the following condition.

Cooling:Indoor: 27 °C DB/19 °C WB      Outdoor: 35 °C DB  
 Heating:Indoor: 20 °C DB      Outdoor: 7 °C DB/6 °C WB

\*2 The figure in ( ) indicates panel's.

\*3 The external static pressure is set to 50 Pa at factory shipment.

\*4 The figure in < > indicates noise level at 240 V/50 Hz.

Operation temperature

Cooling mode: 15 °C WB - 24 °C WB

Heatingmode: 15 °C DB - 27 °C DB

\*5 The figures represent a 240 V/50 Hz unit measured at a point which is 1 m away from the front of the unit and at a height of 1 m from the floor.

The noise is approximately 1 dB(A) less for a 230 V unit and approximately 2 dB(A) less for a 220 V unit. The noise is approximately 3 dB(A) less when the measurement point is 1.5 m away from the front of the unit and at a height of 1.5 m from the floor.

\*6 The operating noise is the data that was obtained in an anechoic room.

---

This product is designed and intended for use in the residential, commercial and light-industrial environment.

The product at hand is based on the following EU regulations:

- Low Voltage Directive 73/23/EEC
- Electromagnetic Compatibility Directive 89/336/EEC

Please be sure to put the contact address/telephone number on this manual before handing it to the customer.