

FLOOR-TYPE, HEAT PUMP AIR CONDITIONERS

Revision A:

- MFZ-KA25VA-E2, MFZ-KA35VA-E2 and MFZ-KA50VA-E2 have been added.
- "Failure mode recall function" has been corrected.
- RoHS PARTS LIST has been added.

Please void OB409.


INDOOR UNIT SERVICE MANUAL

No. OB409 **REVISED EDITION-A**

Wireless type Models

MFZ-KA25VA **E**1 MFZ-KA25VA **E**2 MFZ-KA35VA **E**1 MFZ-KA35VA **E**2 MFZ-KA50VA **E**1 MFZ-KA50VA **E**2

Outdoor unit service manual SUZ-KA•VA(H) Series (OC322) MXZ-A•VA Series (OB377, OC316)

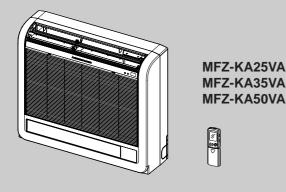

CONTENTS

1.TECHNICAL CHANGES2
2. PART NAMES AND FUNCTIONS2
3. SPECIFICATION4
4. NOISE CRITERIA CURVES6
5. OUTLINES AND DIMENSIONS7
6. WIRING DIAGRAM8
7. REFRIGERANT SYSTEM DIAGRAM8
8. PERFORMANCE CURVES9
9. SERVICE FUNCTIONS19
10. TROUBLESHOOTING21
11. DISASSEMBLY INSTRUCTIONS35
12. PARTS LIST39
13. RoHS PARTS LIST43
14 OPTIONAL PARTS 47

- This service manual describes technical data of the indoor units.
- RoHS compliant products have <G> mark on the spec name plate. For servicing of RoHS compliant products, refer to the RoHS Parts List.



Revision A:

- MFZ-KA25VA MFZ-KA35VA and MFZ-KA50VA have been added.
- "Failure mode recall function" has been corrected.
- RoHS PARTS LIST has been added.

TECHNICAL CHANGES

MFZ-KA25VA-**□** → MFZ-KA25VA-**□** MFZ-KA35VA-**□**

MFZ-KA50VA
→ MFZ-KA50VA
□


- 1. The operation of thermo-off-unit has been changed. (When 2 or more indoor units are connected with a multi type outdoor unit, and operated in heat mode.)
 - <E1> Indoor fan operates with very Low speed or stops.
 - <E2> Indoor fan operates intermittently with very Low speed or stops.

PART NAMES AND FUNCTIONS

INDOOR UNIT

MFZ-KA25VA MFZ-KA35VA MFZ-KA50VA

2

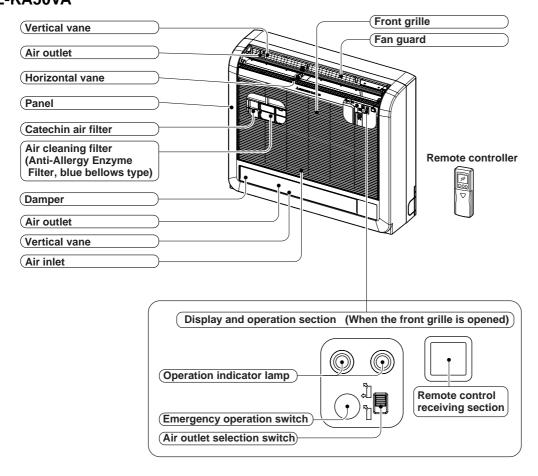


ACCESSORIES

		MFZ-KA25VA MFZ-KA35VA MFZ-KA50VA
1	Drain hose	1
2	Remote controller holder	1
3	Fixing screw for @ 3.5 × 1.6 mm (Black)	2
4	Pipe cover	1
(5)	Band	2
6	Battery (AAA) for remote controller	2
7	Indoor unit mounting bracket	1
8	Fixing screw for ⑦ 4 × 25 mm	5
9	Wood screw for the indoor unit fixation	4
10	Washer of [®]	4
1	Felt tape (Used for left or left-rear piping)	1
12	Wireless remote controller	1
13	Air cleaning filter	1

MFZ-KA25VA MFZ-KA35VA MFZ-KA50VA

REMOTE CONTROLLER

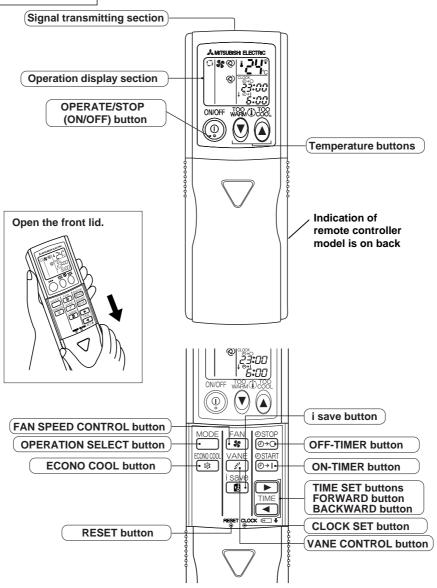

3

SPECIFICATION

	Indoor model		MFZ-K	A25VA	MFZ-K	A35VA	MFZ-KA50VA		
	Function		Cooling	Heating	Cooling	Heating	Cooling	Heating	
	Power supply		Single 230V,	-	_	phase ,50Hz	Single phase 230V,50Hz		
Capacity	Air flow(Super High)	m³ /h	522 546		546 570		642	708	
Сарасну	Air flow(High/Med./Low)	m³ /h	426/ 348/ 288 456/ 372/ 30		444/ 366/ 300	468/ 372/ 312	552/ 474/ 426	588/ 528/ 444	
	Power outlet	Α	1	0	1	0	1	0	
_ =	Running current *1	Α	0.	2	0	.2	0.	.2	
Electrical data	Power input *1	W	2	5	2	5	2	5	
Elect	Auxiliary heater	A(kW)	_	_	_	_	_	_	
шъ	Power factor *1	%	5	4	5	4	5	4	
	Fan motor current *1	Α	0.	2	0	.2	0.	.2	
Fan	Model (Upper)		RC0J3	30-GA	RC0J:	30-GA	RC0J30-GA		
motor	Model (Lower)		RC0J3	30-HA	RC0J:	30-HA	RC0J30-HA		
	Dimensions W×H×D	mm	700×60	00×200	700×60	00×200	700×600×200		
	Weight	kg	1-	4	1	4	14		
	Air direction		5		Į į	5	5		
	Sound level(Super High)	dB(A)	3	7	3	8	43	44	
_ s	Sound level(High/Med./Low)	dB(A)	32/ 2	7/ 22	33/ 28/ 23 38/ 28/ 25		39/ 35/ 32		
Special remarks	ছ Fan speed(Super High)	rpm	1,080	1,010	1,130	1,030	1,280	1,260	
Sperie	음Fan speed(High/Med./Low)	rpm	940/ 800/ 700	870/740/630	970/ 830/ 720	890/ 740/ 650	1,140/ 1,020/ 940	1,070/ 930/ 850	
	ছ Fan speed(Super High)	rpm	880	1,010	930	1,030	1,080	1,260	
	Fan speed(High/Med./Low)	rpm	740/ 650/ 550	870/ 740/ 630	770/ 680/ 570	890/ 740/ 650	940/ 820/ 740	1,070/ 930/ 850	
	Fan speed regulator		4	1	4	1	4	1	
	Thermistor RT11(at 25°C)	kΩ	1	0	1	0	1	0	
	Thermistor RT12(at 25°C)		1	0	1	0	1	0	
	Thermistor RT13(at 25℃)		1	0	1	0	10		
	Thermistor RT14(at 25℃)		1	0	1	0	10		
Thermistor RT15(at 25°C) kΩ		1			0	10			
	Remote controller model		KM0	05G	KM	05G	KM	05G	

NOTE: Test conditions are based on ISO 5151.

Cooling: Indoor
Outdoor
Heating: Indoor
Ory-bulb temperature 27°C Wet-bulb temperature 19°C
Ory-bulb temperature 35°C Wet-bulb temperature 24°C
Ory-bulb temperature 20°C Wet-bulb temperature 15°C
Ory-bulb temperature 20°C Wet-bulb temperature 15°C

Outdoor Dry-bulb temperature 7°C Wet-bulb temperature 6°C

Refrigerant piping length (one way): 5m *1 Measured under rated operating frequency.

			SUZ-KA2	5VA(H).TH	SUZ-KA3	VA(H).TH	SUZ-KA50VA.TH		
	Outdoor model		Indoor	model	Indoor	model	Indoor model		
			MFZ-K	A25VA	MFZ-K	A35VA	MFZ-KA50VA		
	Function		Cooling	Heating	Cooling	Heating	Cooling	Heating	
	Power supply		Single	phase	Single	phase	Single phase		
	Fower Supply			50Hz	230V,			,50Hz	
ίŧ	Capacity Rated frequency(Min.~Max.)	kW	2.5 (0.9 - 3.4)	3.4 (0.9 - 5.1)	3.5 (0.9 - 3.9)	4.0 (0.9 - 6.2)	4.8 (0.9 - 5.4)	6.0(0.9 - 7.9)	
Capacity	Dehumidification	ℓ /h	1.	.2	1.	.7	2	.5	
Ca	Air flow(High/Low)	m³ /h	1,890/ 1,746	2,058 / 1,506	1,896 / 1,668	1,956 / 1,356	2,940 / 1,650	2,940 / 2,210	
cal	Starting current *1	Α	4.	.0	5.	.0	_	.5	
Electrical	Compressor motor current *1	Α	2.3	3.5	4.5	4.5	6.5	8.0	
	Fan motor current *1	Α	0.3	33	0.3	33		30	
Coeffi	cient of performance (C.O.	P) * 1	4.31	4.07	3.21	3.64	3.10	3.23	
sor	Model		KNB07	3FDVH	KNB09	2FCAH	SNB13	0FLDH	
Compressor	Output	W	55	50	65		85	50	
d m	Winding	Ω	U-V 1.53	U-W 1.53	U-V 0.49	U-W 0.49	U-V 0.45	U-W 0.45	
ပိ	resistance(at 20°C)	22	V-W	1.53	V-W 0.49		V-W 0.45		
	Model		RC0J	50-AL	RC0J	50-AL	RC0J60-AA		
Fan motor	Winding		WHT-B	LK 37.5	WHT-B	LK 37.5	WHT-BLK 15.2		
Fa mc	resistance(at 20°C)	Ω	BLK-RE	ED 37.5	BLK-RE	ED 37.5	BLK-RE	ED 15.2	
			RED-W	HT 37.5	RED-W	HT 37.5	RED-WHT 15.2		
	Dimensions W×H×D	mm	800×550×285		800×550×285		840×850×330		
	Weight	kg		3	37		53		
	Sound level *1	dB	4		47	48	53	55	
	Fan speed(High/Low, High/Med/Low)	rpm	810/750	880 /810 /650	840/ 760	880/ 800/ 630	800/ 480	800/ 650	
	Fan speed regulator		2	3	2 3		2	2	
	Refrigerant filling capacity(R410A)	kg	0.9	90	1.0	05	1.	60	
_ s	Refrigerating oil (Model)	СС	320 (1	NEO22)	320 (1	NEO22)	450 (I	NEO22)	
Special remarks	Thermistor RT61 (at 0°C)	kΩ	32	2.6	32	2.6	_	_	
em em	Thermistor RT62 (at 100℃)	kΩ	13	3.4	13	3.4	_	_	
" -	Thermistor RT64 (at 50°C)	kΩ	1	7	1	7	_	_	
	Thermistor RT65 (at 25°C)	kΩ	1	0	1	0	_		
	Thermistor RT61 (at 25℃)		_	_	_	_	10.0		
	Thermistor RT62 (at 100°C) kΩ		_	_	_	_	13.4		
	Thermistor RT64 (at 50°C) kΩ		_	_	_	_	17.0		
	Thermistor RT65 (at 25°C)	kΩ	_	_	_	_	10.0		
	Thermistor RT68 (at 25°C)	kΩ	_	_	_	_	10	0.0	

NOTE : Test conditions are based on ISO 5151.

Cooling : Indoor Outdoor Dry-bulb temperature 27°C Wet-bulb temperature 19°C Outdoor Dry-bulb temperature 35°C Wet-bulb temperature 24°C Heating : Indoor Dry-bulb temperature 20°C Wet-bulb temperature 15°C Outdoor Dry-bulb temperature 7°C Wet-bulb temperature 6°C Refrigerant piping length (one way): 5m

*1 Measured under rated operating frequency.

Specifications and rating conditions of main electric parts

Item	Model	MFZ-KA25VA MFZ-KA35VA MFZ-KA50VA
Fuse	(F11)	T3.15AL 250V
Damper lock motor Right	(ML1)	12V 300Ω
Damper lock motor Left	(ML2)	12V 300Ω
Horizontal vane motor	(MV1)	12V 300Ω
Damper motor	(MV2)	12V 300Ω
Varistor	(NR11)	ERZV14D471

OCTAVE BAND SOUND PRESSURE LEVEL, dB re 0.0002 MICRO BAR


NOISE CRITERIA CURVES

MFZ-KA25VA

FAN SPEED	FUNCTION	SPL(dB(A))	LINE
Super High	COOLING	37	•—•
ouper riigir	HEATING	37	0—0


MFZ-KA35VA

FAN SPEED	FUNCTION	SPL(dB(A))	LINE
Super High	COOLING	38	•—•
Caperriigii	HEATING	38	○

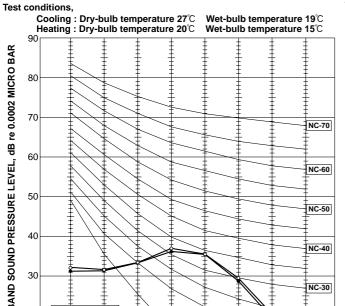

500

Test conditions, Cooling : Dry-bulb temperature 27 $^{\circ}$ C Heating : Dry-bulb temperature 20 $^{\circ}$ C Wet-bulb temperature 19℃ Wet-bulb temperature 15℃

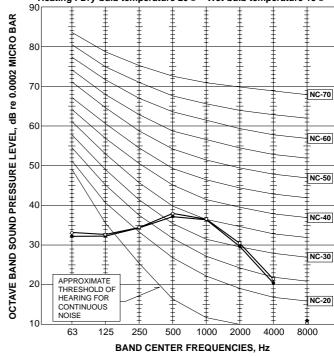

MFZ-KA50VA

20

APPROXIMATE

THRESHOLD OF HEARING FOR


CONTINUOUS


FAN SPEED	FUNCTION	SPL(dB(A))	LINE
Super High	COOLING	43	•—•
Superriigii	HEATING	44	— о

1000

BAND CENTER FREQUENCIES, Hz

2000

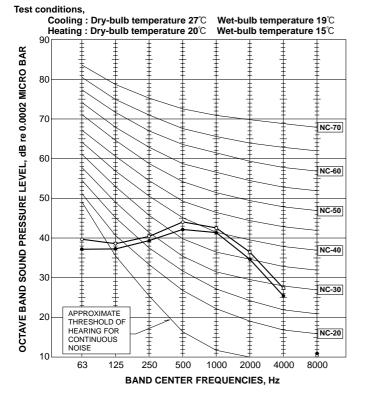

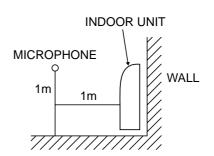


NC-20


5

OUTLINES AND DIMENSIONS

MFZ-KA25VA MFZ-KA35VA MFZ-KA50VA

INDOOR UNIT

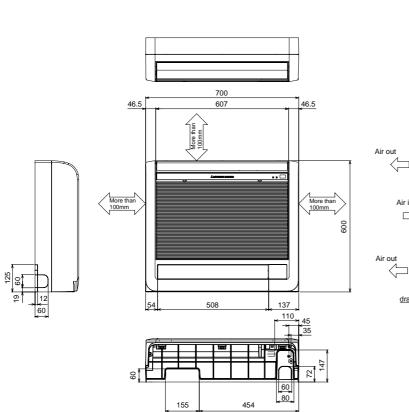

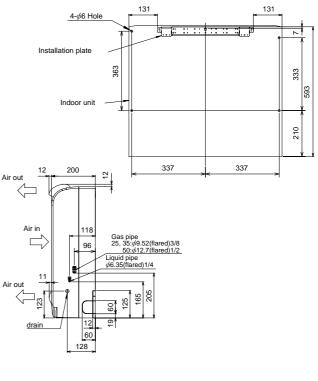


Unit: mm

6

WIRING DIAGRAM

MFZ-KA25VA MFZ-KA35VA MFZ-KA50VA

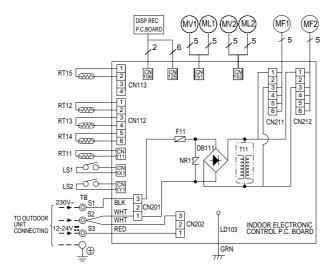

SYMBOL	NAME	SYMBOL	NAME	SYMBOL	NAME
DB111	DIODE STACK	ML2	DAMPER LOCK MOTOR (LEFT)	RT14	INDOOR COIL THERMISTOR (MAIN 2)
F11	FUSE (T3.15AL250V)	MV1	HORIZONTAL VANE MOTOR	TR15	INDOOR COIL THERMISTOR (MAIN 3)
LS1	DAMPER LIMIT SWITCH (OPEN)	MV2	DAMPER MOTOR	T11	TRANSFORMER
LS2	DAMPER LIMIT SWITCH (CLOSE)	NR11	VARISTOR		
MF1	UPPER INDOOR FAN MOTOR	RT11	ROOM TEMPERATURE THERMISTOR		
MF2	LOWER INDOOR FAN MOTOR	RT12	INDOOR COIL THERMISTOR (MAIN 1)		
ML1	DAMPER LOCK MOTOR (RIGHT)	RT13	INDOOR COIL THERMISTOR (SUB)		

NOTE:1. About the outdoor side electric wiring refer to the outdoor unit electric wiring diagram for servicing.

- 2. Use copper conductors only. (For field wiring)
- 3. Symbols below indicate.
- ©: Terminal block, : Connector

7

REFRIGERANT SYSTEM DIAGRAM

MFZ-KA25VA MFZ-KA35VA MFZ-KA50VA

INDOOR UNIT

Refrigerant pipe ϕ 9.52 (MFZ-KA25/35VA) Refrigerant pipe ϕ 12.7 (MFZ-KA50VA) (with heat insulator) Indoor coil Indoor thermistor heat RT12 (main) exchanger Flared connection Distributor Indoor coil thermistor RT12, RT14, RT15 (main) RT13 (sub) Room temperature thermistor RT11 Flared connection Refrigerant pipe ϕ 6.35 → Refrigerant flow in cooling (with heat insulator)

Unit : mm

----> Refrigerant flow in heating

PERFORMANCE CURVES

MFZ-KA25VA MFZ-KA35VA MFZ-KA50VA

The standard data contained in these specifications apply only to the operation of the air conditioner under normal condition. Operating conditions vary according to the areas where these units are installed. The following information has been provided to clarify the operating characteristics of the air conditioner under the conditions indicated by the performance curve.

(1) GUARANTEED VOLTAGE

(2) AIR FLOW

Air flow should be set at MAX.

(3) MAIN READINGS

COOLING

- (1) Indoor intake air wet-bulb temperature: W.B. °C
- (2) Indoor outlet air wet-bulb temperature: W.B. °C
- (3) Outdoor intake air dry-bulb temperature : D.B. °C
- (4) Total input: W


HEATING


- (1) Indoor intake air dry-bulb temperature: D.B. °C
- (2) Indoor outlet air dry-bulb temperature : D.B. °C
- (3) Outdoor intake air wet-bulb temperature: W.B. °C
- (4) Total input: W


Indoor air wet/dry-bulb temperature difference on the side of the following chart shows the difference between the indoor intake air wet/dry-bulb temperature and the indoor outlet air wet/dry-bulb temperature for your reference at service.


How to measure the indoor air wet-bulb/dry-bulb temperature difference

- 1. Attach at least 2 sets of wet-and-dry-bulb thermometers to the indoor air inlet as shown in the figure, and at least 2 sets of wet-and-dry-bulb thermometers to the indoor air outlet. The thermometers must be attached to the position where air speed is high.
- 2. Attach at least 2 sets of wet-and-dry-bulb thermometers to the outdoor air inlet. Cover the thermometers to prevent direct rays of the sun.
- 3. Check that the air filter is cleaned.
- 4. Open windows and doors of the room.
- 5. Press the EMERGENCY OPERATION switch once to start the COOL(HEAT) MODE.
- 6. When system stabilizes after more than 15 minutes, measure temperature and take an average temperature.
- 7. 10 minutes later, measure temperature again and check that the temperature does not change.

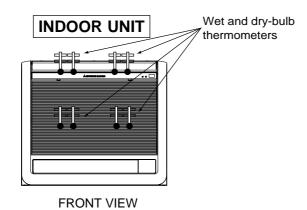


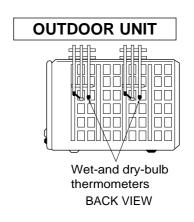

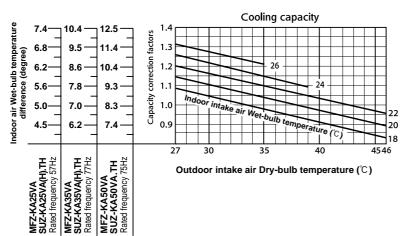

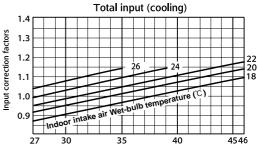

Outdoor intake air Dry-bulb temperature (°C)

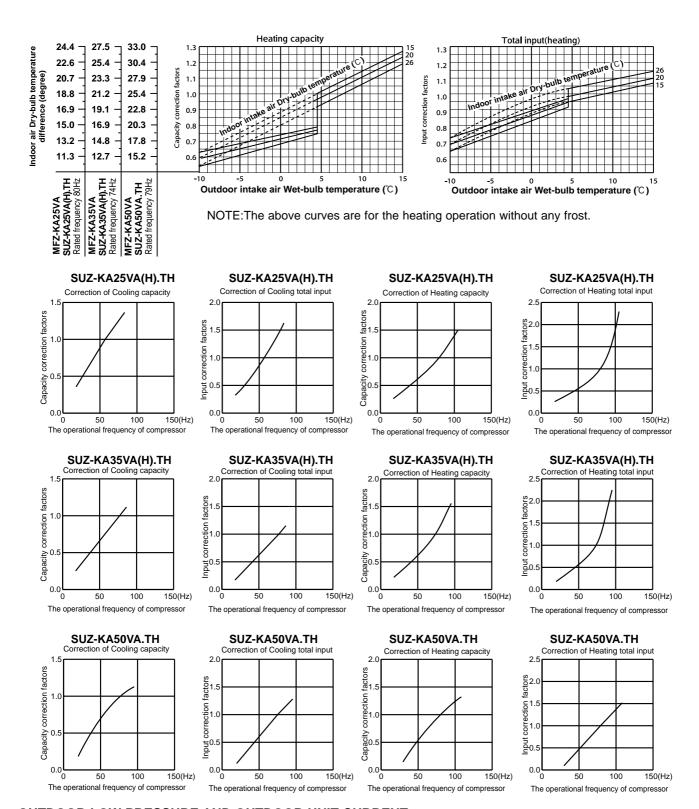

OUTDOOR LOW PRESSURE AND OUTDOOR UNIT CURRENT

- <How to operate fixed-frequency operation (Test run operation)>
- 1. Press the EMERGENCY OPERATION switch or the Test button to COOL or HEAT mode.
- 2. Test run operation starts and continue to operate for 30 minutes.
- Compressor starts at rated frequency in COOL mode or 58Hz in HEAT mode.
- 4. Indoor fan operates at High speed.
- 5. After 30 minutes, test run operation finishes and EMERGENCY OPERATION starts.
- To cancel test run operation (EMERGENCY OPERATION), press the EMERGENCY OPERATION switch or the ON/OFF button on remote controller.

NOTE: The unit of pressure has been changed to MPa on the international system of units (SI unit system).

The conversion factor is: 1(MPa [Gauge]) =10.2(kgf/cm² [Gauge])

OUTDOOR LOW PRESSURE AND OUTDOOR UNIT CURRENT COOLING operation


① Both indoor and outdoor unit are under the same temperature/humidity condition.


② Air flow : High speed


③ Operational frequency : 57Hz (SUZ-KA25VA(H).TH)


77Hz (SUZ-KA35VA(H).TH) 75Hz (SUZ-KA50VA.TH)


Dry-bulb temperature	Relative humidity(%)
20	50
25	60
30	70

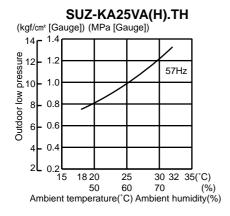


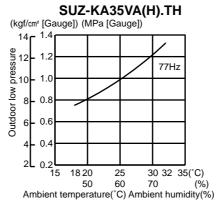

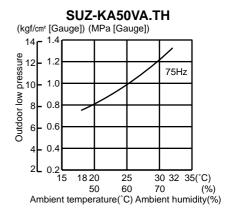

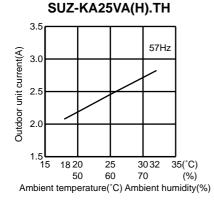

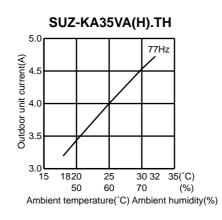

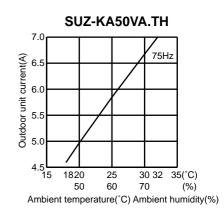


HEATING operation


Condition indoor: Dry bulb temperature 20.0°C


Wet bulb temperature 14.5°C

Condition outdoor: Dry bulb temperature 2,7,15,20.0°C

Wet bulb temperature 1,6,12,14.5°C

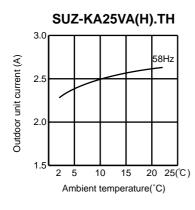

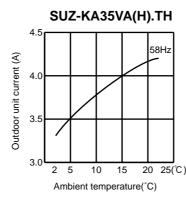

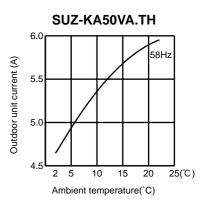

PERFORMANCE DATA COOLING operation Rated frequency 57Hz MFZ-KA25VA/ SUZ-KA25VA.TH, SUZ-KA25VAH.TH

CAPACITY: 2.5(kW) SHF: 0.66 INPUT: 580(W)

NOOR	OAI AUI	TY: 2.5(I	ivv) C	,, ,, , , 0	.00 11	01.3	JU(VV)			OUTDO	OR	DB(℃)						
	INDOOR	INDOOR			21											;	30	
18	DB(℃)		Q			INPUT	Q			INPUT	Q			INPUT	Q			INPUT
	21	18	2.94								2.70				2.60			534
22 20 3.06 1.28 6.04 4.87 2.94 1.18 0.40 5.26 5.14 0.40 5.28 5.75 3.00 0.86 0.28 5.57 3.00 0.84 0.28 5.11 2.80 0.81 0.28 5.75 3.00 1.05 0.80 0.81 0.28 5.75 3.00 1.05 0.60 6.55 5.34 23 22 3.09 1.03 2.03 5.05 0.09 0.02 5.07 0.00 0.09 0.32 5.05 3.00 0.00 487 2.00 0.00 487 2.00 0.00 487 2.00 0.00 487 2.00 0.00 487 2.00 0.00 480 2.00 1.00 0.00 5.00 0.00	21	20	3.06	1.10	0.36	487	2.94	1.06	0.36	516	2.85	1.03	0.36	528	2.75	0.99	0.36	551
22 319 0.89 0.28 505 3.08 0.86 0.28 537 3.00 0.84 0.28 510 2.80 0.14 0.56 534 23 20 3.06 1.35 0.44 487 2.94 1.29 0.44 516 2.85 1.28 0.52 537 3.00 0.96 0.32 551 1.28 0.92 0.92 525 24 18 2.94 1.60 0.60 487 2.94 1.60 0.60 360 0.93 3.37 0.00 0.32 551 2.88 0.35 0.60 537 3.00 0.86 0.50 1.08 0.60 487 2.70 1.62 0.50 500 0.08 0.88 0.23 537 3.00 0.80 0.32 581 0.89 0.22 587 2.81 0.70 1.28 0.52 1.60 0.63 0.88 0.23 0.90 0.85 516 0.28 1.28	22	18	2.94	1.53	0.52	464	2.81	1.46	0.52	487	2.70	1.40	0.52	510	2.60	1.35	0.52	534
33 18 2.94 6.65 0.56 484 2.81 1.58 0.56 487 2.70 1.51 0.56 510 0.56 520 0.44 528 2.75 1.21 0.44 551 23 22 3.19 1.02 0.32 505 3.08 0.98 0.32 537 3.00 0.96 0.32 551 2.88 0.92 0.32 554 24 18 2.94 1.76 0.60 484 2.81 1.89 0.60 487 2.70 1.62 0.60 510 2.60 551 2.82 1.81 0.60 487 2.70 1.62 0.60 551 2.88 1.04 0.06 560 3.08 1.81 0.80 6.81 3.81 1.81 1.80 0.60 487 2.70 1.88 524 3.05 0.06 1.82 2.91 1.80 0.82 2.82 2.75 1.46 0.65 3.82 2.25	22	20	3.06	1.23	0.40	487	2.94	1.18	0.40	516	2.85	1.14	0.40	528	2.75	1.10	0.40	551
23 20 3.06 1.35 0.44 487 2.94 1.29 0.44 516 2.85 1.25 0.44 521 0.44 525 2.75 1.21 0.44 551 2.88 0.92 0.32 574 24 18 2.94 1.76 0.60 487 2.81 1.69 0.60 487 2.70 1.62 0.60 551 2.86 1.56 1.60 0.60 487 2.71 1.62 0.60 551 2.81 1.50 0.64 2.81 1.37 0.48 528 2.75 1.04 0.83 531 3.03 0.77 0.24 557 3.15 0.76 0.24 574 3.05 0.61 0.85 0.83 0.82 2.82 3.03 0.90 0.84 2.81 1.80 0.64 487 2.70 1.73 0.64 574 3.05 0.61 0.85 2.82 2.75 1.43 0.52 2.82 2.75 1.43<	22	22	3.19	0.89	0.28	505	3.08	0.86	0.28	537	3.00	0.84	0.28	551	2.88	0.81	0.28	574
22 3.10 1.02 0.32 505 0.80 0.82 537 3.00 0.96 0.32 551 2.88 0.92 0.32 574 24 120 3.06 1.77 0.48 487 2.94 1.41 0.48 557 3.00 1.62 1.60 3.05 1.75 1.32 0.48 551 2.87 1.75 1.04 557 24 22 3.19 1.15 0.24 528 3.23 1.77 0.24 557 3.15 0.6 2.04 505 0.73 0.24 603 25 20 3.06 1.59 0.52 487 2.94 1.53 0.52 516 2.85 1.43 0.52 551 1.43 0.52 551 1.43 0.52 551 1.43 0.52 528 1.23 0.04 537 3.00 1.20 0.40 515 1.68 1.65 2.65 2.85 1.23 0.04 <t< td=""><td>23</td><td>18</td><td>2.94</td><td>1.65</td><td>0.56</td><td>464</td><td>2.81</td><td>1.58</td><td>0.56</td><td>487</td><td>2.70</td><td>1.51</td><td>0.56</td><td>510</td><td>2.60</td><td>1.46</td><td>0.56</td><td>534</td></t<>	23	18	2.94	1.65	0.56	464	2.81	1.58	0.56	487	2.70	1.51	0.56	510	2.60	1.46	0.56	534
24 18 2.94 1.76 0.60 464 2.91 1.41 0.88 1.67 2.85 1.37 0.48 520 1.52 0.86 534 24 22 3.19 1.15 0.36 505 3.08 1.11 0.36 557 3.00 1.08 0.86 551 2.88 1.04 0.05 574 24 24 3.35 0.80 0.64 528 3.23 0.77 0.24 557 3.15 0.76 0.24 574 3.05 0.73 0.24 674 3.05 0.73 0.24 674 3.05 0.73 0.24 674 3.05 0.73 0.24 674 3.05 0.72 487 2.94 1.80 0.64 487 2.70 1.73 0.64 2.81 1.20 0.02 2.82 1.73 3.01 1.20 0.40 551 2.83 1.04 0.02 2.82 1.23 1.04 0.02 2.82	23	20	3.06	1.35	0.44	487	2.94	1.29	0.44	516	2.85	1.25	0.44	528	2.75	1.21	0.44	551
24 20 3.08 1.47 0.48 6.54 2.85 1.37 0.48 6.28 2.75 1.04 0.85 5.01 2.88 1.04 0.80 5.51 2.88 1.04 0.80 6.24 2.24 2.43 3.35 0.80 0.24 528 3.23 0.77 0.24 557 3.15 0.76 0.24 554 0.35 0.30 1.03 0.64 487 2.77 0.24 557 3.15 0.76 0.24 550 0.26 533 0.94 0.80 0.50 3.08 1.23 0.40 557 3.15 0.86 1.04 550 557 3.15 0.80 0.28 528 0.23 0.04 557 3.15 0.80 0.28 2.75 1.04 0.45 550 0.08 0.82 0.28 0.28 0.28 0.28 0.28 0.29 0.28 0.28 0.29 0.28 0.28 0.29 0.28 0.28 0.29	23	22	3.19	1.02	0.32	505	3.08	0.98	0.32	537	3.00	0.96	0.32	551	2.88	0.92	0.32	574
24 22 3.15 0.36 505 3.08 1.11 0.36 537 3.00 1.08 0.36 551 2.88 1.04 0.36 574 25 18 2.94 1.88 0.64 464 2.81 1.80 0.64 487 2.70 1.73 0.64 510 0.02 467 526 2.0 3.06 1.59 0.52 487 2.94 1.53 0.52 516 2.85 1.48 0.52 528 2.75 1.43 0.52 551 2.83 3.09 0.28 557 3.15 0.88 0.28 574 1.48 0.03 0.05 0.04 552 3.23 0.90 0.28 557 3.15 0.88 0.28 2.75 1.68 0.05 516 2.85 1.80 0.86 2.82 1.75 1.48 0.05 516 2.85 1.80 0.86 2.80 1.75 1.68 2.82 1.25 1.43 0.83 <td>24</td> <td>18</td> <td>2.94</td> <td>1.76</td> <td>0.60</td> <td>464</td> <td>2.81</td> <td>1.69</td> <td>0.60</td> <td>487</td> <td>2.70</td> <td>1.62</td> <td>0.60</td> <td>510</td> <td>2.60</td> <td>1.56</td> <td>0.60</td> <td>534</td>	24	18	2.94	1.76	0.60	464	2.81	1.69	0.60	487	2.70	1.62	0.60	510	2.60	1.56	0.60	534
24 2,4 3,35 0,80 0,24 528 3,23 0,77 0,24 557 3,15 0,76 0,24 574 3,05 0,73 0,24 603 25 20 3,06 1,59 0,52 487 2,94 1,53 0,52 2,15 2,00 1,66 0,64 2,52 5,14 0,52 557 3,05 516 2,85 1,43 0,52 557 3,05 1,56 2,87 1,43 0,52 557 3,05 0,16 2,88 1,15 0,04 557 3,05 0,04 557 3,05 0,12 0,04 557 3,05 0,04 551 2,88 1,15 0,05 0,05 3,06 6,02 3,03 0,06 0,02 0,06 0,02 0,06 0,02 0,06 0,02 0,06 0,02 0,06 0,02 0,06 0,02 0,06 0,02 0,06 0,02 0,06 0,02 0,06 0,02	24	20	3.06	1.47	0.48	487	2.94	1.41	0.48	516	2.85	1.37	0.48	528	2.75	1.32	0.48	551
Section Sect	24	22	3.19	1.15	0.36	505	3.08	1.11	0.36	537	3.00	1.08	0.36	551	2.88	1.04	0.36	574
25 20 3.06 1.59 0.52 487 2.94 1.53 0.52 516 2.85 1.48 0.52 526 24 3.35 0.94 0.28 528 3.23 0.90 0.28 557 3.15 0.88 0.28 1.74 3.05 0.86 0.28 633 26 18 2.94 2.00 0.88 464 2.81 1.91 0.68 487 2.70 1.84 0.68 510 2.60 1.77 0.68 534 26 22 3.19 1.40 0.44 556 56 56 56 588 5.20 1.75 4.65 56 56 56 588 1.60 0.60 2.00 6.02 3.06 1.77 0.03 588 3.23 1.03 0.02 577 3.15 1.01 0.02 574 3.05 0.98 0.02 603 2.00 6.04 2.02 1.02 50.02 50.06 50	24	24	3.35	0.80	0.24	528	3.23	0.77	0.24	557	3.15	0.76	0.24	574	3.05	0.73	0.24	603
25 24 3.95 9.40 0.28 5528 3.23 0.90 0.28 5577 3.15 0.80 0.28 574 3.05 0.94 0.28 528 3.23 0.90 0.28 5577 3.15 0.80 0.28 574 3.05 0.85 0.28 603 26 18 2.94 0.05 0.84 2.81 1.91 0.68 487 2.70 1.84 2.81 1.01 0.32 574 3.05 0.56 516 2.85 1.60 0.56 528 2.75 1.54 0.56 551 26 22 3.79 1.40 0.44 505 3.03 0.67 0.20 557 3.55 0.67 0.20 557 3.15 0.01 0.32 575 1.52 0.02 603 3.20 0.60 0.20 603 3.20 0.60 0.20 603 3.20 0.60 612 2.20 3.03 3.03 0.60	25	18	2.94	1.88	0.64	464	2.81	1.80	0.64	487	2.70	1.73	0.64	510	2.60	1.66	0.64	534
25 24 3.35 0.94 0.28 528 3.23 0.90 0.28 557 3.15 0.88 0.28 574 3.05 0.85 0.28 603 26 120 3.06 1.72 0.58 484 2.94 1.65 0.56 2.86 1.00 0.56 584 0.64 0.56 518 2.00 0.68 514 0.56 518 2.00 0.57 0.20 557 3.00 1.32 0.44 551 2.88 1.27 0.44 551 2.6 2.35 1.07 0.32 528 3.23 1.03 0.32 557 1.01 1.02 574 3.05 0.60 0.20 560 0.20 557 3.15 1.01 1.02 500 0.64 0.20 0.64 0.20 662 2.0 3.03 1.64 0.81 1.03 0.65 1.28 1.28 1.02 0.64 1.20 0.62 1.22 1.03 0.65 <td>25</td> <td>20</td> <td>3.06</td> <td>1.59</td> <td>0.52</td> <td>487</td> <td>2.94</td> <td>1.53</td> <td>0.52</td> <td>516</td> <td>2.85</td> <td>1.48</td> <td>0.52</td> <td>528</td> <td>2.75</td> <td>1.43</td> <td>0.52</td> <td>551</td>	25	20	3.06	1.59	0.52	487	2.94	1.53	0.52	516	2.85	1.48	0.52	528	2.75	1.43	0.52	551
26 18 2.94 2.00 0.68 464 2.81 1.91 0.68 487 2.70 1.84 0.68 510 2.60 1.77 0.68 534 26 22 3.19 1.40 0.44 505 3.08 1.35 0.44 537 3.00 1.32 0.44 574 2.81 1.20 0.44 574 26 24 3.35 1.07 0.32 528 3.23 1.03 0.32 557 3.15 1.01 0.32 574 3.05 0.98 0.20 662 26 3.45 0.69 0.20 557 3.35 0.67 0.20 586 3.30 0.66 0.20 603 3.20 0.64 0.20 621 27 20 3.06 1.84 0.60 487 2.94 1.76 0.60 516 2.85 1.71 0.00 528 2.75 1.65 0.65 27 26	25	22	3.19	1.28	0.40	505	3.08	1.23	0.40	537	3.00	1.20	0.40	551	2.88	1.15	0.40	574
26 20 3.06 1.72 0.56 487 2.94 1.65 0.56 516 2.85 1.60 0.56 528 2.75 1.54 0.56 551 26 22 3.35 1.07 0.32 528 3.23 1.03 0.32 557 3.16 1.01 0.32 574 3.05 0.66 0.20 563 3.20 0.64 0.20 508 0.32 0.64 0.20 586 3.30 0.66 0.20 603 3.20 0.64 0.20 0.62 627 188 2.94 2.12 0.72 464 2.81 2.03 0.72 464 2.81 2.03 3.06 1.87 0.72 487 2.03 3.06 0.84 505 3.08 1.48 0.48 537 3.00 1.44 0.48 551 2.88 1.72 0.84 5.72 3.15 0.13 0.96 574 3.05 1.10 0.52 557 3.55	25	24	3.35	0.94	0.28	528	3.23	0.90	0.28	557	3.15	0.88	0.28	574	3.05	0.85	0.28	603
26 22 3.19 1.40 0.44 505 3.08 1.35 0.44 537 3.00 1.32 0.44 574 2.88 1.27 0.44 574 26 26 3.45 0.69 0.20 557 3.35 0.06 0.20 603 3.20 0.64 0.20 621 27 18 2.94 2.12 0.72 464 2.81 2.03 0.72 487 2.70 1.94 0.72 510 2.60 1.87 0.72 534 27 20 3.06 1.84 0.60 487 2.94 1.76 0.60 516 2.85 1.71 0.60 56 3.05 1.08 557 3.15 1.06 0.60 516 2.85 1.73 3.06 1.44 0.48 551 1.80 6.61 2.85 1.71 0.60 4.84 2.81 1.10 0.60 4.87 2.94 1.88 0.46 7.26 <t< td=""><td>26</td><td>18</td><td>2.94</td><td>2.00</td><td>0.68</td><td>464</td><td>2.81</td><td>1.91</td><td>0.68</td><td>487</td><td>2.70</td><td>1.84</td><td>0.68</td><td>510</td><td>2.60</td><td>1.77</td><td>0.68</td><td>534</td></t<>	26	18	2.94	2.00	0.68	464	2.81	1.91	0.68	487	2.70	1.84	0.68	510	2.60	1.77	0.68	534
26 24 3.35 1.07 0.32 528 3.23 1.03 0.32 557 3.15 1.01 0.32 574 3.05 0.98 0.32 603 26 26 3.45 0.69 0.20 557 3.35 0.67 0.20 586 3.30 0.66 0.20 603 3.20 0.64 0.20 621 27 18 2.94 1.76 0.60 516 2.28 1.71 0.60 528 2.75 1.65 0.60 551 27 22 3.19 1.53 0.48 505 3.08 1.48 0.48 537 3.00 1.44 0.48 551 1.60 0.60 557 3.55 1.71 0.60 554 3.05 1.10 0.36 577 3.00 1.44 0.48 537 3.00 1.44 0.60 524 2.83 1.22 0.04 603 3.20 0.77 0.24 621 2	26	20	3.06	1.72	0.56	487	2.94	1.65	0.56	516	2.85	1.60	0.56	528	2.75	1.54	0.56	551
26 26 3.45 0.69 0.20 557 3.35 0.67 0.20 586 3.30 0.66 0.20 603 3.20 0.64 0.20 621 27 18 2.94 2.12 0.72 464 2.81 2.03 0.72 467 2.94 1.76 0.60 516 2.85 1.71 0.60 528 2.75 1.65 0.60 551 27 22 3.19 1.53 0.48 505 3.08 1.48 0.48 537 3.00 1.44 0.48 551 2.88 1.38 0.48 574 27 24 3.35 1.21 0.36 557 3.15 1.13 0.36 574 3.05 1.10 0.36 603 27 26 3.45 0.83 0.24 557 3.35 0.80 0.24 580 3.00 0.76 510 2.60 1.98 0.75 517 28	26	22	3.19	1.40	0.44	505	3.08	1.35	0.44	537	3.00	1.32	0.44	551	2.88	1.27	0.44	574
27 18 2.94 2.12 0.72 464 2.81 2.03 0.72 487 2.70 1.94 0.72 510 2.60 1.87 0.72 534 27 20 3.06 1.84 0.60 487 2.94 1.76 0.60 516 2.85 1.71 0.60 528 2.75 1.65 0.60 551 27 24 3.35 1.21 0.36 528 3.23 1.16 0.36 557 3.05 0.80 524 3.55 3.15 1.13 0.36 528 3.23 1.16 0.36 557 3.35 0.80 0.24 586 3.30 0.79 0.24 603 3.20 0.77 0.24 621 28 18 2.94 2.23 0.76 464 2.81 2.14 0.76 487 2.70 2.05 0.76 510 2.60 1.98 0.64 551 2.88 1.81 2.94	26	24	3.35	1.07	0.32	528	3.23	1.03	0.32	557	3.15	1.01	0.32	574	3.05	0.98	0.32	603
27 20 3.06 1.84 0.60 487 2.94 1.76 0.60 516 2.85 1.71 0.60 528 2.75 1.65 0.60 551 27 22 3.19 1.53 0.48 505 3.08 1.48 0.48 537 3.00 1.44 0.48 551 2.88 1.38 0.48 574 27 26 3.45 0.33 0.24 557 3.35 0.80 0.24 586 3.30 0.79 0.24 603 3.20 0.77 0.24 603 28 18 2.94 2.23 0.76 464 2.81 2.14 0.76 487 2.70 2.05 0.76 510 2.60 1.98 0.76 551 28 20 3.06 1.66 0.52 505 3.08 1.60 0.52 537 3.00 1.56 0.52 2.51 2.88 1.50 0.52 574	26	26	3.45	0.69	0.20	557	3.35	0.67	0.20	586	3.30	0.66	0.20	603	3.20	0.64	0.20	621
27 22 3.19 1.53 0.48 505 3.08 1.48 0.48 537 3.00 1.44 0.48 551 2.88 1.38 0.48 574 27 26 3.45 0.83 0.24 557 3.35 1.16 0.36 557 3.15 1.13 0.36 574 3.05 1.10 0.36 603 28 18 2.94 2.23 0.76 464 2.81 2.14 0.76 487 2.70 2.05 0.76 500 1.98 0.76 536 28 20 3.06 1.96 0.64 487 2.94 1.88 0.64 516 2.85 1.82 0.64 528 2.75 1.76 0.64 551 2.88 1.24 0.40 574 3.05 1.22 0.40 552 551 2.88 1.50 0.52 574 28 22 3.19 1.70 0.28 505 3.08 <td>27</td> <td>18</td> <td>2.94</td> <td>2.12</td> <td>0.72</td> <td>464</td> <td>2.81</td> <td>2.03</td> <td>0.72</td> <td>487</td> <td>2.70</td> <td>1.94</td> <td>0.72</td> <td>510</td> <td>2.60</td> <td>1.87</td> <td>0.72</td> <td>534</td>	27	18	2.94	2.12	0.72	464	2.81	2.03	0.72	487	2.70	1.94	0.72	510	2.60	1.87	0.72	534
27 24 3.35 1.21 0.36 528 3.23 1.16 0.36 557 3.15 1.13 0.36 574 3.05 1.10 0.36 603 27 26 3.45 0.83 0.24 557 3.35 0.80 0.24 586 3.30 0.79 0.24 603 3.20 0.77 0.24 621 28 18 2.94 2.23 0.76 464 2.81 2.14 0.76 487 2.94 1.88 0.64 516 2.85 1.82 0.64 528 2.75 1.76 0.64 551 28 22 3.19 1.66 0.52 555 3.08 1.60 0.52 537 3.00 1.56 0.52 551 2.88 1.50 0.62 557 28 24 3.35 1.97 0.28 557 3.35 0.94 0.28 586 3.30 0.92 0.28 603 3.20 <td>27</td> <td>20</td> <td>3.06</td> <td>1.84</td> <td>0.60</td> <td>487</td> <td>2.94</td> <td>1.76</td> <td>0.60</td> <td>516</td> <td>2.85</td> <td>1.71</td> <td>0.60</td> <td>528</td> <td>2.75</td> <td>1.65</td> <td>0.60</td> <td>551</td>	27	20	3.06	1.84	0.60	487	2.94	1.76	0.60	516	2.85	1.71	0.60	528	2.75	1.65	0.60	551
27 26 3.45 0.83 0.24 557 3.35 0.80 0.24 586 3.30 0.79 0.24 603 3.20 0.77 0.24 621 28 18 2.94 2.23 0.76 464 2.81 2.14 0.76 487 2.70 2.05 0.76 510 2.60 1.98 0.76 534 28 20 3.06 1.96 0.52 505 3.08 1.60 0.52 537 3.00 1.56 0.52 557 2.60 0.52 557 3.05 1.94 0.40 557 3.15 1.26 0.40 574 3.05 1.22 0.40 603 3.20 0.90 0.28 603 3.20 0.90 0.28 621 2.25 0.80 487 2.70 2.16 0.80 510 2.60 0.40 0.80 2.26 3.45 1.97 0.56 505 3.08 1.72 0.68 516	27	22	3.19	1.53	0.48	505	3.08	1.48	0.48	537	3.00	1.44	0.48	551	2.88	1.38	0.48	574
28 18 2.94 2.23 0.76 464 2.81 2.14 0.76 487 2.70 2.05 0.76 510 2.60 1.98 0.76 534 28 20 3.06 1.96 0.64 487 2.94 1.88 0.64 516 2.85 1.82 0.64 528 2.75 1.76 0.64 551 28 22 3.19 1.66 0.52 505 3.08 1.60 0.52 537 3.00 1.56 0.52 551 2.88 1.50 0.52 574 28 24 3.35 1.34 0.40 586 3.30 0.92 0.28 603 3.20 0.90 0.28 521 29 18 2.94 2.35 0.80 464 2.81 2.25 0.80 487 2.70 2.16 0.80 510 2.60 2.08 0.80 534 29 20 3.06 2.08	27	24	3.35	1.21	0.36	528	3.23	1.16	0.36	557	3.15	1.13	0.36	574	3.05	1.10	0.36	603
28 20 3.06 1.96 0.64 487 2.94 1.88 0.64 516 2.85 1.82 0.64 528 2.75 1.76 0.64 551 28 22 3.19 1.66 0.52 505 3.08 1.60 0.52 537 3.00 1.56 0.52 551 2.88 1.50 0.52 574 28 24 3.35 1.34 0.40 528 3.23 1.29 0.40 557 3.15 1.26 0.40 574 3.05 1.22 0.40 603 29 18 2.94 2.35 0.80 464 2.81 2.25 0.80 487 2.70 2.16 0.80 510 2.60 2.08 0.80 88 1.72 0.66 537 3.00 1.68 0.56 551 2.88 1.61 0.56 574 29 24 3.35 1.47 0.44 528 3.23 1.42 <td>27</td> <td>26</td> <td>3.45</td> <td>0.83</td> <td>0.24</td> <td>557</td> <td>3.35</td> <td>0.80</td> <td>0.24</td> <td>586</td> <td>3.30</td> <td>0.79</td> <td>0.24</td> <td>603</td> <td>3.20</td> <td>0.77</td> <td>0.24</td> <td>621</td>	27	26	3.45	0.83	0.24	557	3.35	0.80	0.24	586	3.30	0.79	0.24	603	3.20	0.77	0.24	621
28 22 3.19 1.66 0.52 505 3.08 1.60 0.52 537 3.00 1.56 0.52 551 2.88 1.50 0.52 574 28 24 3.35 1.34 0.40 528 3.23 1.29 0.40 557 3.15 1.26 0.40 574 3.05 1.22 0.40 603 28 26 3.45 0.97 0.28 557 3.35 0.94 0.28 586 3.30 0.92 0.28 603 3.20 0.90 0.28 621 29 18 2.94 2.35 0.80 464 2.81 2.25 0.80 487 2.70 2.16 0.80 510 2.60 0.80 551 2.88 1.94 0.68 551 2.88 1.60 0.65 537 3.85 1.94 0.68 551 2.88 1.61 0.65 544 2.94 2.12 0.72 565 5	28	18	2.94	2.23	0.76	464	2.81	2.14	0.76	487	2.70	2.05	0.76	510	2.60	1.98	0.76	534
28 24 3.35 1.34 0.40 528 3.23 1.29 0.40 557 3.15 1.26 0.40 574 3.05 1.22 0.40 603 28 26 3.45 0.97 0.28 557 3.35 0.94 0.28 586 3.30 0.92 0.28 603 3.20 0.90 0.28 621 29 18 2.94 2.35 0.80 464 2.81 2.25 0.80 487 2.70 2.16 0.80 510 2.60 2.08 0.80 534 29 20 3.06 2.08 0.86 487 2.94 2.00 0.68 516 2.85 1.94 0.68 528 2.75 1.87 0.68 551 29 24 3.35 1.47 0.44 528 3.23 1.42 0.44 557 3.15 1.39 0.44 574 3.05 1.40 0.44 574 3.05 <td>28</td> <td>20</td> <td>3.06</td> <td>1.96</td> <td>0.64</td> <td>487</td> <td>2.94</td> <td>1.88</td> <td>0.64</td> <td>516</td> <td>2.85</td> <td>1.82</td> <td>0.64</td> <td>528</td> <td>2.75</td> <td>1.76</td> <td>0.64</td> <td>551</td>	28	20	3.06	1.96	0.64	487	2.94	1.88	0.64	516	2.85	1.82	0.64	528	2.75	1.76	0.64	551
28 26 3.45 0.97 0.28 557 3.35 0.94 0.28 586 3.30 0.92 0.28 603 3.20 0.90 0.28 621 29 18 2.94 2.35 0.80 464 2.81 2.25 0.80 487 2.70 2.16 0.80 510 2.60 2.08 0.80 534 29 20 3.06 2.08 0.68 487 2.94 2.00 0.68 516 2.85 1.94 0.68 528 2.75 1.87 0.68 551 29 24 3.35 1.47 0.44 528 3.23 1.42 0.44 557 3.15 1.39 0.44 574 3.05 1.34 0.44 603 29 26 3.45 1.10 0.32 557 3.35 1.07 0.32 586 3.30 1.06 0.32 603 3.20 1.02 0.32 621	28	22	3.19	1.66	0.52	505	3.08	1.60	0.52	537	3.00	1.56	0.52	551	2.88	1.50	0.52	574
29 18 2.94 2.35 0.80 464 2.81 2.25 0.80 487 2.70 2.16 0.80 510 2.60 2.08 0.80 534 29 20 3.06 2.08 0.68 487 2.94 2.00 0.68 516 2.85 1.94 0.68 528 2.75 1.87 0.68 551 29 22 3.19 1.79 0.56 505 3.08 1.72 0.56 537 3.00 1.68 0.56 551 2.88 1.61 0.56 574 29 24 3.35 1.47 0.44 528 3.23 1.42 0.44 557 3.15 1.39 0.44 574 3.05 1.34 0.44 603 29 26 3.45 1.10 0.32 557 3.35 1.07 0.32 586 3.30 1.06 0.32 603 3.20 1.02 0.32 621	28	24	3.35	1.34	0.40	528	3.23	1.29	0.40	557	3.15	1.26	0.40	574	3.05	1.22	0.40	603
29 20 3.06 2.08 0.68 487 2.94 2.00 0.68 516 2.85 1.94 0.68 528 2.75 1.87 0.68 551 29 22 3.19 1.79 0.56 505 3.08 1.72 0.56 537 3.00 1.68 0.56 551 2.88 1.61 0.56 574 29 24 3.35 1.47 0.44 528 3.23 1.42 0.44 557 3.15 1.39 0.44 574 3.05 1.34 0.44 603 29 26 3.45 1.10 0.32 557 3.35 1.07 0.32 586 3.30 1.06 0.32 603 3.20 1.02 0.32 621 30 18 2.94 2.47 0.84 487 2.94 2.12 0.72 516 2.85 2.05 0.72 528 2.75 1.98 0.72 551	28	26	3.45	0.97	0.28	557	3.35	0.94	0.28	586	3.30	0.92	0.28	603	3.20	0.90	0.28	621
29 22 3.19 1.79 0.56 505 3.08 1.72 0.56 537 3.00 1.68 0.56 551 2.88 1.61 0.56 574 29 24 3.35 1.47 0.44 528 3.23 1.42 0.44 557 3.15 1.39 0.44 574 3.05 1.34 0.44 603 29 26 3.45 1.10 0.32 557 3.35 1.07 0.32 586 3.30 1.06 0.32 603 3.20 1.02 0.32 621 30 18 2.94 2.47 0.84 464 2.81 2.36 0.84 487 2.70 2.27 0.84 510 2.60 2.18 0.84 534 30 20 3.06 2.21 0.72 487 2.94 2.12 0.72 516 2.85 2.05 0.72 528 2.75 1.98 0.72 551	29	18	2.94	2.35	0.80	464	2.81	2.25	0.80	487	2.70	2.16	0.80	510	2.60	2.08	0.80	534
29 24 3.35 1.47 0.44 528 3.23 1.42 0.44 557 3.15 1.39 0.44 574 3.05 1.34 0.44 603 29 26 3.45 1.10 0.32 557 3.35 1.07 0.32 586 3.30 1.06 0.32 603 3.20 1.02 0.32 621 30 18 2.94 2.47 0.84 464 2.81 2.36 0.84 487 2.70 2.27 0.84 510 2.60 2.18 0.84 534 30 20 3.06 2.21 0.72 487 2.94 2.12 0.72 516 2.85 2.05 0.72 528 2.75 1.98 0.72 551 30 22 3.19 1.91 0.60 505 3.08 1.85 0.60 537 3.15 1.51 0.48 574 3.05 1.46 0.48 603 30 26 3.45 1.24 0.36 557 3.35 1.21 0.36<	29	20	3.06	2.08	0.68	487	2.94	2.00	0.68	516	2.85	1.94	0.68	528	2.75	1.87	0.68	551
29 26 3.45 1.10 0.32 557 3.35 1.07 0.32 586 3.30 1.06 0.32 603 3.20 1.02 0.32 621 30 18 2.94 2.47 0.84 464 2.81 2.36 0.84 487 2.70 2.27 0.84 510 2.60 2.18 0.84 534 30 20 3.06 2.21 0.72 487 2.94 2.12 0.72 516 2.85 2.05 0.72 528 2.75 1.98 0.72 551 30 22 3.19 1.91 0.60 505 3.08 1.85 0.60 537 3.00 1.80 0.60 551 2.88 1.73 0.60 574 30 24 3.35 1.61 0.48 528 3.23 1.55 0.48 557 3.15 1.51 0.48 574 3.05 1.46 0.48 603	29	22	3.19	1.79	0.56	505	3.08	1.72	0.56	537	3.00	1.68	0.56	551	2.88	1.61	0.56	574
30 18 2.94 2.47 0.84 464 2.81 2.36 0.84 487 2.70 2.27 0.84 510 2.60 2.18 0.84 534 30 20 3.06 2.21 0.72 487 2.94 2.12 0.72 516 2.85 2.05 0.72 528 2.75 1.98 0.72 551 30 22 3.19 1.91 0.60 505 3.08 1.85 0.60 537 3.00 1.80 0.60 551 2.88 1.73 0.60 574 30 24 3.35 1.61 0.48 528 3.23 1.55 0.48 557 3.15 1.51 0.48 574 3.05 1.46 0.48 603 30 26 3.45 1.24 0.36 557 3.35 1.21 0.36 586 3.30 1.19 0.36 603 3.20 1.15 0.36 2.31 2.59 </td <td>29</td> <td>24</td> <td>3.35</td> <td>1.47</td> <td>0.44</td> <td>528</td> <td>3.23</td> <td>1.42</td> <td>0.44</td> <td>557</td> <td>3.15</td> <td>1.39</td> <td>0.44</td> <td>574</td> <td>3.05</td> <td>1.34</td> <td>0.44</td> <td>603</td>	29	24	3.35	1.47	0.44	528	3.23	1.42	0.44	557	3.15	1.39	0.44	574	3.05	1.34	0.44	603
30 20 3.06 2.21 0.72 487 2.94 2.12 0.72 516 2.85 2.05 0.72 528 2.75 1.98 0.72 551 30 22 3.19 1.91 0.60 505 3.08 1.85 0.60 537 3.00 1.80 0.60 551 2.88 1.73 0.60 574 30 24 3.35 1.61 0.48 528 3.23 1.55 0.48 557 3.15 1.51 0.48 574 3.05 1.46 0.48 603 30 26 3.45 1.24 0.36 557 3.35 1.21 0.36 586 3.30 1.19 0.36 603 3.20 1.15 0.36 621 31 18 2.94 2.59 0.88 464 2.81 2.48 0.88 487 2.70 2.38 0.88 510 2.60 2.29 0.88 534 31 20 3.06 2.33 0.76 487 2.94 2.23 0.76<	29	26	3.45	1.10	0.32	557	3.35	1.07	0.32	586	3.30	1.06	0.32	603	3.20	1.02	0.32	621
30 22 3.19 1.91 0.60 505 3.08 1.85 0.60 537 3.00 1.80 0.60 551 2.88 1.73 0.60 574 30 24 3.35 1.61 0.48 528 3.23 1.55 0.48 557 3.15 1.51 0.48 574 3.05 1.46 0.48 603 30 26 3.45 1.24 0.36 557 3.35 1.21 0.36 586 3.30 1.19 0.36 603 3.20 1.15 0.36 621 31 18 2.94 2.59 0.88 464 2.81 2.48 0.88 487 2.70 2.38 0.88 510 2.60 2.29 0.88 534 31 20 3.06 2.33 0.76 487 2.94 2.23 0.76 516 2.85 2.17 0.76 528 2.75 2.09 0.76 551 31 22 3.19 2.04 0.64 505 3.08 1.97 0.64<	30	18	2.94	2.47	0.84	464	2.81	2.36	0.84	487	2.70	2.27	0.84	510	2.60	2.18	0.84	534
30 24 3.35 1.61 0.48 528 3.23 1.55 0.48 557 3.15 1.51 0.48 574 3.05 1.46 0.48 603 30 26 3.45 1.24 0.36 557 3.35 1.21 0.36 586 3.30 1.19 0.36 603 3.20 1.15 0.36 621 31 18 2.94 2.59 0.88 464 2.81 2.48 0.88 487 2.70 2.38 0.88 510 2.60 2.29 0.88 534 31 20 3.06 2.33 0.76 487 2.94 2.23 0.76 516 2.85 2.17 0.76 528 2.75 2.09 0.76 551 31 22 3.19 2.04 0.64 505 3.08 1.97 0.64 537 3.00 1.92 0.64 551 2.88 1.84 0.64 574	30	20	3.06	2.21	0.72	487	2.94	2.12	0.72	516	2.85	2.05	0.72	528	2.75	1.98	0.72	551
30 26 3.45 1.24 0.36 557 3.35 1.21 0.36 586 3.30 1.19 0.36 603 3.20 1.15 0.36 621 31 18 2.94 2.59 0.88 464 2.81 2.48 0.88 487 2.70 2.38 0.88 510 2.60 2.29 0.88 534 31 20 3.06 2.33 0.76 487 2.94 2.23 0.76 516 2.85 2.17 0.76 528 2.75 2.09 0.76 551 31 22 3.19 2.04 0.64 505 3.08 1.97 0.64 537 3.00 1.92 0.64 551 2.88 1.84 0.64 574 31 24 3.35 1.74 0.52 528 3.23 1.68 0.52 557 3.15 1.64 0.52 574 3.05 1.59 0.52 603	30	22	3.19	1.91	0.60	505	3.08	1.85	0.60	537	3.00	1.80	0.60	551	2.88	1.73	0.60	574
31 18 2.94 2.59 0.88 464 2.81 2.48 0.88 487 2.70 2.38 0.88 510 2.60 2.29 0.88 534 31 20 3.06 2.33 0.76 487 2.94 2.23 0.76 516 2.85 2.17 0.76 528 2.75 2.09 0.76 551 31 22 3.19 2.04 0.64 505 3.08 1.97 0.64 537 3.00 1.92 0.64 551 2.88 1.84 0.64 574 31 24 3.35 1.74 0.52 528 3.23 1.68 0.52 557 3.15 1.64 0.52 574 3.05 1.59 0.52 603 31 26 3.45 1.38 0.40 557 3.35 1.34 0.40 586 3.30 1.32 0.40 603 3.20 1.28 0.40 621	30	24	3.35	1.61	0.48	528	3.23	1.55	0.48	557	3.15	1.51	0.48	574	3.05	1.46	0.48	603
31 20 3.06 2.33 0.76 487 2.94 2.23 0.76 516 2.85 2.17 0.76 528 2.75 2.09 0.76 551 31 22 3.19 2.04 0.64 505 3.08 1.97 0.64 537 3.00 1.92 0.64 551 2.88 1.84 0.64 574 31 24 3.35 1.74 0.52 528 3.23 1.68 0.52 557 3.15 1.64 0.52 574 3.05 1.59 0.52 603 31 26 3.45 1.38 0.40 557 3.35 1.34 0.40 586 3.30 1.32 0.40 603 3.20 1.28 0.40 621 32 18 2.94 2.70 0.92 464 2.81 2.59 0.92 487 2.70 2.48 0.92 510 2.60 2.39 0.92 534 32 20 3.06 2.45 0.80 487 2.94 2.35 0.80 516 2.85 2.28 0.80 528 2.75 2.20 0.80 551 32 24 3.35	30	26	3.45	1.24	0.36	557	3.35	1.21	0.36	586	3.30	1.19	0.36	603	3.20	1.15	0.36	621
31 22 3.19 2.04 0.64 505 3.08 1.97 0.64 537 3.00 1.92 0.64 551 2.88 1.84 0.64 574 31 24 3.35 1.74 0.52 528 3.23 1.68 0.52 557 3.15 1.64 0.52 574 3.05 1.59 0.52 603 31 26 3.45 1.38 0.40 557 3.35 1.34 0.40 586 3.30 1.32 0.40 603 3.20 1.28 0.40 621 32 18 2.94 2.70 0.92 464 2.81 2.59 0.92 487 2.70 2.48 0.92 510 2.60 2.39 0.92 534 32 20 3.06 2.45 0.80 487 2.94 2.35 0.80 516 2.85 2.28 0.80 528 2.75 2.20 0.80 551 32 22 3.19 2.17 0.68 505 3.08 2.09 0.68 537 3.00 2.04 0.68 551 2.88 1.96 0.68 574 32 24 3.35	31	18	2.94	2.59	0.88	464	2.81	2.48	0.88	487	2.70	2.38	0.88	510	2.60	2.29	0.88	534
31 24 3.35 1.74 0.52 528 3.23 1.68 0.52 557 3.15 1.64 0.52 574 3.05 1.59 0.52 603 31 26 3.45 1.38 0.40 557 3.35 1.34 0.40 586 3.30 1.32 0.40 603 3.20 1.28 0.40 621 32 18 2.94 2.70 0.92 464 2.81 2.59 0.92 487 2.70 2.48 0.92 510 2.60 2.39 0.92 534 32 20 3.06 2.45 0.80 487 2.94 2.35 0.80 516 2.85 2.28 0.80 528 2.75 2.20 0.80 551 32 22 3.19 2.17 0.68 505 3.08 2.09 0.68 537 3.00 2.04 0.68 551 2.88 1.96 0.68 574 32 24 3.35 1.88 0.56 528 3.23 1.81 0.56 557 3.15 1.76 0.56 574 3.05 1.71 0.56 603	31	20	3.06	2.33	0.76	487	2.94	2.23	0.76	516	2.85	2.17	0.76	528	2.75	2.09	0.76	551
31 26 3.45 1.38 0.40 557 3.35 1.34 0.40 586 3.30 1.32 0.40 603 3.20 1.28 0.40 621 32 18 2.94 2.70 0.92 464 2.81 2.59 0.92 487 2.70 2.48 0.92 510 2.60 2.39 0.92 534 32 20 3.06 2.45 0.80 487 2.94 2.35 0.80 516 2.85 2.28 0.80 528 2.75 2.20 0.80 551 32 22 3.19 2.17 0.68 505 3.08 2.09 0.68 537 3.00 2.04 0.68 551 2.88 1.96 0.68 574 32 24 3.35 1.88 0.56 528 3.23 1.81 0.56 557 3.15 1.76 0.56 574 3.05 1.71 0.56 603	31	22	3.19	2.04	0.64	505	3.08	1.97	0.64	537	3.00	1.92	0.64	551	2.88	1.84	0.64	574
32 18 2.94 2.70 0.92 464 2.81 2.59 0.92 487 2.70 2.48 0.92 510 2.60 2.39 0.92 534 32 20 3.06 2.45 0.80 487 2.94 2.35 0.80 516 2.85 2.28 0.80 528 2.75 2.20 0.80 551 32 22 3.19 2.17 0.68 505 3.08 2.09 0.68 537 3.00 2.04 0.68 551 2.88 1.96 0.68 574 32 24 3.35 1.88 0.56 528 3.23 1.81 0.56 557 3.15 1.76 0.56 574 3.05 1.71 0.56 603	31	24	3.35	1.74	0.52	528	3.23	1.68	0.52	557	3.15	1.64	0.52	574	3.05	1.59	0.52	603
32 18 2.94 2.70 0.92 464 2.81 2.59 0.92 487 2.70 2.48 0.92 510 2.60 2.39 0.92 534 32 20 3.06 2.45 0.80 487 2.94 2.35 0.80 516 2.85 2.28 0.80 528 2.75 2.20 0.80 551 32 22 3.19 2.17 0.68 505 3.08 2.09 0.68 537 3.00 2.04 0.68 551 2.88 1.96 0.68 574 32 24 3.35 1.88 0.56 528 3.23 1.81 0.56 557 3.15 1.76 0.56 574 3.05 1.71 0.56 603	31	26	3.45	1.38	0.40	557	3.35	1.34	0.40	586	3.30	1.32	0.40	603	3.20	1.28	0.40	621
32 20 3.06 2.45 0.80 487 2.94 2.35 0.80 516 2.85 2.28 0.80 528 2.75 2.20 0.80 551 32 22 3.19 2.17 0.68 505 3.08 2.09 0.68 537 3.00 2.04 0.68 551 2.88 1.96 0.68 574 32 24 3.35 1.88 0.56 528 3.23 1.81 0.56 557 3.15 1.76 0.56 574 3.05 1.71 0.56 603		18	2.94	2.70	0.92	464			0.92	487			0.92	510			0.92	534
32 22 3.19 2.17 0.68 505 3.08 2.09 0.68 537 3.00 2.04 0.68 551 2.88 1.96 0.68 574 32 24 3.35 1.88 0.56 528 3.23 1.81 0.56 557 3.15 1.76 0.56 574 3.05 1.71 0.56 603		20		1						516				528	1	1		l
32 24 3.35 1.88 0.56 528 3.23 1.81 0.56 557 3.15 1.76 0.56 574 3.05 1.71 0.56 603		22		1						537	l				l			574
				1							l				l			603
				1.52							1				1	1		621

NOTE Q: Total capacity (kW) SHF: Sensible heat factor DB: Dry-bulb temperature SHC: Sensible heat capacity (kW) INPUT: Total power input (W) WB: Wet-bulb temperature

PERFORMANCE DATA COOLING operation Rated frequency 57Hz MFZ-KA25VA/ SUZ-KA25VA.TH, SUZ-KA25VAH.TH

CAPACITY: 2.5(kW) SHF: 0.66 INPUT: 580(W)

NBOR NBOR NBOR SHF SHF NPUT Q SHC SHF SHF SHF NPUT Q SHC SHF S	CAFACI	11.2.5(r	(00) 3	<u>пг. U</u>	.00 11	1501.5	OUTDOOR DB(℃)							
DB (C) WB (C) Q	INDOOR	INDOOR		3	35					()	46			
21 18 2.45 1.18 0.48 592 2.40 0.36 621 2.23 0.80 0.36 655 22 18 2.45 1.27 0.52 568 592 2.40 0.96 0.36 621 2.23 0.89 0.40 655 22 20 2.58 1.03 0.40 592 2.40 0.96 0.40 621 2.23 0.89 0.40 655 23 20 2.58 1.13 0.44 592 2.40 1.06 0.46 661 2.25 0.82 660 2.38 0.67 0.32 673 23 22 2.73 0.87 0.32 661 2.55 0.82 0.32 660 2.38 0.60 0.32 616 652 24 22 2.73 0.89 0.36 615 2.55 0.60 0.32 0.8 0.60 3.36 0.73 2.4 2.62 2.73			Q			INPUT	Q			INPUT	Q			INPUT
22	21	18												
22 20 2.58 1.03 0.40 592 2.40 0.96 6.04 621 2.23 0.86 0.70 0.28 675 23 18 2.45 1.37 0.56 568 2.25 1.26 0.56 603 2.08 1.16 0.56 62 23 20 2.58 1.13 0.44 592 2.40 1.06 0.44 621 2.23 0.98 0.44 655 24 18 2.45 1.47 0.60 568 2.25 1.35 0.60 603 2.08 1.75 0.63 615 2.25 0.40 667 2.23 1.07 0.48 655 24 22 2.73 0.98 0.36 615 2.55 0.92 0.36 603 2.38 0.80 0.36 673 2.48 1.82 1.81 2.45 1.87 0.64 688 2.25 1.44 0.64 603 2.38 1.06 <td>21</td> <td></td> <td></td> <td></td> <td>0.36</td> <td></td> <td></td> <td>1</td> <td>0.36</td> <td></td> <td>2.23</td> <td>0.80</td> <td>0.36</td> <td></td>	21				0.36			1	0.36		2.23	0.80	0.36	
22 20 2.58 1.03 0.40 592 2.40 0.96 6.04 621 2.23 0.86 0.70 0.28 675 23 18 2.45 1.37 0.56 568 2.25 1.26 0.56 603 2.08 1.16 0.56 62 23 20 2.58 1.13 0.44 592 2.40 1.06 0.44 621 2.23 0.98 0.44 655 24 18 2.45 1.47 0.60 568 2.25 1.35 0.60 603 2.08 1.75 0.63 615 2.25 0.40 667 2.23 1.07 0.48 655 24 22 2.73 0.98 0.36 615 2.55 0.92 0.36 603 2.38 0.80 0.36 673 2.48 1.82 1.81 2.45 1.87 0.64 688 2.25 1.44 0.64 603 2.38 1.06 <td></td> <td></td> <td></td> <td></td> <td></td> <td>+</td> <td></td> <td></td> <td></td> <td></td> <td></td> <td></td> <td></td> <td></td>						+								
18	I										2.23	0.89	l	
23 18 2.45 1.37 0.66 568 2.25 1.26 0.56 603 2.08 1.16 0.56 626 23 20 2.58 1.13 0.44 592 2.40 1.06 0.44 621 2.23 0.98 0.76 0.32 673 24 18 2.45 1.47 0.60 568 2.25 1.35 0.60 603 2.08 1.26 0.60 626 24 22 2.73 9.89 0.36 615 2.55 0.24 667 2.55 0.61 0.24 696 25 18 2.45 1.57 0.64 568 2.25 1.44 0.64 667 2.55 0.61 0.62 688 2.25 1.44 0.64 603 2.03 1.16 0.52 696 25 24 2.88 0.81 0.28 638 2.70 0.65 0.24 667 2.55 0.71	I												l	
23 20 2.58 1.13 0.44 592 2.40 1.06 0.44 621 2.23 0.98 0.44 655 23 22 2.73 0.87 0.32 615 2.55 0.82 0.32 650 2.38 0.76 0.32 673 24 18 2.45 1.47 0.60 588 2.25 1.35 0.60 0.32 681 2.25 0.60 0.24 683 2.27 0.80 0.36 615 2.55 0.92 0.36 667 2.55 0.92 0.36 667 2.55 0.61 0.26 667 2.55 0.61 0.28 667 2.55 0.00 667 2.55 0.02 0.40 667 2.55 0.02 0.40 667 2.25 0.60 1.33 0.64 626 25 24 2.88 0.81 0.82 568 2.25 1.40 0.63 2.23 1.41 0.68 <t></t>														
23 22 2.73 0.87 0.32 615 2.55 0.82 0.32 650 2.38 0.76 0.32 673 24 18 2.45 1.47 0.60 588 2.25 1.35 0.60 603 2.08 1.25 0.60 623 24 22 2.73 0.98 0.36 615 2.55 0.92 0.36 650 2.38 0.86 0.36 673 24 24 2.88 0.69 0.24 638 2.70 0.65 0.24 667 2.55 0.92 667 2.55 0.92 2.60 1.66 626 2.25 1.44 0.64 660 2.25 1.50 0.62 667 2.23 1.60 0.06 662 2.25 1.53 0.60 0.33 0.61 0.20 661 2.55 1.02 0.40 650 2.23 1.23 1.05 0.44 673 2.62 1.23 1.16 <td< td=""><td>I</td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td> </td><td></td></td<>	I													
24 18 2.45 1.47 0.60 568 2.25 1.35 0.60 603 2.08 1.25 0.60 626 24 20 2.58 1.24 0.48 592 2.04 1.15 0.48 621 2.23 1.07 0.48 657 24 24 2.88 0.69 0.24 638 2.70 0.65 0.24 667 2.55 0.61 0.24 696 25 18 2.45 1.57 0.64 568 2.25 1.44 0.64 603 2.08 1.31 0.66 655 25 22 2.73 1.09 0.40 615 2.55 1.02 0.40 650 2.28 0.67 2.25 655 261 2.23 1.01 0.68 682 2.25 1.53 0.68 607 2.25 2.50 0.71 0.28 667 2.25 0.21 1.23 1.25 0.52 0.41 0.23 </td <td>I</td> <td></td> <td></td> <td></td> <td>0.32</td> <td></td> <td>2.55</td> <td></td> <td>0.32</td> <td></td> <td></td> <td></td> <td>0.32</td> <td></td>	I				0.32		2.55		0.32				0.32	
24 22 2.73 0.98 0.36 615 2.55 0.92 0.36 650 2.38 0.66 0.24 693 25 18 2.45 1.57 0.64 568 2.25 1.44 0.64 667 2.55 0.21 692 25 20 2.58 1.34 0.52 592 2.40 1.25 0.52 621 2.23 1.16 0.52 655 25 22 2.73 1.09 0.40 615 2.55 1.02 0.40 650 2.38 0.95 0.40 673 26 18 2.45 1.67 0.68 588 2.25 1.53 0.66 603 2.08 1.41 0.68 626 26 18 2.45 1.66 592 2.40 1.34 0.56 621 2.23 1.25 0.56 655 26 22 2.73 1.20 0.44 615 2.55 <t< td=""><td></td><td>18</td><td>2.45</td><td>1.47</td><td>0.60</td><td>568</td><td>2.25</td><td></td><td>0.60</td><td>603</td><td>2.08</td><td>1.25</td><td>0.60</td><td>626</td></t<>		18	2.45	1.47	0.60	568	2.25		0.60	603	2.08	1.25	0.60	626
24 24 2.88 0.69 0.24 638 2.70 0.65 0.24 667 2.55 0.61 0.24 696 25 18 2.45 1.57 0.64 568 2.25 1.44 0.64 603 2.08 1.33 0.64 626 655 25 20 2.58 1.34 0.52 592 2.40 1.25 0.52 661 2.33 0.95 0.40 673 25 24 2.88 0.81 0.28 685 508 2.55 1.02 0.40 650 2.38 1.01 0.28 667 2.55 0.71 0.28 666 2.25 1.01 0.20 661 2.55 1.02 0.40 665 626 2.23 1.25 0.60 2.23 1.25 0.60 2.23 1.25 0.60 2.23 1.25 0.62 2.23 1.25 0.62 2.23 1.25 0.62 2.23 1.24 <t< td=""><td>24</td><td>20</td><td>2.58</td><td>1.24</td><td>0.48</td><td>592</td><td>2.40</td><td>1.15</td><td>0.48</td><td>621</td><td>2.23</td><td>1.07</td><td>0.48</td><td>655</td></t<>	24	20	2.58	1.24	0.48	592	2.40	1.15	0.48	621	2.23	1.07	0.48	655
25 18 2.45 1.57 0.64 568 2.25 1.44 0.64 603 2.08 1.33 0.64 626 25 20 2.58 1.34 0.52 592 2.40 1.25 0.52 621 2.23 1.16 0.52 657 25 24 2.88 0.81 0.28 638 2.70 0.76 0.28 667 2.55 0.71 0.28 696 26 18 2.45 1.67 0.68 568 2.25 1.53 0.68 603 2.08 1.41 0.68 626 26 22 2.73 1.20 0.44 615 2.55 1.12 0.44 650 2.38 1.25 0.56 621 2.23 1.25 0.56 652 26 22 2.73 1.20 0.44 615 2.55 1.22 0.48 0.24 1.44 0.60 2.26 1.44 0.60 2.23	24	22	2.73	0.98	0.36	615	2.55	0.92	0.36	650	2.38	0.86	0.36	673
25 20 2.58 1.34 0.52 592 2.40 1.25 0.52 621 2.23 1.16 0.52 655 25 22 2.73 1.09 0.40 615 2.55 1.02 0.40 660 2.38 0.95 0.40 673 26 18 2.45 1.67 0.68 568 2.25 1.53 0.68 603 2.08 1.41 0.68 662 26 20 2.58 1.44 0.56 592 2.40 1.34 0.56 621 2.23 1.25 0.56 655 26 24 2.88 0.92 0.32 638 2.70 0.86 0.32 667 2.55 0.82 0.32 696 26 26 3.03 0.61 0.20 661 2.85 0.57 0.20 690 2.68 0.54 0.20 719 27 18 2.45 1.65 0.60 <	24	24	2.88	0.69	0.24	638	2.70	0.65	0.24	667	2.55	0.61	0.24	696
25 22 2.73 1.09 0.40 615 2.55 1.02 0.40 650 2.38 0.95 0.40 673 26 18 2.45 1.67 0.68 568 2.25 1.53 0.68 667 2.55 0.71 0.28 667 2.55 0.71 0.28 667 2.55 0.71 0.28 662 2.62 2.58 1.44 0.56 592 2.40 1.34 0.56 621 2.23 1.25 0.56 655 26 22 2.73 1.20 0.44 615 2.55 1.12 0.44 650 2.38 1.05 0.44 673 26 26 3.03 0.61 0.20 661 2.85 0.57 0.20 669 2.68 0.54 0.20 719 27 20 2.58 1.55 0.60 592 2.40 1.44 0.60 621 2.23 1.44 0.60 652 <td>25</td> <td>18</td> <td>2.45</td> <td>1.57</td> <td>0.64</td> <td>568</td> <td>2.25</td> <td>1.44</td> <td>0.64</td> <td>603</td> <td>2.08</td> <td>1.33</td> <td>0.64</td> <td>626</td>	25	18	2.45	1.57	0.64	568	2.25	1.44	0.64	603	2.08	1.33	0.64	626
25 22 2.73 1.09 0.40 615 2.55 1.02 0.40 650 2.38 0.95 0.40 673 26 18 2.45 1.67 0.68 568 2.25 1.53 0.68 667 2.55 0.71 0.28 667 2.55 0.71 0.28 667 2.55 0.71 0.28 662 2.62 2.58 1.44 0.56 592 2.40 1.34 0.56 621 2.23 1.25 0.56 655 26 22 2.73 1.20 0.44 615 2.55 1.12 0.44 650 2.38 1.05 0.44 673 26 26 3.03 0.61 0.20 661 2.85 0.57 0.20 669 2.68 0.54 0.20 719 27 20 2.58 1.55 0.60 592 2.40 1.44 0.60 621 2.23 1.44 0.60 652 <td>25</td> <td>20</td> <td>2.58</td> <td>1.34</td> <td>0.52</td> <td>592</td> <td>2.40</td> <td>1.25</td> <td>0.52</td> <td>621</td> <td>2.23</td> <td>1.16</td> <td>0.52</td> <td>655</td>	25	20	2.58	1.34	0.52	592	2.40	1.25	0.52	621	2.23	1.16	0.52	655
26 18 2.45 1.67 0.68 568 2.25 1.53 0.68 603 2.08 1.41 0.68 626 26 20 2.58 1.44 0.56 592 2.40 1.34 0.56 621 2.23 1.25 0.56 655 26 24 2.88 0.92 0.32 638 2.70 0.86 0.32 667 2.55 0.82 0.32 668 2.70 0.86 0.32 667 2.55 0.82 0.32 668 0.20 719 26 26 3.03 0.61 0.20 661 2.85 0.57 0.20 669 2.68 0.54 0.20 719 27 20 2.58 1.55 0.60 592 2.40 1.44 0.60 621 2.23 1.34 0.64 655 27 26 3.03 0.73 0.24 661 2.85 0.68 0.24 690		22	2.73	1.09	0.40		2.55	1.02	0.40			0.95	0.40	
26 20 2.58 1.44 0.56 592 2.40 1.34 0.56 621 2.23 1.25 0.56 655 26 22 2.73 1.20 0.44 615 2.55 1.12 0.44 650 2.38 1.05 0.44 673 26 24 2.88 0.92 0.32 661 0.20 661 2.85 0.57 0.20 690 2.68 0.54 0.20 719 27 18 2.45 1.76 0.72 568 2.25 1.62 0.72 603 2.08 1.49 0.72 626 27 20 2.58 1.55 0.60 592 2.40 1.44 0.60 621 2.23 1.34 0.60 655 27 24 2.88 1.04 0.36 638 2.70 0.97 0.36 667 2.55 0.92 0.40 667 2.58 0.92 2.68 0.62		24	2.88	0.81	0.28	638	2.70	0.76	0.28	667	2.55	0.71	0.28	696
26 22 2.73 1.20 0.44 615 2.55 1.12 0.44 650 2.38 1.05 0.44 673 26 24 2.88 0.92 0.32 638 2.70 0.86 0.32 667 2.55 0.82 0.32 696 26 26 3.03 0.61 0.20 661 2.85 0.57 0.20 690 2.68 0.54 0.20 719 27 18 2.45 1.76 0.72 568 2.25 1.62 0.72 603 2.08 1.49 0.72 606 27 20 2.58 1.50 0.60 592 2.40 1.44 0.60 621 2.33 1.40 0.40 655 27 24 2.88 1.04 0.36 638 2.70 0.97 0.36 667 2.55 0.92 0.36 696 27 26 3.03 0.37 0.64 <	26	18	2.45	1.67	0.68	568	2.25	1.53	0.68	603	2.08	1.41	0.68	626
26 22 2.73 1.20 0.44 615 2.55 1.12 0.44 650 2.38 1.05 0.44 673 26 24 2.88 0.92 0.32 638 2.70 0.86 0.32 667 2.55 0.82 0.32 696 26 26 3.03 0.61 0.20 661 2.85 0.57 0.20 690 2.68 0.54 0.20 719 27 18 2.45 1.76 0.72 568 2.25 1.62 0.72 603 2.08 1.49 0.72 606 27 20 2.58 1.50 0.60 592 2.40 1.44 0.60 621 2.33 1.40 0.40 655 27 24 2.88 1.04 0.36 638 2.70 0.97 0.36 667 2.55 0.92 0.36 696 27 26 3.03 0.37 0.64 <	26	20	2.58	1.44	0.56	592	2.40	1.34	0.56	621	2.23	1.25	0.56	655
26 24 2.88 0.92 0.32 638 2.70 0.86 0.32 667 2.55 0.82 0.32 696 26 26 3.03 0.61 0.20 661 2.85 0.57 0.20 690 2.68 0.54 0.20 719 27 18 2.45 1.76 0.72 568 2.25 1.62 0.72 603 2.08 1.49 0.72 663 655 27 20 2.58 1.55 0.60 592 2.40 1.44 0.60 621 2.23 1.34 0.66 655 27 24 2.88 1.04 0.36 638 2.70 0.97 0.36 667 2.55 0.92 0.36 696 27 26 3.03 0.73 0.24 661 2.85 0.68 0.24 690 2.68 0.64 0.24 719 28 18 2.45 1.86 <t< td=""><td></td><td>22</td><td>2.73</td><td>1.20</td><td>0.44</td><td>615</td><td>2.55</td><td>1.12</td><td>0.44</td><td>650</td><td>2.38</td><td>1.05</td><td>0.44</td><td>673</td></t<>		22	2.73	1.20	0.44	615	2.55	1.12	0.44	650	2.38	1.05	0.44	673
27 18 2.45 1.76 0.72 568 2.25 1.62 0.72 603 2.08 1.49 0.72 626 27 20 2.58 1.55 0.60 592 2.40 1.44 0.60 621 2.23 1.34 0.60 655 27 22 2.73 1.31 0.48 615 2.55 1.22 0.48 650 2.38 1.14 0.48 673 27 24 2.88 1.04 0.36 638 2.70 0.97 0.36 667 2.55 0.92 0.36 696 27 26 3.03 0.73 0.24 661 2.85 0.68 0.24 690 2.68 0.64 0.22 1.71 0.76 603 2.08 1.58 0.66 626 28 20 2.58 1.65 0.64 592 2.40 1.54 0.64 621 2.23 1.42 0.64 655	26	24	2.88	0.92	0.32	638	2.70	0.86	0.32	667	2.55	0.82	0.32	696
27 20 2.58 1.55 0.60 592 2.40 1.44 0.60 621 2.23 1.34 0.60 655 27 22 2.73 1.31 0.48 615 2.55 1.22 0.48 650 2.38 1.14 0.48 673 27 24 2.88 1.04 0.36 638 2.70 0.97 0.36 667 2.55 0.92 0.36 696 27 26 3.03 0.73 0.24 661 2.85 0.68 0.24 690 2.68 0.64 0.24 719 28 20 2.58 1.65 0.64 592 2.40 1.54 0.64 621 2.23 1.42 0.62 626 28 22 2.73 1.42 0.52 615 2.55 1.33 0.52 650 2.38 1.24 0.62 673 28 24 2.88 1.15 0.40 <	26	26	3.03	0.61	0.20	661	2.85	0.57	0.20	690	2.68	0.54	0.20	719
27 22 2.73 1.31 0.48 615 2.55 1.22 0.48 650 2.38 1.14 0.48 673 27 24 2.88 1.04 0.36 638 2.70 0.97 0.36 667 2.55 0.92 0.36 696 27 26 3.03 0.73 0.24 661 2.85 0.68 0.24 690 2.68 0.64 0.24 719 28 18 2.45 1.86 0.76 568 2.25 1.71 0.76 603 2.08 1.58 0.76 626 28 22 2.73 1.42 0.52 615 2.55 1.33 0.52 650 2.38 1.24 0.52 673 28 24 2.88 1.15 0.40 638 2.70 1.08 0.40 667 2.55 1.02 0.40 696 28 26 3.03 0.85 0.28 <	27	18	2.45	1.76	0.72	568	2.25	1.62	0.72	603	2.08	1.49	0.72	626
27 24 2.88 1.04 0.36 638 2.70 0.97 0.36 667 2.55 0.92 0.36 696 27 26 3.03 0.73 0.24 661 2.85 0.68 0.24 690 2.68 0.64 0.24 719 28 18 2.45 1.86 0.76 568 2.25 1.71 0.76 603 2.08 1.58 0.76 626 28 20 2.58 1.65 0.64 592 2.40 1.54 0.64 621 2.23 1.42 0.62 655 28 24 2.88 1.15 0.40 638 2.70 1.08 0.40 667 2.55 1.02 0.40 696 28 24 2.88 1.15 0.40 638 2.25 1.80 0.80 667 2.55 1.02 0.40 696 29 18 2.45 1.96 0.80 <			2.58	1.55	0.60	592	2.40	1.44	0.60		2.23	1.34	0.60	
27 26 3.03 0.73 0.24 661 2.85 0.68 0.24 690 2.68 0.64 0.24 719 28 18 2.45 1.86 0.76 568 2.25 1.71 0.76 603 2.08 1.58 0.76 626 28 20 2.58 1.65 0.64 592 2.40 1.54 0.64 621 2.23 1.42 0.64 655 28 22 2.73 1.42 0.52 615 2.55 1.33 0.52 650 2.38 1.24 0.52 673 28 24 2.88 1.15 0.40 638 2.70 1.08 0.40 667 2.55 1.02 0.40 696 28 26 3.03 0.85 0.88 522 1.80 0.80 603 2.08 1.66 0.80 626 29 20 2.58 1.75 0.68 592 <t< td=""><td>27</td><td>22</td><td>2.73</td><td>1.31</td><td>0.48</td><td>615</td><td>2.55</td><td>1.22</td><td>0.48</td><td>650</td><td>2.38</td><td>1.14</td><td>0.48</td><td>673</td></t<>	27	22	2.73	1.31	0.48	615	2.55	1.22	0.48	650	2.38	1.14	0.48	673
28 18 2.45 1.86 0.76 568 2.25 1.71 0.76 603 2.08 1.58 0.76 626 28 20 2.58 1.65 0.64 592 2.40 1.54 0.64 621 2.23 1.42 0.64 655 28 22 2.73 1.42 0.52 615 2.55 1.33 0.52 650 2.38 1.24 0.52 673 28 24 2.88 1.15 0.40 638 2.70 1.08 0.40 667 2.55 1.02 0.40 696 28 26 3.03 0.85 0.28 661 2.85 0.80 0.28 690 2.68 0.75 0.28 719 29 18 2.45 1.96 0.80 568 2.25 1.80 0.80 603 2.08 1.66 0.80 626 29 22 2.73 1.53 0.56 <	27	24	2.88	1.04	0.36	638	2.70	0.97	0.36	667	2.55	0.92	0.36	696
28 20 2.58 1.65 0.64 592 2.40 1.54 0.64 621 2.23 1.42 0.64 655 28 22 2.73 1.42 0.52 615 2.55 1.33 0.52 650 2.38 1.24 0.52 673 28 24 2.88 1.15 0.40 638 2.70 1.08 0.40 667 2.55 1.02 0.40 696 28 26 3.03 0.85 0.28 661 2.85 0.80 0.28 690 2.68 0.75 0.28 719 29 18 2.45 1.96 0.80 568 2.25 1.80 0.80 603 2.08 1.66 0.80 626 29 20 2.58 1.75 0.68 592 2.40 1.63 0.68 621 2.23 1.51 0.68 655 29 24 2.88 1.27 0.44 <	27	26	3.03	0.73	0.24	661	2.85	0.68	0.24	690	2.68	0.64	0.24	719
28 22 2.73 1.42 0.52 615 2.55 1.33 0.52 650 2.38 1.24 0.52 673 28 24 2.88 1.15 0.40 638 2.70 1.08 0.40 667 2.55 1.02 0.40 696 28 26 3.03 0.85 0.28 661 2.85 0.80 0.28 690 2.68 0.75 0.28 719 29 18 2.45 1.96 0.80 568 2.25 1.80 0.80 603 2.08 1.66 0.80 626 29 20 2.58 1.75 0.68 592 2.40 1.63 0.68 621 2.23 1.51 0.68 655 29 22 2.73 1.53 0.56 615 2.55 1.43 0.56 650 2.38 1.33 0.56 673 29 24 2.88 1.27 0.44 <	28	18	2.45	1.86	0.76	568	2.25	1.71	0.76	603	2.08	1.58	0.76	626
28 24 2.88 1.15 0.40 638 2.70 1.08 0.40 667 2.55 1.02 0.40 696 28 26 3.03 0.85 0.28 661 2.85 0.80 0.28 690 2.68 0.75 0.28 719 29 18 2.45 1.96 0.80 568 2.25 1.80 0.80 603 2.08 1.66 0.80 626 29 20 2.58 1.75 0.68 592 2.40 1.63 0.68 621 2.23 1.51 0.68 655 29 22 2.73 1.53 0.56 615 2.55 1.43 0.56 650 2.38 1.33 0.56 673 29 24 2.88 1.27 0.44 638 2.70 1.19 0.44 667 2.55 1.12 0.44 696 29 26 3.03 0.97 0.32 <		20	2.58	1.65	0.64		2.40	1	0.64	621	2.23	1.42	0.64	655
28 26 3.03 0.85 0.28 661 2.85 0.80 0.28 690 2.68 0.75 0.28 719 29 18 2.45 1.96 0.80 568 2.25 1.80 0.80 603 2.08 1.66 0.80 626 29 20 2.58 1.75 0.68 592 2.40 1.63 0.68 621 2.23 1.51 0.68 655 29 22 2.73 1.53 0.56 615 2.55 1.43 0.56 650 2.38 1.33 0.56 673 29 24 2.88 1.27 0.44 638 2.70 1.19 0.44 667 2.55 1.12 0.44 696 29 26 3.03 0.97 0.32 661 2.85 0.91 0.32 690 2.68 0.86 0.32 719 30 21 2.58 1.85 0.72 <					0.52				0.52				0.52	
29 18 2.45 1.96 0.80 568 2.25 1.80 0.80 603 2.08 1.66 0.80 626 29 20 2.58 1.75 0.68 592 2.40 1.63 0.68 621 2.23 1.51 0.68 655 29 22 2.73 1.53 0.56 615 2.55 1.43 0.56 650 2.38 1.33 0.56 673 29 24 2.88 1.27 0.44 638 2.70 1.19 0.44 667 2.55 1.12 0.44 696 29 26 3.03 0.97 0.32 661 2.85 0.91 0.32 690 2.68 0.86 0.32 719 30 20 2.58 1.85 0.72 592 2.40 1.73 0.72 621 2.23 1.60 0.72 655 30 22 2.73 1.64 0.60 <			2.88						0.40				0.40	1
29 20 2.58 1.75 0.68 592 2.40 1.63 0.68 621 2.23 1.51 0.68 655 29 22 2.73 1.53 0.56 615 2.55 1.43 0.56 650 2.38 1.33 0.56 673 29 24 2.88 1.27 0.44 638 2.70 1.19 0.44 667 2.55 1.12 0.44 696 29 26 3.03 0.97 0.32 661 2.85 0.91 0.32 690 2.68 0.86 0.32 719 30 18 2.45 2.06 0.84 568 2.25 1.89 0.84 603 2.08 1.74 0.84 626 30 20 2.58 1.85 0.72 592 2.40 1.73 0.72 621 2.23 1.60 0.72 655 30 22 2.73 1.64 0.60 <		26							0.28		2.68		0.28	
29 22 2.73 1.53 0.56 615 2.55 1.43 0.56 650 2.38 1.33 0.56 673 29 24 2.88 1.27 0.44 638 2.70 1.19 0.44 667 2.55 1.12 0.44 696 29 26 3.03 0.97 0.32 661 2.85 0.91 0.32 690 2.68 0.86 0.32 719 30 18 2.45 2.06 0.84 568 2.25 1.89 0.84 603 2.08 1.74 0.84 626 30 20 2.58 1.85 0.72 592 2.40 1.73 0.72 621 2.23 1.60 0.72 655 30 22 2.73 1.64 0.60 615 2.55 1.53 0.60 650 2.38 1.43 0.60 673 30 24 2.88 1.38 0.48 <							2.25		0.80				0.80	
29 24 2.88 1.27 0.44 638 2.70 1.19 0.44 667 2.55 1.12 0.44 696 29 26 3.03 0.97 0.32 661 2.85 0.91 0.32 690 2.68 0.86 0.32 719 30 18 2.45 2.06 0.84 568 2.25 1.89 0.84 603 2.08 1.74 0.84 626 30 20 2.58 1.85 0.72 592 2.40 1.73 0.72 621 2.23 1.60 0.72 655 30 22 2.73 1.64 0.60 615 2.55 1.53 0.60 650 2.38 1.43 0.60 673 30 24 2.88 1.38 0.48 638 2.70 1.30 0.48 667 2.55 1.22 0.48 696 30 26 3.03 1.09 0.36 <	29	20			0.68		2.40	1	0.68				0.68	655
29 26 3.03 0.97 0.32 661 2.85 0.91 0.32 690 2.68 0.86 0.32 719 30 18 2.45 2.06 0.84 568 2.25 1.89 0.84 603 2.08 1.74 0.84 626 30 20 2.58 1.85 0.72 592 2.40 1.73 0.72 621 2.23 1.60 0.72 655 30 22 2.73 1.64 0.60 615 2.55 1.53 0.60 650 2.38 1.43 0.60 673 30 24 2.88 1.38 0.48 638 2.70 1.30 0.48 667 2.55 1.22 0.48 696 30 26 3.03 1.09 0.36 661 2.85 1.03 0.36 690 2.68 0.96 0.36 719 31 20 2.58 1.96 0.76 <	29	22	2.73	1.53	0.56	615	2.55			650		1.33		673
30 18 2.45 2.06 0.84 568 2.25 1.89 0.84 603 2.08 1.74 0.84 626 30 20 2.58 1.85 0.72 592 2.40 1.73 0.72 621 2.23 1.60 0.72 655 30 22 2.73 1.64 0.60 615 2.55 1.53 0.60 650 2.38 1.43 0.60 673 30 24 2.88 1.38 0.48 638 2.70 1.30 0.48 667 2.55 1.22 0.48 696 30 26 3.03 1.09 0.36 661 2.85 1.03 0.36 690 2.68 0.96 0.36 719 31 18 2.45 2.16 0.88 568 2.25 1.98 0.88 603 2.08 1.83 0.88 626 31 20 2.58 1.96 0.76 <	29	24	2.88	1.27			2.70		0.44	667		1.12	0.44	1
30 20 2.58 1.85 0.72 592 2.40 1.73 0.72 621 2.23 1.60 0.72 655 30 22 2.73 1.64 0.60 615 2.55 1.53 0.60 650 2.38 1.43 0.60 673 30 24 2.88 1.38 0.48 638 2.70 1.30 0.48 667 2.55 1.22 0.48 696 30 26 3.03 1.09 0.36 661 2.85 1.03 0.36 690 2.68 0.96 0.36 719 31 18 2.45 2.16 0.88 568 2.25 1.98 0.88 603 2.08 1.83 0.88 626 31 20 2.58 1.96 0.76 592 2.40 1.82 0.76 621 2.23 1.69 0.76 655 31 22 2.73 1.74 0.64 <														
30 22 2.73 1.64 0.60 615 2.55 1.53 0.60 650 2.38 1.43 0.60 673 30 24 2.88 1.38 0.48 638 2.70 1.30 0.48 667 2.55 1.22 0.48 696 30 26 3.03 1.09 0.36 661 2.85 1.03 0.36 690 2.68 0.96 0.36 719 31 18 2.45 2.16 0.88 568 2.25 1.98 0.88 603 2.08 1.83 0.88 626 31 20 2.58 1.96 0.76 592 2.40 1.82 0.76 621 2.23 1.69 0.76 655 31 22 2.73 1.74 0.64 615 2.55 1.63 0.64 650 2.38 1.52 0.64 673 31 24 2.88 1.50 0.52 <	I						2.25							
30 24 2.88 1.38 0.48 638 2.70 1.30 0.48 667 2.55 1.22 0.48 696 30 26 3.03 1.09 0.36 661 2.85 1.03 0.36 690 2.68 0.96 0.36 719 31 18 2.45 2.16 0.88 568 2.25 1.98 0.88 603 2.08 1.83 0.88 626 31 20 2.58 1.96 0.76 592 2.40 1.82 0.76 621 2.23 1.69 0.76 655 31 22 2.73 1.74 0.64 615 2.55 1.63 0.64 650 2.38 1.52 0.64 673 31 24 2.88 1.50 0.52 638 2.70 1.40 0.52 667 2.55 1.33 0.52 696 31 26 3.03 1.21 0.40 <														
30 26 3.03 1.09 0.36 661 2.85 1.03 0.36 690 2.68 0.96 0.36 719 31 18 2.45 2.16 0.88 568 2.25 1.98 0.88 603 2.08 1.83 0.88 626 31 20 2.58 1.96 0.76 592 2.40 1.82 0.76 621 2.23 1.69 0.76 655 31 22 2.73 1.74 0.64 615 2.55 1.63 0.64 650 2.38 1.52 0.64 673 31 24 2.88 1.50 0.52 638 2.70 1.40 0.52 667 2.55 1.33 0.52 696 31 26 3.03 1.21 0.40 661 2.85 1.14 0.40 690 2.68 1.07 0.40 719 32 18 2.45 2.25 0.92 <								1						1
31 18 2.45 2.16 0.88 568 2.25 1.98 0.88 603 2.08 1.83 0.88 626 31 20 2.58 1.96 0.76 592 2.40 1.82 0.76 621 2.23 1.69 0.76 655 31 22 2.73 1.74 0.64 615 2.55 1.63 0.64 650 2.38 1.52 0.64 673 31 24 2.88 1.50 0.52 638 2.70 1.40 0.52 667 2.55 1.33 0.52 696 31 26 3.03 1.21 0.40 661 2.85 1.14 0.40 690 2.68 1.07 0.40 719 32 18 2.45 2.25 0.92 568 2.25 2.07 0.92 603 2.08 1.91 0.92 626 32 20 2.58 2.06 0.80 <														
31 20 2.58 1.96 0.76 592 2.40 1.82 0.76 621 2.23 1.69 0.76 655 31 22 2.73 1.74 0.64 615 2.55 1.63 0.64 650 2.38 1.52 0.64 673 31 24 2.88 1.50 0.52 638 2.70 1.40 0.52 667 2.55 1.33 0.52 696 31 26 3.03 1.21 0.40 661 2.85 1.14 0.40 690 2.68 1.07 0.40 719 32 18 2.45 2.25 0.92 568 2.25 2.07 0.92 603 2.08 1.91 0.92 626 32 20 2.58 2.06 0.80 592 2.40 1.92 0.80 621 2.23 1.78 0.80 655 32 22 2.73 1.85 0.68 615 2.55 1.73 0.68 650 2.38 1.62 0.68 673 32 24 2.88 1.61 0.56 638 2.70 1.51 0.56 667 2.55 1.43 <td< td=""><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td>0.36</td><td></td><td></td><td></td><td></td><td></td></td<>									0.36					
31 22 2.73 1.74 0.64 615 2.55 1.63 0.64 650 2.38 1.52 0.64 673 31 24 2.88 1.50 0.52 638 2.70 1.40 0.52 667 2.55 1.33 0.52 696 31 26 3.03 1.21 0.40 661 2.85 1.14 0.40 690 2.68 1.07 0.40 719 32 18 2.45 2.25 0.92 568 2.25 2.07 0.92 603 2.08 1.91 0.92 626 32 20 2.58 2.06 0.80 592 2.40 1.92 0.80 621 2.23 1.78 0.80 655 32 22 2.73 1.85 0.68 615 2.55 1.73 0.68 650 2.38 1.62 0.68 673 32 24 2.88 1.61 0.56 638 2.70 1.51 0.56 667 2.55 1.43 0.56 696								1						
31 24 2.88 1.50 0.52 638 2.70 1.40 0.52 667 2.55 1.33 0.52 696 31 26 3.03 1.21 0.40 661 2.85 1.14 0.40 690 2.68 1.07 0.40 719 32 18 2.45 2.25 0.92 568 2.25 2.07 0.92 603 2.08 1.91 0.92 626 32 20 2.58 2.06 0.80 592 2.40 1.92 0.80 621 2.23 1.78 0.80 655 32 22 2.73 1.85 0.68 615 2.55 1.73 0.68 650 2.38 1.62 0.68 673 32 24 2.88 1.61 0.56 638 2.70 1.51 0.56 667 2.55 1.43 0.56 696 32 26 3.03 1.33 0.44 661 2.85 1.25 0.44 690 2.68 1.18 0.44 719	I													1
31 26 3.03 1.21 0.40 661 2.85 1.14 0.40 690 2.68 1.07 0.40 719 32 18 2.45 2.25 0.92 568 2.25 2.07 0.92 603 2.08 1.91 0.92 626 32 20 2.58 2.06 0.80 592 2.40 1.92 0.80 621 2.23 1.78 0.80 655 32 22 2.73 1.85 0.68 615 2.55 1.73 0.68 650 2.38 1.62 0.68 673 32 24 2.88 1.61 0.56 638 2.70 1.51 0.56 667 2.55 1.43 0.56 696 32 26 3.03 1.33 0.44 661 2.85 1.25 0.44 690 2.68 1.18 0.44 719	I							1						1
32 18 2.45 2.25 0.92 568 2.25 2.07 0.92 603 2.08 1.91 0.92 626 32 20 2.58 2.06 0.80 592 2.40 1.92 0.80 621 2.23 1.78 0.80 655 32 22 2.73 1.85 0.68 615 2.55 1.73 0.68 650 2.38 1.62 0.68 673 32 24 2.88 1.61 0.56 638 2.70 1.51 0.56 667 2.55 1.43 0.56 696 32 26 3.03 1.33 0.44 661 2.85 1.25 0.44 690 2.68 1.18 0.44 719	I													
32 20 2.58 2.06 0.80 592 2.40 1.92 0.80 621 2.23 1.78 0.80 655 32 22 2.73 1.85 0.68 615 2.55 1.73 0.68 650 2.38 1.62 0.68 673 32 24 2.88 1.61 0.56 638 2.70 1.51 0.56 667 2.55 1.43 0.56 696 32 26 3.03 1.33 0.44 661 2.85 1.25 0.44 690 2.68 1.18 0.44 719														
32 22 2.73 1.85 0.68 615 2.55 1.73 0.68 650 2.38 1.62 0.68 673 32 24 2.88 1.61 0.56 638 2.70 1.51 0.56 667 2.55 1.43 0.56 696 32 26 3.03 1.33 0.44 661 2.85 1.25 0.44 690 2.68 1.18 0.44 719	I													
32 24 2.88 1.61 0.56 638 2.70 1.51 0.56 667 2.55 1.43 0.56 696 32 26 3.03 1.33 0.44 661 2.85 1.25 0.44 690 2.68 1.18 0.44 719	I												l	
32 26 3.03 1.33 0.44 661 2.85 1.25 0.44 690 2.68 1.18 0.44 719	I												l	
	I							1						
						661								

NOTE Q : Total capacity (kW) SHF : Sensible heat factor DB : Dry-bulb temperature SHC : Sensible heat capacity (kW) INPUT : Total power input (W) WB : Wet-bulb temperature

PERFORMANCE DATA COOLING operation Rated frequency 77Hz MFZ-KA35VA/ SUZ-KA35VA.TH, SUZ-KA35VAH.TH

CAPACITY: 3.5(kW) SHF: 0.65 INPUT: 1090(W)

NDOOD	INDOOR			21				 25	OUTDO	UK I	DB(℃)	 27				30	
	WB(°C)	Q	SHC	SHF	INPUT		SHC	SHF	INPUT	_	SHC	SHF	INPUT	Q	SHC	SHF	INPU
21	18	4.11	1.93	0.47	872	Q 3.94	1.85	0.47	916	Q 3.78	1.78	0.47	959	3.64	1.71	0.47	1003
21	20	4.29	1.50	0.35	916	4.11	1.44	0.35	970	3.99	1.40	0.35	992	3.85	1.35	0.35	1036
22	18	4.11	2.10	0.51	872	3.94	2.01	0.51	916	3.78	1.93	0.51	959	3.64	1.86	0.51	1003
22	20	4.29	1.67	0.39	916	4.11	1.60	0.39	970	3.99	1.56	0.39	992	3.85	1.50	0.39	1036
22	22	4.46	1.20	0.27	948	4.31	1.16	0.27	1008	4.20	1.13	0.27	1036	4.03	1.09	0.27	1079
23	18	4.11	2.26	0.55	872	3.94	2.17	0.55	916	3.78	2.08	0.55	959	3.64	2.00	0.55	1003
23	20	4.29	1.84	0.43	916	4.11	1.77	0.43	970	3.99	1.72	0.43	992	3.85	1.66	0.43	1036
23	22	4.46	1.38	0.31	948	4.31	1.33	0.31	1008	4.20	1.30	0.31	1036	4.03	1.25	0.31	1079
24	18	4.11	2.43	0.59	872	3.94	2.32	0.59	916	3.78	2.23	0.59	959	3.64	2.15	0.59	1003
24	20	4.29	2.02	0.47	916	4.11	1.93	0.47	970	3.99	1.88	0.47	992	3.85	1.81	0.47	1036
24	22	4.46	1.56	0.35	948	4.31	1.51	0.35	1008	4.20	1.47	0.35	1036	4.03	1.41	0.35	1079
24	24	4.69	1.08	0.23	992	4.52	1.04	0.23	1046	4.41	1.01	0.23	1079	4.27	0.98	0.23	1134
25	18	4.11	2.59	0.63	872	3.94	2.48	0.63	916	3.78	2.38	0.63	959	3.64	2.29	0.63	1003
25	20	4.29	2.19	0.51	916	4.11	2.10	0.51	970	3.99	2.03	0.51	992	3.85	1.96	0.51	1036
25	22	4.46	1.74	0.39	948	4.31	1.68	0.39	1008	4.20	1.64	0.39	1036	4.03	1.57	0.39	1079
25	24	4.69	1.27	0.27	992	4.52	1.22	0.27	1046	4.41	1.19	0.27	1079	4.27	1.15	0.27	1134
26	18	4.11	2.76	0.67	872	3.94	2.64	0.67	916	3.78	2.53	0.67	959	3.64	2.44	0.67	1003
26	20	4.29	2.36	0.55	916	4.11	2.26	0.55	970	3.99	2.19	0.55	992	3.85	2.12	0.55	1036
26	22	4.46	1.92	0.43	948	4.31	1.85	0.43	1008	4.20	1.81	0.43	1036	4.03	1.73	0.43	1079
26	24	4.69	1.45	0.31	992	4.52	1.40	0.31	1046	4.41	1.37	0.31	1079	4.27	1.32	0.31	1134
26	26	4.83	0.92	0.19	1046	4.69	0.89	0.19	1101	4.62	0.88	0.19	1134	4.48	0.85	0.19	1166
27	18	4.11	2.92	0.71	872	3.94	2.80	0.71	916	3.78	2.68	0.71	959	3.64	2.58	0.71	1003
27	20	4.29	2.53	0.59	916	4.11	2.43	0.59	970	3.99	2.35	0.59	992	3.85	2.27	0.59	1036
27	22	4.46	2.10	0.47	948	4.31	2.02	0.47	1008	4.20	1.97	0.47	1036	4.03	1.89	0.47	1079
27	24	4.69	1.64	0.35	992	4.52	1.58	0.35	1046	4.41	1.54	0.35	1079	4.27	1.49	0.35	1134
27	26	4.83	1.11	0.23	1046	4.69	1.08	0.23	1101	4.62	1.06	0.23	1134	4.48	1.03	0.23	1166
28	18	4.11	3.08	0.75	872	3.94	2.95	0.75	916	3.78	2.84	0.75	959	3.64	2.73	0.75	1003
28	20	4.29	2.70	0.63	916	4.11	2.59	0.63	970	3.99	2.51	0.63	992	3.85	2.43	0.63	1036
28	22	4.46	2.28	0.51	948	4.31	2.20	0.51	1008	4.20	2.14	0.51	1036	4.03	2.05	0.51	1079
28	24	4.69	1.83	0.39	992	4.52	1.76	0.39	1046	4.41	1.72	0.39	1079	4.27	1.67	0.39	1134
28	26	4.83	1.30	0.27	1046	4.69	1.27	0.27	1101	4.62	1.25	0.27	1134	4.48	1.21	0.27	1166
29	18	4.11	3.25	0.79	872	3.94	3.11	0.79	916	3.78	2.99	0.79	959	3.64	2.88	0.79	1003
29	20	4.29	2.87	0.67	916	4.11	2.76	0.67	970	3.99	2.67	0.67	992	3.85		0.67	1036
29	22	4.46	2.45	0.55	948	4.31	2.37	0.55	1008	4.20	2.31	0.55	1036	4.03	2.21	0.55	1079
29	24	4.69	2.02	0.43	992	4.52	1.94	0.43	1046	4.41	1.90	0.43	1079	4.27	1.84	0.43	1134
29	26	4.83	1.50	0.31	1046	4.69	1.45	0.31	1101	4.62	1.43	0.31	1134	4.48	1.39	0.31	1166
30	18	4.11	3.41	0.83	872	3.94	3.27	0.83	916	3.78	3.14	0.83	959	3.64		0.83	1003
30	20	4.29	3.04	0.71	916	4.11	2.92	0.71	970	3.99	2.83	0.71	992	3.85	1	0.71	1036
30	22	4.46	2.63	0.59	948	4.31	2.54	0.59	1008	4.20	2.48	0.59	1036	4.03	1	0.59	1079
30	24	4.69	2.20	0.47	992	4.52	2.12	0.47	1046	4.41	2.07	0.47	1079	4.27		0.47	1134
30	26	4.83	1.69	0.35	1046	4.69	1.64	0.35	1101	4.62	1.62	0.35	1134	4.48	1	0.35	1166
31	18	4.11	3.58	0.87	872	3.94	3.43	0.87	916	3.78	3.29	0.87	959	3.64	1	0.87	1003
31	20	4.29	3.22	0.75	916	4.11	3.08	0.75	970	3.99	2.99	0.75	992	3.85	1	0.75	1036
31	22	4.46	2.81	0.63	948	4.31	2.71	0.63	1008	4.20	2.65	0.63	1036	4.03	1	0.63	1079
31	24	4.69	2.39	0.51	992	4.52	2.30	0.51	1046	4.41	2.25	0.51	1079	4.27		0.51	1134
31	26	4.83	1.88	0.39	1046	4.69	1.83	0.39	1101	4.62	1.80	0.39	1134	4.48	1	0.39	1166
32	18	4.11	3.74	0.91	872	3.94	3.58	0.91	916	3.78	3.44	0.91	959	3.64	1	0.91	1003
32	20	4.29	3.39	0.79	916	4.11	3.25	0.79	970	3.99	3.15	0.79	992	3.85	1	0.79	1036
32	22	4.46	2.99	0.67	948	4.31	2.88	0.67	1008	4.20	2.81	0.67	1036	4.03	1	0.67	1079
32	24		2.58	0.55	992	4.52	2.48	0.55	1046	4.41	2.43		1079		2.35	0.55	1134
32	26	4.83	2.08	0.43	1046			0.43	1101 heat fac		1.99	0.43 Drv-bi	1134		1.93	0.43	1166

NOTE Q: Total capacity (kW) SHF: Sensible heat factor DB: Dry-bulb temperature SHC: Sensible heat capacity (kW) INPUT: Total power input (W) WB: Wet-bulb temperature

PERFORMANCE DATA COOLING operation Rated frequency 77Hz MFZ-KA35VA/ SUZ-KA35VA.TH, SUZ-KA35VAH.TH

CAPACITY: 3.5(kW) SHF: 0.65 INPUT: 1090(W)

CAPACI	TY : 3.5(l	(W) S	HF:0	.65 IN	IPUT : 10			'D D	D(°C \				
INIDOGE	INIDOOD			25		OU	TDOC		B(℃)			10	
	INDOOR			35	IN ID: IT			10	IN ID: IT			16	IN ID: IT
	WB (℃)	Q	SHC	SHF	INPUT	Q	SHC	SHF	INPUT	Q	SHC	SHF	INPUT
21	18	3.43	1.61	0.47	1068	3.15	1.48	0.47	1134	2.91	1.37	0.47	1177
21	20	3.61	1.26	0.35	1112	3.36	1.18	0.35	1166	3.12	1.09	0.35	1232
22	18	3.43	1.75	0.51	1068	3.15	1.61	0.51	1134	2.91	1.48	0.51	1177
22	20	3.61	1.41	0.39	1112	3.36	1.31	0.39	1166	3.12	1.21	0.39	1232
22	22	3.82	1.03	0.27	1155	3.57	0.96	0.27	1221	3.33	0.90	0.27	1264
23	18	3.43	1.89	0.55	1068	3.15	1.73	0.55	1134	2.91	1.60	0.55	1177
23	20	3.61	1.55	0.43	1112	3.36	1.44	0.43	1166	3.12	1.34	0.43	1232
23	22	3.82	1.18	0.31	1155	3.57	1.11	0.31	1221	3.33	1.03	0.31	1264
24	18	3.43	2.02	0.59	1068	3.15	1.86	0.59	1134	2.91	1.71	0.59	1177
24	20	3.61	1.69	0.47	1112	3.36	1.58	0.47	1166	3.12	1.46	0.47	1232
24	22	3.82	1.34	0.35	1155	3.57	1.25	0.35	1221	3.33	1.16	0.35	1264
24	24	4.03	0.93	0.23	1199	3.78	0.87	0.23	1254	3.57	0.82	0.23	1308
25	18	3.43	2.16	0.63	1068	3.15	1.98	0.63	1134	2.91	1.83	0.63	1177
25	20	3.61	1.84	0.51	1112	3.36	1.71	0.51	1166	3.12	1.59	0.51	1232
25	22	3.82	1.49	0.39	1155	3.57	1.39	0.39	1221	3.33	1.30	0.39	1264
25	24	4.03	1.09	0.27	1199	3.78	1.02	0.27	1254	3.57	0.96	0.27	1308
26	18	3.43	2.30	0.67	1068	3.15	2.11	0.67	1134	2.91	1.95	0.67	1177
26	20	3.61	1.98	0.55	1112	3.36	1.85	0.55	1166	3.12	1.71	0.55	1232
26	22	3.82	1.64	0.43	1155	3.57	1.54	0.43	1221	3.33	1.43	0.43	1264
26	24	4.03	1.25	0.31	1199	3.78	1.17	0.31	1254	3.57	1.11	0.31	1308
26	26	4.24	0.80	0.19	1243	3.99	0.76	0.19	1297	3.75	0.71	0.19	1352
27	18	3.43	2.44	0.71	1068	3.15	2.24	0.71	1134	2.91	2.06	0.71	1177
27	20	3.61	2.13	0.59	1112	3.36	1.98	0.59	1166	3.12	1.84	0.59	1232
27	22	3.82	1.79	0.47	1155	3.57	1.68	0.47	1221	3.33	1.56	0.47	1264
27	24	4.03	1.41	0.35	1199	3.78	1.32	0.35	1254	3.57	1.25	0.35	1308
27	26	4.24	0.97	0.23	1243	3.99	0.92	0.23	1297	3.75	0.86	0.23	1352
28	18	3.43	2.57	0.75	1068	3.15	2.36	0.75	1134	2.91	2.18	0.75	1177
28	20	3.61	2.27	0.63	1112	3.36	2.12	0.63	1166	3.12	1.96	0.63	1232
28	22	3.82	1.95	0.51	1155	3.57	1.82	0.51	1221	3.33	1.70	0.51	1264
28	24	4.03	1.57	0.39	1199	3.78	1.47	0.39	1254	3.57	1.39	0.39	1308
28	26	4.24	1.14	0.27	1243	3.99	1.08	0.27	1297	3.75	1.01	0.27	1352
29	18	3.43	2.71	0.79	1068	3.15	2.49	0.79	1134	2.91	2.29	0.79	1177
29	20	3.61	2.42	0.67	1112	3.36	2.25	0.67	1166	3.12	2.09	0.67	1232
29	22	3.82	2.10	0.55	1155	3.57	1.96	0.55	1221	3.33	1.83	0.55	1264
29	24	4.03	1.73	0.43	1199	3.78	1.63	0.43	1254	3.57	1.54	0.43	1308
29	26	4.24	1.31	0.31	1243	3.99	1.24	0.31	1297	3.75	1.16	0.31	1352
30	18	3.43	2.85	0.83	1068	3.15	2.61	0.83	1134	2.91	2.41	0.83	1177
30	20	3.61	2.56	0.71	1112	3.36	2.39	0.71	1166	3.12	2.21	0.71	1232
30	22	3.82	2.25	0.59	1155	3.57	2.11	0.59	1221	3.33	1.96	0.59	1264
30	24	4.03	1.89	0.47	1199	3.78	1.78	0.47	1254	3.57	1.68	0.47	1308
30	26	4.24	1.48	0.35	1243	3.99	1.40	0.35	1297	3.75	1.31	0.35	1352
31	18	3.43	2.98	0.87	1068	3.15	2.74	0.87	1134	2.91	2.53	0.87	1177
31	20	3.61	2.70	0.75	1112	3.36	2.52	0.75	1166	3.12	2.34	0.75	1232
31	22	3.82	2.40	0.63	1155	3.57	2.25	0.63	1221	3.33	2.09	0.63	1264
31	24	4.03	2.05	0.51	1199	3.78	1.93	0.51	1254	3.57	1.82	0.51	1308
31	26	4.24	1.65	0.39	1243	3.99	1.56	0.39	1297	3.75	1.46	0.39	1352
32	18	3.43	3.12	0.91	1068	3.15	2.87	0.91	1134	2.91	2.64	0.91	1177
32	20	3.61	2.85	0.79	1112	3.36	2.65	0.79	1166	3.12	2.46	0.79	1232
32	22	3.82	2.56	0.67	1155	3.57	2.39	0.67	1221	3.33	2.23	0.67	1264
32	24	4.03	2.21	0.55	1199	3.78	2.08	0.55	1254	3.57	1.96	0.55	1308
32	26		1.82	0.43		3.99	1.72	0.43	1297	3.75	1.61	0.43	1352
NOTE	Q : Tota		•	•	•	•		•	heat fact	•	•	•	•

NOTE Q : Total capacity (kW) SHF : Sensible heat factor DB : Dry-bulb temperature SHC : Sensible heat capacity (kW) INPUT : Total power input (W) WB : Wet-bulb temperature

PERFORMANCE DATA COOLING operation Rated frequency 75Hz MFZ-KA50VA/ SUZ-KA50VA.TH

CAPACITY: 4.8(kW) SHF: 0.63 INPUT: 1550(W)

	1 Y : 4.8(I						,		OUTDO	OR I	DB(℃)						
INDOOR	INDOOR		:	21			:	25				27			;	30	
DB(℃)	WB(℃)	Q	SHC	SHF	INPUT												
21	18	5.64	2.54	0.45	1240	5.40	2.43	0.45	1302	5.18	2.33	0.45	1364	4.99	2.25	0.45	1426
21	20	5.88	1.94	0.33	1302	5.64	1.86	0.33	1380	5.47	1.81	0.33	1411	5.28	1.74	0.33	1473
22	18	5.64	2.76	0.49	1240	5.40	2.65	0.49	1302	5.18	2.54	0.49	1364	4.99	2.45	0.49	1426
22	20	5.88	2.18	0.37	1302	5.64	2.09	0.37	1380	5.47	2.02	0.37	1411	5.28	1.95	0.37	1473
22	22	6.12	1.53	0.25	1349	5.90	1.48	0.25	1434	5.76	1.44	0.25	1473	5.52	1.38	0.25	1535
23	18	5.64	2.99	0.53	1240	5.40	2.86	0.53	1302	5.18	2.75	0.53	1364	4.99	2.65	0.53	1426
23	20	5.88	2.41	0.41	1302	5.64	2.31	0.41	1380	5.47	2.24	0.41	1411	5.28	2.16	0.41	1473
23	22	6.12	1.77	0.29	1349	5.90	1.71	0.29	1434	5.76	1.67	0.29	1473	5.52	1.60	0.29	1535
24	18	5.64	3.21	0.57	1240	5.40	3.08	0.57	1302	5.18	2.95	0.57	1364	4.99	2.85	0.57	1426
24	20	5.88	2.65	0.45	1302	5.64	2.54	0.45	1380	5.47	2.46	0.45	1411	5.28	2.38	0.45	1473
24	22	6.12	2.02	0.33	1349	5.90	1.95	0.33	1434	5.76	1.90	0.33	1473	5.52	1.82	0.33	1535
24	24	6.43	1.35	0.21	1411	6.19	1.30	0.21	1488	6.05	1.27	0.21	1535	5.86	1.23	0.21	1612
25	18	5.64	3.44	0.61	1240	5.40	3.29	0.61	1302	5.18	3.16	0.61	1364	4.99	3.05	0.61	1426
25	20	5.88	2.88	0.49	1302	5.64	2.76	0.49	1380	5.47	2.68	0.49	1411	5.28	2.59	0.49	1473
25	22	6.12	2.26	0.37	1349	5.90	2.18	0.37	1434	5.76	2.13	0.37	1473	5.52	2.04	0.37	1535
25	24	6.43	1.61	0.25	1411	6.19	1.55	0.25	1488	6.05	1.51	0.25	1535	5.86	1.46	0.25	1612
26	18	5.64	3.67	0.65	1240	5.40	3.51	0.65	1302	5.18	3.37	0.65	1364	4.99	3.24	0.65	1426
26	20	5.88	3.12	0.53	1302	5.64	2.99	0.53	1380	5.47	2.90	0.53	1411	5.28	2.80	0.53	1473
26	22	6.12	2.51	0.41	1349	5.90	2.42	0.41	1434	5.76	2.36	0.41	1473	5.52	2.26	0.41	1535
26	24	6.43	1.87	0.29	1411	6.19	1.80	0.29	1488	6.05	1.75	0.29	1535	5.86	1.70	0.29	1612
26	26	6.62	1.13	0.17	1488	6.43	1.09	0.17	1566	6.34	1.08	0.17	1612	6.14	1.04	0.17	1659
27	18	5.64	3.89	0.69	1240	5.40	3.73	0.69	1302	5.18	3.58	0.69	1364	4.99	3.44	0.69	1426
27	20	5.88	3.35	0.57	1302	5.64	3.21	0.57	1380	5.47	3.12	0.57	1411	5.28	3.01	0.57	1473
27	22	6.12	2.75	0.45	1349	5.90	2.66	0.45	1434	5.76	2.59	0.45	1473	5.52	2.48	0.45	1535
27	24	6.43	2.12	0.33	1411	6.19	2.04	0.33	1488	6.05	2.00	0.33	1535	5.86	1.93	0.33	1612
27	26	6.62	1.39	0.21	1488	6.43	1.35	0.21	1566	6.34	1.33	0.21	1612	6.14	1.29	0.21	1659
28	18	5.64	4.12	0.73	1240	5.40	3.94	0.73	1302	5.18	3.78	0.73	1364	4.99	3.64	0.73	1426
28	20	5.88	3.59	0.61	1302	5.64	3.44	0.61	1380	5.47	3.34	0.61	1411	5.28	3.22	0.61	1473
28	22	6.12	3.00	0.49	1349	5.90	2.89	0.49	1434	5.76	2.82	0.49	1473	5.52	2.70	0.49	1535
28	24	6.43	2.38	0.37	1411	6.19	2.29	0.37	1488	6.05	2.24	0.37	1535	5.86	2.17	0.37	1612
28	26	6.62	1.66	0.25	1488	6.43	1.61	0.25	1566	6.34	1.58	0.25	1612	6.14		0.25	1659
29	18	5.64	4.34	0.77	1240	5.40	4.16	0.77	1302	5.18	3.99	0.77	1364	4.99	3.84	0.77	1426
29	20	5.88	3.82	0.65	1302	5.64	3.67	0.65	1380	5.47	3.56	0.65	1411	5.28	3.43	0.65	1473
29	22	6.12				5.90			1434	5.76				5.52			l
29	24	6.43		0.41	1411	6.19	2.54		1488	6.05	2.48	0.41	1535	5.86		0.41	1612
29 30	26 18	6.62 5.64	1.92 4.57	0.29	1488 1240	6.43 5.40	1.87 4.37	0.29	1566 1302	6.34 5.18	1.84 4.20	0.29	1612 1364	6.14 4.99	1.78 4.04	0.29	1659 1426
30	20	5.88	4.06	0.69	1302	5.64	3.89	0.69	1302	5.47	3.78	0.69	1411	5.28	3.64	0.69	1426
30	20	6.12	3.49	0.69	1302	5.90	3.37	0.69	1434	5.76	3.78	0.69	1473	5.52		0.69	1535
30	24	6.43	2.89	0.57	1411	6.19	2.79	0.57	1488	6.05	2.72	0.57	1535	5.86	1	0.57	1612
30	26	6.62	2.09	0.43	1488	6.43	2.19		1566	6.34	2.72	0.43	1612	6.14		0.43	1659
31	18	5.64	4.79	0.85	1240	5.40	4.59	0.85	1302	5.18	4.41	0.85	1364	4.99	4.24	0.85	1426
31	20	5.88	4.79	0.63	1302	5.64	4.12		1302	5.47	3.99	0.63	1411	5.28	3.85	0.63	1473
31	22	6.12	3.73	0.73	1349	5.90	3.60	0.73	1434	5.76	3.51	0.73	1473	5.52		0.73	1535
31	24	6.43	3.15	0.49	1411	6.19	3.03	0.49	1488	6.05	2.96	0.49	1535	5.86	1	0.49	1612
31	26	6.62	2.45	0.49	1488	6.43	2.38		1566	6.34	2.34	0.49	1612	6.14		0.49	1659
32	18	5.64	5.02	0.89	1240	5.40	4.81	0.89	1302	5.18	4.61	0.89	1364	4.99	4.44	0.89	1426
32	20	5.88	4.53	0.89	1302	5.64	4.34	0.89	1380	5.47	4.21	0.89	1411	5.28	4.07	0.89	1473
32	22	6.12		0.65	1349	5.90	3.84	0.65	1434	5.76	3.74	0.65	1473	5.52		0.65	1535
32 32	24	6.43		0.63	1411	6.19	3.28		1488	6.05	3.74	0.63	1535	5.86	1	0.63	1612
32 32	26		2.72		1488	6.43	l .	1	1566	6.34		0.33	1612	l	2.52		1659
NOTE	Q : Tot				1 400				heat fac				ilb temp			0.41	1008

NOTE Q : Total capacity (kW) SHF : Sensible heat factor SHC : Sensible heat capacity (kW) INPUT : Total power input (W) WB : Wet-bulb temperature

PERFORMANCE DATA COOLING operation Rated frequency 75Hz MFZ-KA50VA/ SUZ-KA50VA.TH

CAPACITY: 4.8(kW) SHF: 0.63 INPUT: 1550(W)

CAI AGI	11:4.8(KVV) C) I II . U	.03 11	WI OI . I) JTDOC	R D	B(℃)				
INDOOR	INDOOR			35				40	. (5)			46	
	WB (℃)	Q	SHC	SHF	INPUT	Q	SHC	SHF	INPUT	Q	SHC	SHF	INPUT
21	18	4.70	2.12	0.45	1519	4.32	1.94	0.45	1612	3.98	1.79	0.45	1674
21	20	4.94	1.63	0.33	1581	4.61	1.52	0.33	1659	4.27	1.41	0.33	1752
22	18	4.70	2.30	0.49	1519	4.32	2.12	0.49	1612	3.98	1.95	0.49	1674
22	20	4.94	1.83	0.37	1581	4.61	1.70	0.37	1659	4.27	1.58	0.37	1752
22	22	5.23	1.31	0.25	1643	4.90	1.22	0.25	1736	4.56	1.14	0.25	1798
23	18	4.70	2.49	0.53	1519	4.32	2.29	0.53	1612	3.98	2.11	0.53	1674
23	20	4.94	2.03	0.41	1581	4.61	1.89	0.41	1659	4.27	1.75	0.41	1752
23	22	5.23	1.52	0.29	1643	4.90	1.42	0.29	1736	4.56	1.32	0.29	1798
24	18	4.70	2.68	0.57	1519	4.32	2.46	0.57	1612	3.98	2.27	0.57	1674
24	20	4.94	2.22	0.45	1581	4.61	2.07	0.45	1659	4.27	1.92	0.45	1752
24	22	5.23	1.73	0.33	1643	4.90	1.62	0.33	1736	4.56	1.50	0.33	1798
24	24	5.52	1.16	0.21	1705	5.18	1.09	0.21	1783	4.90	1.03	0.21	1860
25	18	4.70	2.87	0.61	1519	4.32	2.64	0.61	1612	3.98	2.43	0.61	1674
25	20	4.94	2.42	0.49	1581	4.61	2.26	0.49	1659	4.27	2.09	0.49	1752
25	22	5.23	1.94	0.37	1643	4.90	1.81	0.37	1736	4.56	1.69	0.37	1798
25	24	5.52	1.38	0.25	1705	5.18	1.30	0.25	1783	4.90	1.22	0.25	1860
26	18	4.70	3.06	0.65	1519	4.32	2.81	0.65	1612	3.98	2.59	0.65	1674
26	20	4.94	2.62	0.53	1581	4.61	2.44	0.53	1659	4.27	2.26	0.53	1752
26	22	5.23	2.15	0.41	1643	4.90	2.01	0.41	1736	4.56	1.87	0.41	1798
26	24	5.52	1.60	0.29	1705	5.18	1.50	0.29	1783	4.90	1.42	0.29	1860
26	26	5.81	0.99	0.17	1767	5.47	0.93	0.17	1845	5.14	0.87	0.17	1922
27	18	4.70	3.25	0.69	1519	4.32	2.98	0.69	1612	3.98	2.75	0.69	1674
27	20	4.94	2.82	0.57	1581	4.61	2.63	0.57	1659	4.27	2.44	0.57	1752
27	22	5.23	2.35	0.45	1643	4.90	2.20	0.45	1736	4.56	2.05	0.45	1798
27	24	5.52	1.82	0.33	1705	5.18	1.71	0.33	1783	4.90	1.62	0.33	1860
27	26	5.81	1.22	0.21	1767	5.47	1.15	0.21	1845	5.14	1.08	0.21	1922
28	18	4.70	3.43	0.73	1519	4.32	3.15	0.73	1612	3.98	2.91	0.73	1674
28	20	4.94	3.02	0.61	1581	4.61	2.81	0.61	1659	4.27	2.61	0.61	1752
28	22	5.23	2.56	0.49	1643	4.90	2.40	0.49	1736	4.56	2.23	0.49	1798
28	24	5.52	2.04	0.37	1705	5.18	1.92	0.37	1783	4.90	1.81	0.37	1860
28	26	5.81	1.45	0.25	1767	5.47	1.37	0.25	1845	5.14	1.28	0.25	1922
29	18	4.70	3.62	0.77	1519	4.32	3.33	0.77	1612	3.98	3.07	0.77	1674
29	20	4.94	3.21	0.65	1581	4.61	3.00	0.65	1659	4.27	2.78	0.65	1752
29	22	5.23	2.77	0.53	1643	4.90	2.59	0.53	1736	4.56	2.42	0.53	1798
29	24	5.52	2.26	0.41	1705	5.18	2.13	0.41	1783	4.90	2.01	0.41	1860
29	26	5.81	1.68	0.29	1767	5.47	1.59	0.29	1845	5.14	1.49	0.29	1922
30	18	4.70	3.81	0.81	1519	4.32	3.50	0.81	1612	3.98	3.23	0.81	1674
30	20	4.94	3.41	0.69	1581	4.61	3.18	0.69	1659	4.27	2.95	0.69	1752
30	22	5.23	2.98	0.57	1643	4.90	2.79	0.57	1736	4.56	2.60	0.57	1798
30	24	5.52	2.48	0.45	1705	5.18	2.33	0.45	1783	4.90	2.20	0.45	1860
30	26	5.81	1.92	0.33	1767	5.47	1.81	0.33	1845	5.14	1.69	0.33	1922
31	18	4.70	4.00	0.85	1519	4.32	3.67	0.85	1612	3.98	3.39	0.85	1674
31	20	4.94	3.61	0.73	1581	4.61	3.36	0.73	1659	4.27	3.12	0.73	1752
31	22	5.23	3.19	0.61	1643	4.90	2.99	0.61	1736	4.56	2.78	0.61	1798
31	24	5.52	2.70	0.49	1705	5.18	2.54	0.49	1783	4.90	2.40	0.49	1860
31	26	5.81	2.15	0.37	1767	5.47	2.02	0.37	1845	5.14	1.90	0.37	1922
32	18	4.70	4.19	0.89	1519	4.32	3.84	0.89	1612	3.98	3.55	0.89	1674
32	20	4.94	3.81	0.77	1581	4.61	3.55	0.77	1659	4.27	3.29	0.77	1752
32	22	5.23	3.40	0.65	1643	4.90	3.18	0.65	1736	4.56	2.96	0.65	1798
32	24	5.52	2.93	0.53	1705	5.18	2.75	0.53	1783	4.90	2.59	0.53	1860
32	26	5.81	2.38	0.41	1767	5.47	2.24	0.41	1845	5.14	2.11	0.41	1922
NOTE	Q : Tota	al cana	acity (k	\\\\		СП	$\mathbf{E} \cdot \mathbf{g}_{\Delta 1}$	acibla	heat fact	hor	DB ·	Dry bu	ilb tempe

NOTE Q : Total capacity (kW) SHF : Sensible heat factor DB : Dry-bulb temperature SHC : Sensible heat capacity (kW) INPUT : Total power input (W) WB : Wet-bulb temperature

PERFORMANCE DATA

HEATING operation

MFZ-KA25VA/ SUZ-KA25VA(H).TH Rated frequency 80Hz

CAPACITY: 3.4(kW) INPUT: 835(W)

						OU	TDOO	R WB	(°C)					
INDOOR	-	10		-5		0		5		10		15		20
DB(℃)	Q	INPUT												
15	2.14	534	2.58	651	3.03	735	3.47	793	3.91	8.43	4.32	868	4.76	885
21	2.04	585	2.45	693	2.89	868	3.30	827	3.74	868	4.15	893	4.57	927
26	1.84	626	2.28	735	2.69	810	3.13	868	3.57	910	3.98	935	4.42	960

MFZ-KA35VA/ SUZ-KA35VA(H).TH Rated frequency 74Hz

CAPACITY: 4.0(kW) INPUT: 1100(W)

		OUTDOOR WB(°C)												
INDOOR	-	10		-5		0		5		10		15		20
DB(°C)	Q	INPUT	Q	INPUT	Q	INPUT	Q	INPUT	Q	INPUT	Q	INPUT	Q	INPUT
15	2.52	715	3.04	858	3.56	968	4.08	1045	4.60	1111	5.08	1144	5.60	1166
21	2.40	770	2.88	913	3.40	1012	3.88	1089	4.40	1144	4.88	1177	5.38	1221
26	2.16	825	2.68	968	3.16	1067	3.68	1144	4.20	1199	4.68	1232	5.20	1265

MFZ-KA50VA/ SUZ-KA50VA.TH Rated frequency 79Hz

CAPACITY: 6.0(kW) INPUT: 1860(W)

						OU	TDOO	R WB	(°C)					
INDOOR	-	10		-5		0		5		10		15	- 2	20
DB(℃)	Q	INPUT												
15	3.78	1209	4.56	1451	5.34	1637	6.12	1767	6.90	1879	7.62	1934	8.40	1972
21	3.60	1302	4.32	1544	5.10	1711	5.82	1841	6.60	1934	7.32	1990	8.07	2065
26	3.24	1395	4.02	1637	4.74	1804	5.52	1934	6.30	2027	7.02	2083	7.80	2139

NOTE Q:Total capacity (kW) INPUT:Total power input (W) DB: Dry-bulb temperature WB: Wet-bulb temperature

9

SERVICE FUNCTIONS

MFZ-KA25VA MFZ-KA35VA MFZ-KA50VA

9-1. TIMER SHORT MODE

For service, set time can be shortened by short circuit of JPG and JPS on the electronic control P.C. board.

The time will be shortened as follows. (Refer to 10-7.)

Set time: 1-minute → 1-second

Set time: 3-minute → 3-second (It takes 3 minutes for the compressor to start operation. However, the starting time is shortened by short circuit of JPG and JPS.)

9-2. P.C. BOARD MODIFICATION FOR INDIVIDUAL OPERATION

A maximum of 4 indoor units with wireless remote controllers can be used in a room.


In this case, to operate each indoor unit individually by each remote controller, both the P.C. boards of remote controller and the electronic control P.C. boards must be modified according to the number of the indoor unit.

How to modify the remote controller P.C. board

Remove batteries before modification.

The board has a print as shown below:

Remote controller model: KM05G

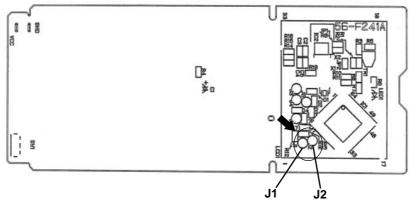

NOTE: For remodelling, take out the batteries and push the
OPERATE/STOP(ON/OFF) button
twice or 3 times at first.
After finish remodelling, put back
the batteries then press the
RESET button.

The P.C. board has the print "J1" and "J2". Solder "J1" and "J2" according to the number of indoor unit as shown in Table 1. After modification, press the RESET button.

Table 1


	1 unit operation	2 units operation	3 units operation	4 units operation
No. 1 unit	No modification	Same as at left	Same as at left	Same as at left
No. 2 unit	_	Solder J1	Same as at left	Same as at left
No. 3 unit	_	_	Solder J2	Same as at left
No. 4 unit	_	_	_	Solder both J1 and J2

How to modify the electronic control P.C. board

Turn OFF the power supply before modification. Cut off "JR05" and "JR06" on the electronic control P.C. board according to the number of indoor unit as shown in Table 2. (Refer to 9-7.)

Table 2

	JR05	JR06
No. 1 unit	No modification	No modification
No. 2 unit	Cut off JR05	No modification
No. 3 unit	No modification	Cut off JR06
No. 4 unit	Cut off JR05	Cut off JR06

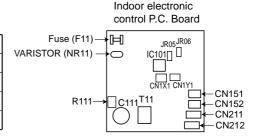

NOTE: After modification, turn ON the power supply and with the remote controller headed towards the indoor unit, press the OPERATE/STOP(ON/OFF) button. If one or two beeps is heard from the indoor unit, modification is completed correctly.

9-3. AUTO RESTART FUNCTION


When the indoor unit is controlled with the remote controller, the operation mode, the set temperature, and the fan speed are memorized by the indoor electronic control P.C. board. The "AUTO RESTART FUNCTION" sets to work the moment power has restored after power failure. Then, the unit will restart automatically.

Operation

- ① If the main power has been cut, the operation settings remain.
- ② After the power is restored, the unit restarts automatically according to the memory. (However, it takes at least 3 minutes for the compressor to start running.)

How to release "AUTO RESTART FUNCTION"

- ①Turn off the main power for the unit.
- ②Solder the Jumper wire to JR07 on the indoor electronic control P.C. board. (Refer to 10-7.)

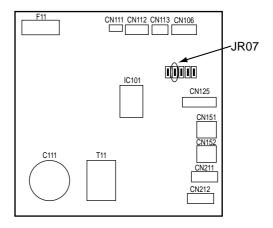

NOTE:

- The operation settings are memorized when 10 seconds have passed after the indoor unit was operated with the remote controller.
- If main power is turned OFF or a power failure occurs while AUTO START/STOP timer is active, the timer setting is cancelled.
- If the unit has been off with the remote controller before power failure, the auto restart function does not work as the power button of the remote controller is off.
- To prevent breaker tripping due to the rush of starting current, systematize other home appliance not to turn on at the same time.
- When some air conditioners are connected to the same supply system, if they are operated before power failure, the starting current of all the compressors may flow simultaneously at restart.
 Therefore, the special counter-measures are required to prevent the main voltage-drop or the rush of the starting current

by adding to the system that allows the units to start one by one.

TROUBLESHOOTING

MFZ-KA25VA MFZ-KA35VA MFZ-KA50VA

10-1. Cautions on troubleshooting

- 1. Before troubleshooting, check the following:
 - 1) Check the power supply voltage.
 - 2) Check the indoor/outdoor connecting wire for mis-wiring.

2. Take care the following during servicing.

- 1) Before servicing the air conditioner, be sure to turn off the unit first with the remote controller, and then after confirming the horizontal vane is closed, turn off the breaker and / or disconnect the power plug.
- 2) Be sure to turn OFF the power supply before removing the front panel, the cabinet, the top panel, and the electronic control P.C. board.
- 3) When removing the electronic control P.C. board, hold the edge of the board with care NOT to apply stress on the components.
- 4) When connecting or disconnecting the connectors, hold the housing of the connector. DO NOT pull the lead wires.



3. Troubleshooting procedure

- 1) First, check if the OPERATION INDICATOR lamp on the indoor unit is flashing on and off to indicate an abnormality. To make sure, check how many times the abnormality indication is flashing on and off before starting service work.
- 2) Before servicing check that the connector and terminal are connected properly.
- 3) If the electronic control P.C. board is supposed to be defective, check the copper foil pattern for disconnection and the components for bursting and discoloration.
- 4) When troubleshooting, refer to 10-2., 10-3. and 10-4.


4. How to replace batteries


Weak batteries may cause the remote controller malfunction.

In this case, replace the batteries to operate the remote controller normally.

① Remove the front lid and insert batteries. Then reattach the front lid.

2 Press RESET button with tip end of ball point pen or the like, and then use the remote controller.

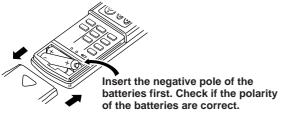

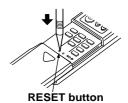

NOTE: 1. If RESET button is not pressed, the remote controller may not operate correctly.

2. This remote controller has a circuit to automatically reset the microcomputer when batteries are replaced. This function is equipped to prevent the microcomputer from malfunctioning due to the voltage drop caused by the battery replacement.

INFORMATION FOR MULTI SYSTEM AIR CONDITIONER

OUTDOOR UNIT: MXZ series

Multi system air conditioner can connect two or more indoor units with one outdoor unit.

•Unit won't operate in case the total capacity of indoor units exceeds the capacity of outdoor units. Do not connect indoor units beyond the outdoor unit capacity.

Operation indicator lamp flashes as shown in the figure below.

•When you try to operate two or more indoor units with one outdoor unit simultaneously, one for the cooling and the other for heating, the operation mode of the indoor unit that operates earlier is selected. The other indoor units will start the operation later cannot operate, indicating as shown in the figure below. In this case, please set all the indoor units to the same operation mode.

OPERATION INDICATOR



Lighted (Green)







Blinking green : Standby for normal operation Blinking orange : Standby for i-save operation

Not lighted

- •When indoor units start operation while the defrosting of outdoor unit is being done, it takes a few minutes (max. 10 minutes) to blow out the warm air.
- •In heating operation, even though the indoor unit is not in operation, the room may get warm or the sound of refrigerant flowing may be heard. This is not a malfunction. The refrigerant continuously into it causes this.

10-2. Failure mode recall function


Outline of the function

This air conditioner can memorize the abnormal condition which has occurred once.

Even though OPERATION INDICATOR lamp indication listed on the troubleshooting check table (10-4.) disappears, the memorized failure details can be recalled.

This mode is very useful when the unit needs to be repaired for the abnormality which doesn't recur.

1. Flow chart of failure mode recall function for the indoor/outdoor unit

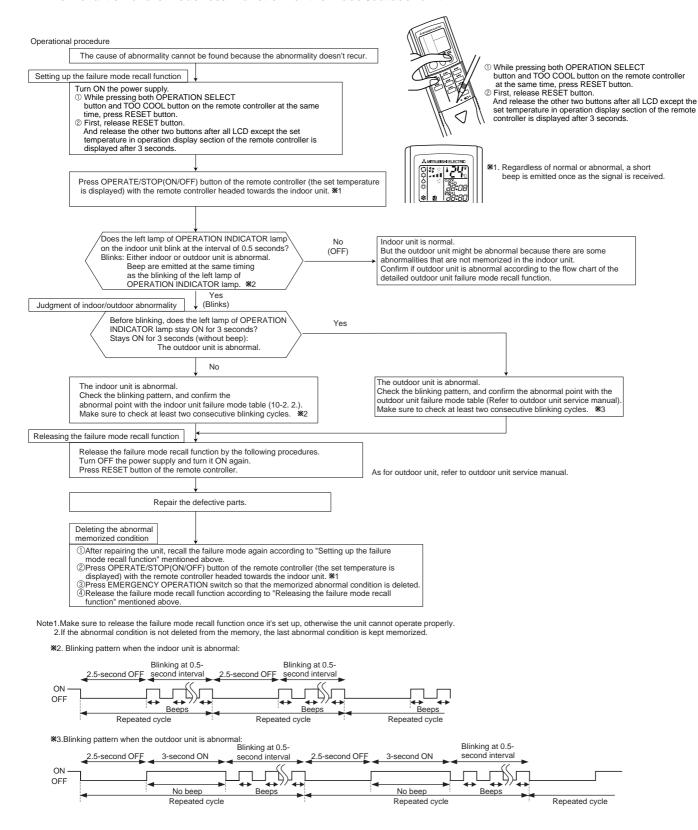


2. Indoor unit failure mode table

NOTE:Blinking patterns of this mode differs from the ones of Troubleshooting check table(10-4.).

Left lamp of OPERATION INDICATOR lamp	Right lamp of OPERATION INDICATOR lamp	Abnormal point (Failure mode)	Check point	Countermeasure
Not lighted	Not lighted	Normal	-	-
1-time flash every 0.5-second	Not lighted	Room temperature thermistor	When the room temperature thermistor short or open circuit is detected every 8 seconds during operation.	Refer to the characteristics of the room temperature thermistor (10-7.).
2-time flash 2.5-second OFF	Not lighted	(IVIAID 1 / ADD SIID)	When the indoor coil thermistor short or open circuit is detected every 8 seconds during operation.	Refer to the characteristic of the main 1,2 indoor coil thermistor and the sub indoor coil thermistor (10-7.).
3-time flash 2.5-second OFF	Not lighted		When the serial signal from the outdoor unit is not received for a maximum of 6 minutes.	Refer to 10-6. [®] "How to check miswiring and serial signal error".
11-time flash	Not lighted	Indoor fan motor (Upper)	When the rotational frequency feedback signal is not emitted during 12-second the indoor fan operation.	Refer to 10-6 ®-1 "Check of indoor fan motor (Upper)"
2.5-second OFF	1-time flash every 0.5-second	Indoor fan motor (Lower)		Refer to 10-6 @-2 "Check of indoor fan motor (Lower)"
12-time flash 2.5-second OFF	Not lighted	Indoor control system	When it cannot be read properly data in the nonvolatile memory of the indoor electronic control P.C. board.	Replace the indoor electronic control P.C. board.
13-time flash 2.5-second OFF	Not lighted	(Main 2)	When the indoor coil thermistor short or open circuit is detected every 8 seconds during operation.	Replace to the characteristic of the main 3 indoor coil thermistor (10-7.).
14-time flash 2.5-second OFF	Not lighted	Damper	When the damper is not located at the designated position.	Refer to 10-6.© "Check of damper".

10-3. Instruction of troubleshooting

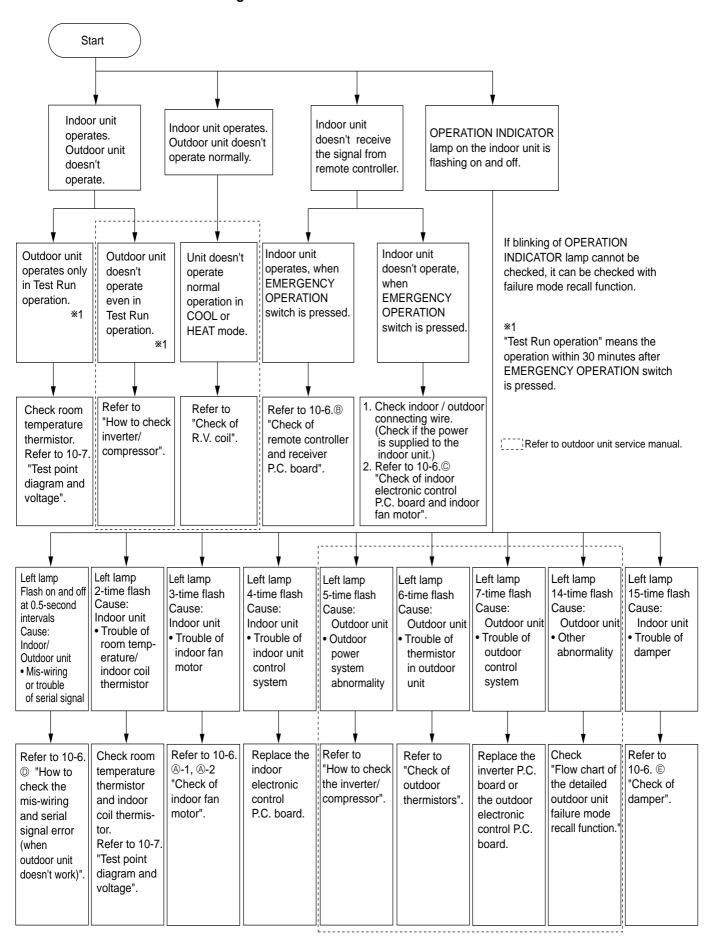

10-4. Troubleshooting check table



 Flashing of OPERATION INDICATOR lamp (left-hand side lamp) indicates abnormalities.

Not lighted NOTE: Before taking measures, make sure that the symptom reappears for accurate troubleshooting.

Self check table

36	ii check i	anie			
No.	Abnormal point	Operation indicator lamp	Symptom	Check point	Countermeasure
1	Mis-Wiring or serial signal	Left lamp flashes. 0.5-second ON	Indoor unit and outdoor unit do not operate.	When the serial signal from the outdoor unit is not received for a maximum of 6 minutes.	Refer to 10-6. "How to check mis-wiring and serial signal error".
2	Outdoor control system	Left lamp lights up	Outdoor unit does not operate.	When it cannot properly read data in the nonvolatile memory of the inverter P.C. board or of the outdoor electronic control P.C. board.	Check the blinking pattern of the LED on the inverter P.C. board or the outdoor electronic control P.C. board.
3	Indoor coil thermistor Room tempera- ture thermistor	Left lamp flashes. 2-time flash	Indoor unit and outdoor unit do not operate.	When the indoor coil or the room temperature thermistor is shorts or opens circuit.	Refer to the characteristics of indoor coil thermistor, and the room temperature thermistor on 10-7.
4	Indoor fan motor	Left lamp flashes. 3-time flash 2.5-second OFF	Indoor unit and outdoor unit do not operate.	When the rotational frequency feedback signal is not emitted during the indoor fan operation.	• Refer to 10-6.®-1, ®-2 "Check of indoor fan motor".
5	Indoor control system	Left lamp flashes. 4-time flash ★○★○★○★○○○○★○★○★○★ 2.5-second OFF	Indoor unit and outdoor unit do not operate.	When it cannot properly read data in the nonvolatile memory of the indoor electronic control P.C. board.	Replace the indoor electronic control P.C. board.
6	Outdoor power system	Left lamp flashes. 5-time flash ★○★○★○★○★○○○★○★○ 2.5-second OFF	Indoor unit and outdoor unit do not operate.	The compressor stops 3 times consecutively for over current protection or start-up failure protection within 1 minute after start-up.	Refer to "Check of inverter/ compressor". Refer to outdoor unit service manual. Check the stop valve.
7	Outdoor thermistors	Left lamp flashes. 6-time flash ★○★○★○★○★○★○○○○★○ 2.5-second OFF	Indoor unit and outdoor unit do not operate.	When the outdoor thermistors short or open circuit during the compressor operation.	Refer to "Check of outdoor thermistor". Refer to outdoor unit service manual.
8	Outdoor control system	Left lamp flashes. 7-time flash 2.5-second OFF	Indoor unit and outdoor unit do not operate.	When it cannot properly read data in the nonvolatile memory of the inverter P.C. board or of the outdoor electronic control P.C. board.	Replace the inverter P.C. board or the outdoor electronic control P.C. board. Refer to outdoor unit service manual.
9	Other abnormality	Left lamp flashes. 14-time flash ★○★○★○★○★○★○★○★○★○★○ 2.5-second OFF	Indoor unit and outdoor unit do not operate.	An abnormality other than above mentioned is detected.	Confirm the abnormality in detail using the failure mode recall function. Refer to outdoor unit service manual.
10	Indoor damper	Left lamp flashes. 15-time flash ★○★○★○★○★○★○★○★○★○★○ 2.5-second OFF	Indoor unit and outdoor unit do not operate.	When the damper is not located at the designated position.	Refer to 10-6.© "Check of damper".

NOTE: When the indoor unit has started operation and the above failures are detected (the first detection after the power ON), the indoor electronic control P.C. board turns OFF the indoor fan motor with OPERATION INDICATOR lamp flashing.

OPERATION INDICATOR







- \cdot Flashing of OPERATION INDICATOR lamp (right-hand side lamp) indicates abnormality.
- · OPERATION INDICATOR lamp (left-hand side lamp) is lighted.

No	Abnormal point	Operation indicator lamp	Symptom	Check point	Countermeasure
1	MXZ type Operation mode setting	Right lamp flash OOOO OOOO 2.5-second OFF	Outdoor unit operates but indoor unit does not operate.	When the operation mode of the each indoor unit is differently set to COOL(includes DRY) and HEAT at the same time, the operation mode of the indoor unit that has operated at first has the priority.	Unify the operation mode. Refer to outdoor unit service manual.

NOTE: When the indoor unit has started operation and the above failures are detected (the first detection after the power ON), the indoor electronic control P.C. board turns OFF the indoor fan motor with OPERATION INDICATOR lamp flashing

10-5. Trouble judgement criteria of main parts

MFZ-KA25VA MFZ-KA35VA MFZ-KA50VA

Part name	Check method and criteria			Figure	
Room temperature thermistor (RT11)	Measure the resistance with a tester. (Part temperature 10°C ~ 30°C)				
Indoor coil thermistor	Normal	1	normal		
(RT12(MAIN), RT13(SUB))	8 kΩ ~ 20 kΩ	Open or	short-circuit		
Indoor fan motor (Upper) (MF1)	Check 10-6.				
Indoor fan motor (Lower) (MF2)	Check 10-6. @-2.				
Damper lock motor Right (ML1)	Measure the resistance between the terminals with a tester. (Part temperature 10°C ~ 30°C)				
	Color of the lead wire	Normal	Abnormal		
	BRN-other one	235Ω ~ 255Ω	Open or short-circuit		
Damper lock motor Left (ML2)	Measure the resistance between the terminals with a tester. (Part temperature 10°C ~ 30°C)				
	Color of the lead wire	Normal	Abnormal		
	BRN-other one	235Ω ~ 255Ω	Open or short-circuit	RED	
Horizontal vane motor(MV1)	Measure the resistance between the terminals with a tester. (Part temperature $10^{\circ}\text{C} \sim 30^{\circ}\text{C}$)			YLW ROTOR BRN GRN GRN	
	Color of the lead wire	Normal	Abnormal		
	BRN-other one	235Ω ~ 255Ω	Open or short-circuit		
Horizontal vane motor(MV2)	Measure the resistance between the terminals with a tester. (Part temperature $10^{\circ}\text{C} \sim 30^{\circ}\text{C}$)				
	Color of the lead wire	Normal	Abnormal		
	BRN-other one	282Ω ~ 306Ω	Open or short-circuit		
	·				


10-6. Troubleshooting flow

When the left lamp of OPERATION INDICATOR lamp flashes 3 times and the right lamp of OPERATION INDICATOR lamp is not lighted.

Indoor fan does not operate.


A-1. Check of indoor fan motor (upper)

The indoor fan motor error has occurred, and the indoor fan doesn't operate.

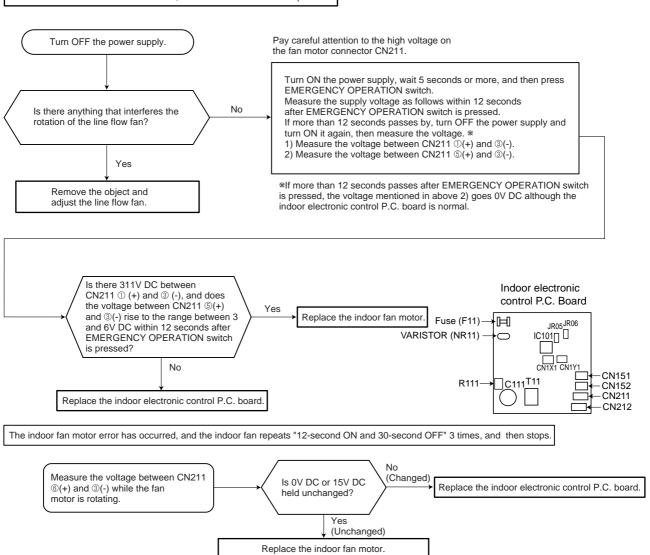

When the left lamp of OPERATION INDICATOR lamp flashes 3 times and the right lamp of OPERATION INDICATOR lamp flashes ON and OFF every 0.5-second. Indoor fan does not operate.


A-2. Check of indoor fan motor (lower)

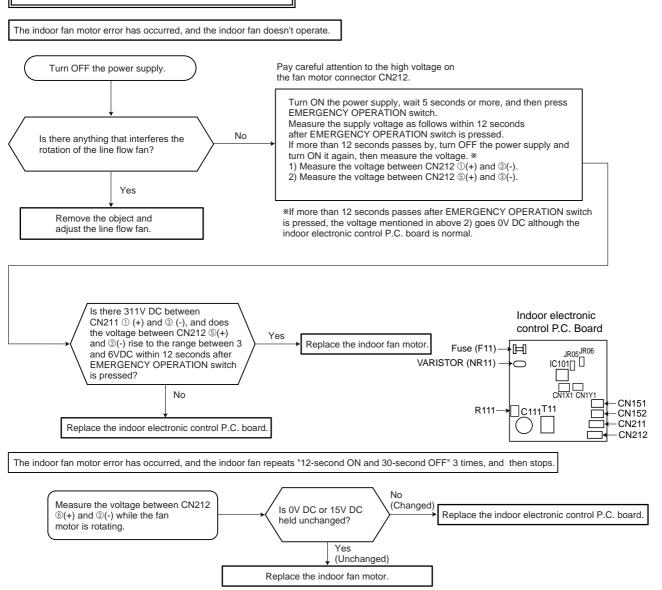

Indoor unit operates by pressing EMERGENCY OPERATION switch, but does not operate with the remote controller.

(B) Check of remote controller and receiver P.C. board


*Check if the remote controller is exclusive for this air conditioner.

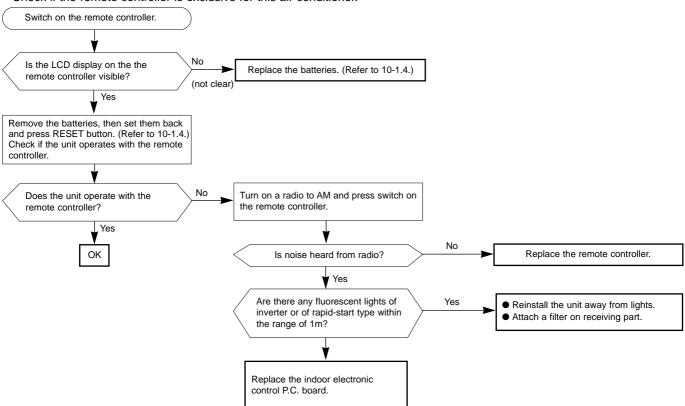

The unit cannot be operated with the remote controller.


Also, OPERATION INDICATOR lamp does not light up by pressing EMERGENCY OPERATION switch.

©Check of indoor electronic control P.C. board and indoor fan motor

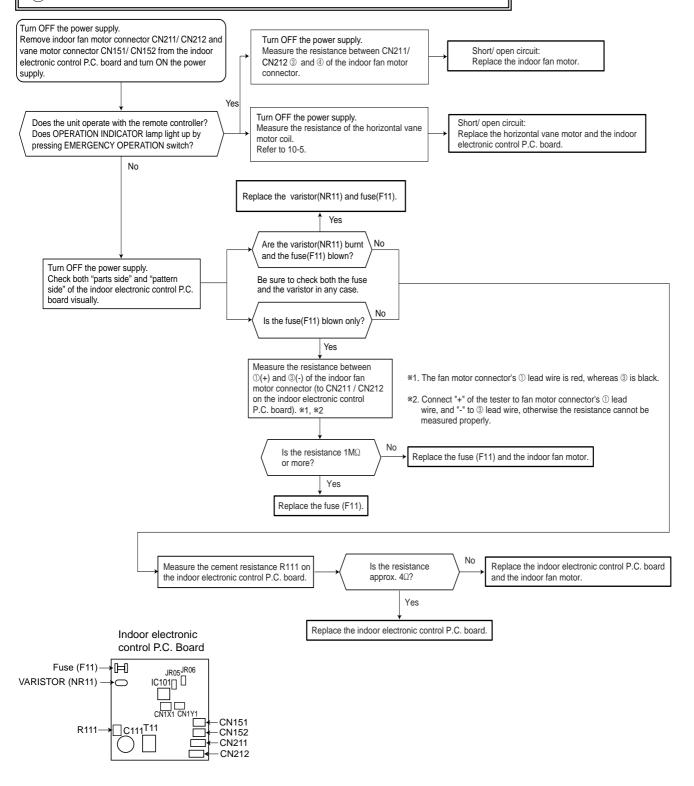

When the left lamp of OPERATION INDICATOR lamp flashes ON and OFF in every 0.5-second. Outdoor unit does not operate.


D How to check mis-wiring and serial signal error

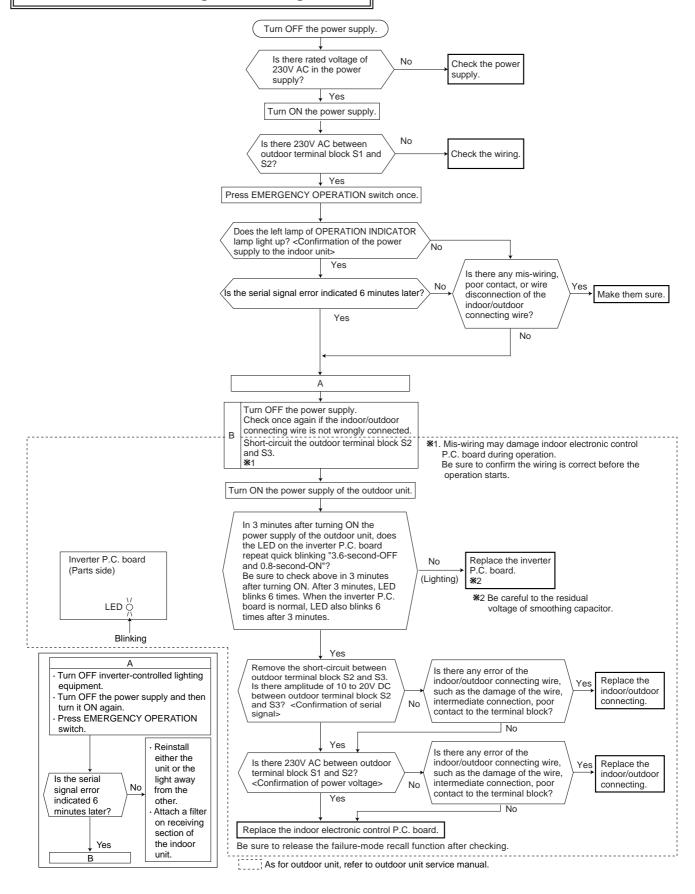


When the left lamp of OPERATION INDICATOR lamp flashes 15-time. Indoor unit and outdoor unit do not operate.

E Check of damper

After performing the check, make sure to release the failure mode recall function.

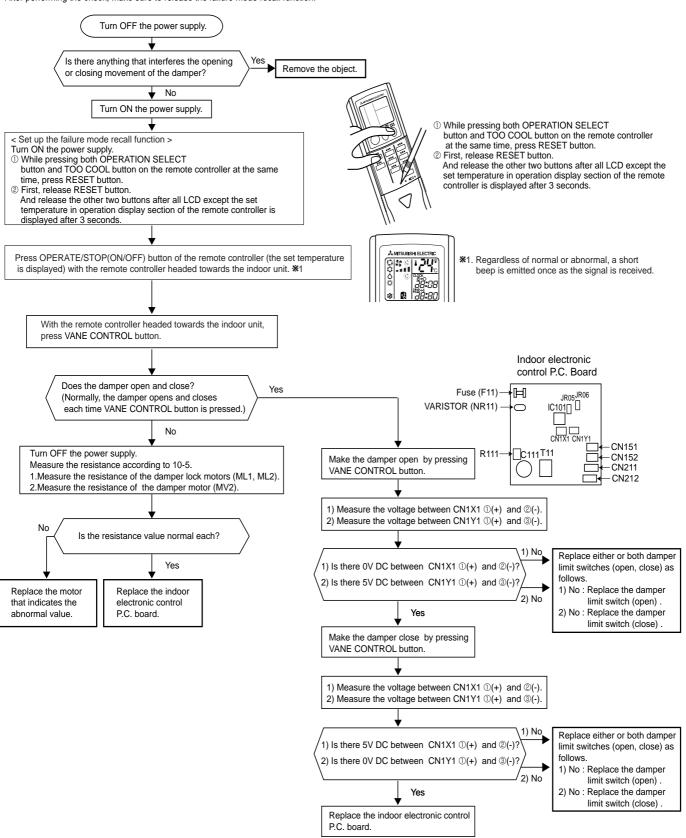

(F) Electromagnetic noise enters into TV sets or radios

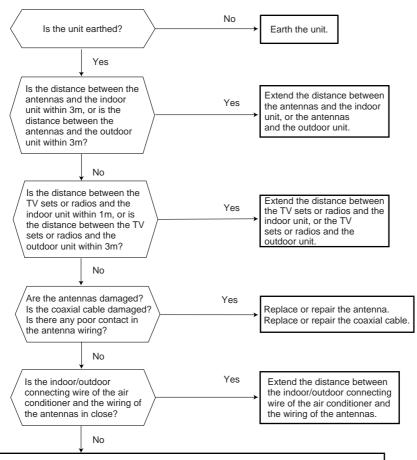

Even if all of the above conditions is fulfilled, the electromagnetic noise may enter, depending on the electric field strength or the installation condition (combination of specific conditions such as antennas or wiring).

Check the followings before asking for service.


- 1. Devices affected by the electromagnetic noise
- TV sets, radios (FM/AM broadcast, shortwave)
- 2. Channel, frequency, broadcast station affected by the electromagnetic noise
- 3. Channel, frequency, broadcast station unaffected by the electromagnetic noise
- 4.Layout of;
- indoor/outdoor unit of the air conditioner, indoor/outdoor wiring, grounding wire, antennas, wiring from antennas, receiver
- 5. Electric field intensity of the broadcast station affected by the electromagnetic noise
- 6. Presence or absence of amplifier such as booster
- 7. Operation condition of air conditioner when the electromagnetic noise enters in.
- 1)Turn OFF the power supply once, and then turn ON the power supply. In this situation check for the electromagnetic noise.
- 2)Within 3 minutes after turning ON the power supply, press OPERATE/STOP (ON/OFF) button on the remote controller for power ON, and check for the electromagnetic noise.
- 3)After a short time (3 minutes later after turning ON), the outdoor unit starts running. During operation, check for the electromagnetic noise.
- 4)Press OPERATE/STOP (ON/OFF) button on the remote controller for power OFF, when the outdoor unit stops but the indoor/outdoor communication still runs on. In this situation check for the electromagnetic noise.


After checking the above, consult the service representative.

10-7. Test point diagram and voltage MFZ-KA25VA MFZ-KA35VA MF

MFZ-KA50VA

Indoor electronic control P.C. board

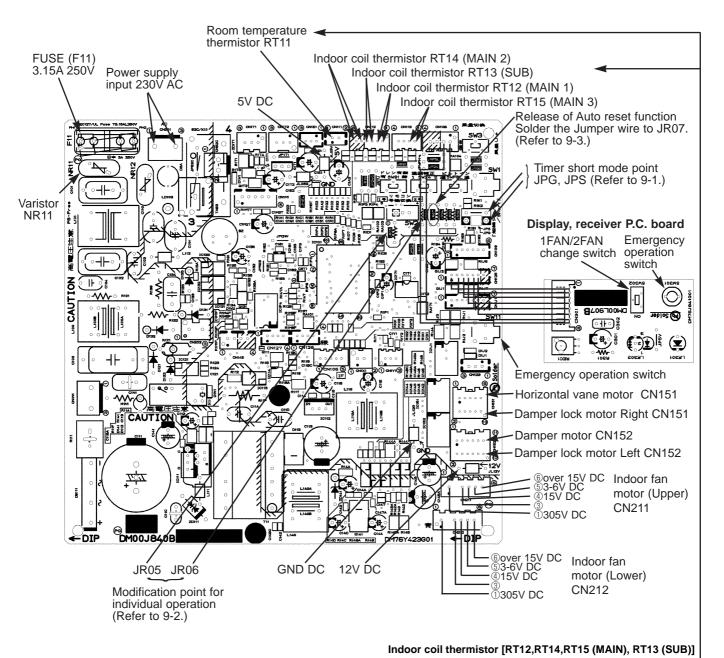

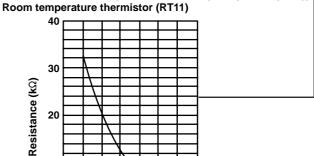

0 10 20 30 40 50 60 Temperature (°C)

10

DISASSEMBLY INSTRUCTIONS

<"Terminal with locking mechanism" Detaching points>


The terminal which has the locking mechanism can be detached as shown below.

There are two types (Refer to (1) and (2)) of the terminal with locking mechanism.


The terminal without locking mechanism can be detached by pulling it out.

Check the shape of the terminal before detaching.

(1) Slide the sleeve and check if there is a locking lever or not.

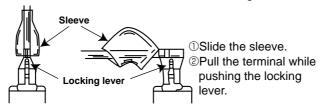

(2) The terminal with this connector has the locking mechanism.

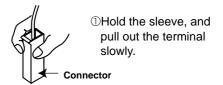

MFZ-KA25VA MFZ-KA35VA MFZ-KA50VA INDOOR UNIT

OPERATING PROCEDURE PHOTOS 1. Removing the panel Photo 1 (1) Push both sides of the upper part of the front grille and pull the front grille open, and then remove the front grille from the panel. (See Photo 1.) (2) Remove the screws of the panel. (See Photo 2.) (3) Open the horizontal vane and push the left, right and middle of the upper part of the panel, and pull the panel toward you. (See Photo 2.) (4) Lift up the panel and remove it from the box. Push Grille Photo 2 Screws of the panel Horizontal vane **Push Push**

OPERATING PROCEDURE

2. Removing the electronic control P.C. board and the display receiver P.C. board

- (1) Remove the panel. (Refer to 1.)
- (2) Remove the screw of the electrical cover, and then the electrical cover. (See Photo 3.)
- (3) Remove the screw of the ground wires under the electrical box, and then the ground wires. (See Photo 4.)
- (4) Remove the screw of the ground wires connected to the indoor fan motor (lower), and then the ground wires. (See Photo 4.)
- (5) Remove the screw of the ground wires connected to the indoor heat exchanger, and then the ground wires. (See Photo 4.)
- (6) Unhook the lamp cover from the catch. (See Photo 4.)
- (7) Open the lamp cover and pull out the display receiver P.C. board.
- (8) Remove the screw of the ground wires connected to the electronic control P.C. board, and then the ground wires. (See Photo 4.)
- (9) Pull the electronic control P.C. board slightly toward you from the electrical box, and disconnect all the connectors on the electronic control P.C. board.
- (10) Pull out the electronic control P.C. board from the electrical box.

PHOTOS

Photo 3


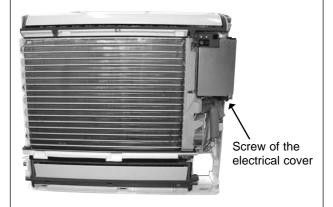


Photo 4


Lamp cover

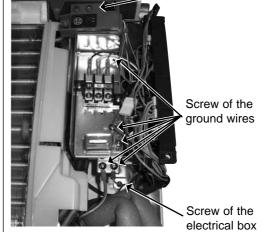

3. Removing the electrical box

- (1) Remove the panel. (Refer to 1.)
- (2) Remove the electrical cover. (Refer to 2.)
- (3) Remove the ground wires from the electrical box. (Refer to 2.)
- (4) Remove the ground wires connected to the indoor fan motor and the ones connected to the indoor heat exchanger. (Refer to 2.)
- (5) Remove the screw of the electrical box. (See Photo 4.)
- (6) Disconnect the following connectors on the electronic control P.C. board.(See Photo 5.)
 - •Fan motor connectors < CN211, CN212 >
 - •Horizontal vane motor connector < CN151 >
 - •Damper motor connector < CN152 >
 - Display receiver P.C. board connectors < CN106, CN125 >
 - •Indoor coil thermistor connectors < CN112, CN113 >
 - •Room temperature thermistor connector < CN111 >
 - •Damper limit switch connectors < CN1X1, CN1Y1 >
- (7) Unhook the electrical box from the upper catch and pull out the electrical box from the box.

Photo 5

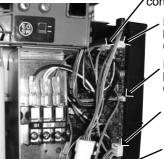

Indoor coil thermistor connector CN113

Display receiver P.C. board connector CN106

Display receiver P.C. board connector CN125

Horizontal vane motor connector CN151

Damper motor connector CN152

Fan motor connector CN211

Fan motor connector CN212

OPERATING PROCEDURE

4. Removing the horizontal vane motor unit

- (1) Remove the panel. (Refer to 1.)
- (2) Remove the screws of the horizontal vane motor unit and pull out the horizontal vane motor unit. (See Photo 6.)
- (3) Disconnect the connector from the horizontal vane motor unit

PHOTOS

Photo 6



Screw of the horizonta vane motor unit

5. Removing the indoor fan motor (upper)

- (1) Remove the panel. (Refer to 1.)
- (2) Remove the electrical box. (Refer to 3.)
- (3) Remove the nozzle (upper). (See Photo 7.)
- (4) Unhook the water cover from the catches and remove the water cover. (See Photo 7.)
- (5) Removing the screw of the motor band, and then the motor band. (See Photo 8.)
- (6) Remove the line flow fan and the indoor fan motor (upper) from the box.

Photo 7

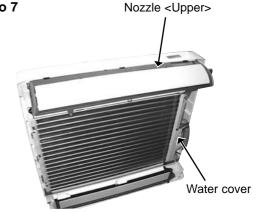


Photo 8

Screw of the motor band



OPERATING PROCEDURE

6. Removing the damper lock motor, the damper motor and the damper limit switch

- (1) Remove the panel. (Refer to 1.)
- (2) Remove the screws of the nozzle assembly (lower). (See Photo 9.)
- (3) Remove the drain hose from the nozzle assembly (lower) and pull out the nozzle assembly (lower) toward you.
- (4) Remove the tape fixing the lead wires of the damper motor and the damper lock motor from the nozzle assembly <lower>, (See Photo 10.)
- (5) Remove the screws of the damper lock motor. (See Photo 11 and 12.)
- (6) Lift the nozzle slightly and remove the lock shaft from with in the nozzle and remove the damper lock motors (ML1, ML2).
- (7) Remove the screws of the damper motor support, and then the damper motor support.
- (8) Remove the screws of the damper motor, and then the damper motor from the damper motor support.
- (9) Disconnect the connector from the damper motor.
- (10) Remove the damper limit switches (LS1, LS2).

PHOTOS

Photo 9

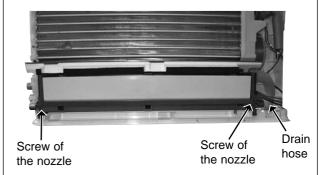


Photo 10



Lead wires of the damper motor and the damper lock motor

7. Removing the indoor fan motor (lower)

- (1) Remove the panel. (Refer to 1.)
- (2) Remove the nozzle assembly (lower) and the drain hose. (Refer to 6.)
- (3) Remove the screw of the ground wire of the indoor fan motor (lower), and then the ground wire. (See Photo 13.)
- (4) Remove the screw of the motor band, and then the motor band. (See Photo 13.)
- (5) Remove the line flow fan and the indoor fan motor (lower) from the box.

Photo 11

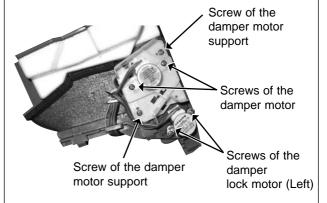


Photo 13

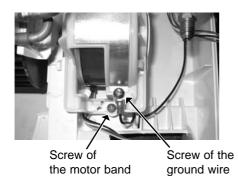


Photo 12




Screws of the damper lock motor (Right)

12

PARTS LIST (non-RoHS compliant)

MFZ-KA25VA MFZ-KA35VA MFZ-KA50VA

12-1. INDOOR UNIT STRUCTURAL PARTS

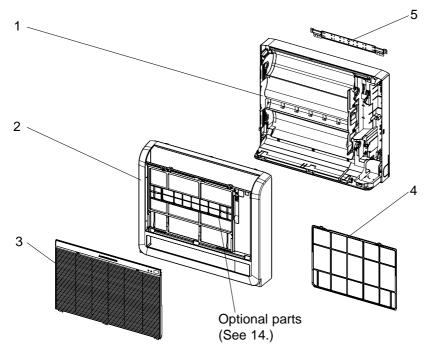

12-2. ACCESSORY AND REMOTE CONTROLLER



12-1. INDOOR UNIT STRUCTURAL PARTS

			Symbol		Q'ty/unit		
No.	Part No.	Part name		MFZ-KA25VA -E1	MFZ-KA35VA -E1	MFZ-KA50VA -E1	Remarks
1	M21 E0W 234	BOX ASSEMBLY		1	1	1	
2	T2W A4T 000	PANEL ASSEMBLY		1	1	1	
3	T2W A4T 010	FRONT GRILLE		1	1	1	
4	T2W A4T 100	CATECHIN AIR FILTER		1	1	1	
5	T2W A4T 233	BACK PLATE		1	1	1	

12-2. ACCESSORY AND REMOTE CONTROLLER


Part number that is circled is not shown in the illustration.

	_	T2W A4T 426	DEMOTE CONTROLLED	4	4	4	KMOFO
	Ø	T2W A4T 426	REMOTE CONTROLLER	I	1	I	KM05G
- 1 ((7)	M21 HL5 256	FFI T TAPF	1	1	1	

PARTS LIST (non-RoHS compliant)

MFZ-KA25VA MFZ-KA35VA MFZ-KA50VA

12-3. INDOOR UNIT ELECTRICAL PARTS AND FUNCTIONAL PARTS

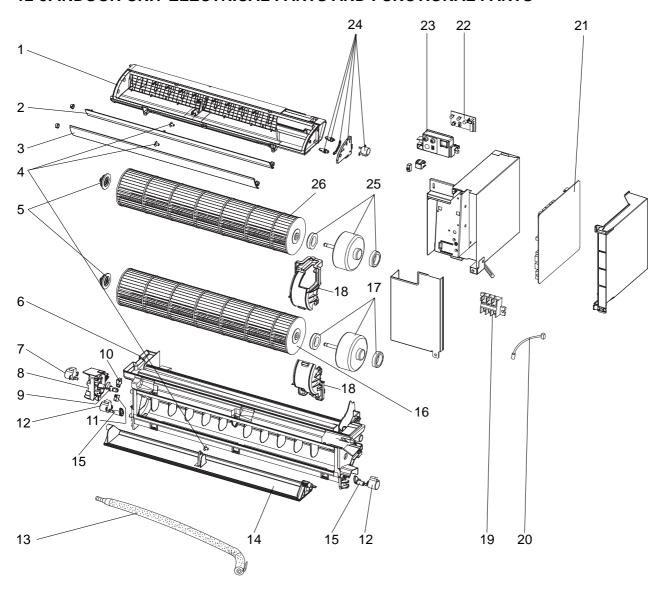

PARTS LIST (non-RoHS compliant)

12-3. INDOOR UNIT ELECTRICAL PARTS AND FUNCTIONAL PARTS

Part numbers that are circled are not shown in the illustration.


			Symbol		Q'ty/unit			
No.	Part No.	Part name	in Wiring		MFZ-KA35VA - E1	MFZ-KA50VA - E1	Remarks	
1	M21 E0W 235	NOZZLE ASSEMBLY (UPPER)		1	1	1		
2	T2W A6T 040	HORIZONTAL VANE (BACK)		1	1	1		
3	T2W A4T 040	HORIZONTAL VANE (FRONT)		1	1	1		
4	T2W A4T 079	VANE SLEEVE		3	3	3		
5	M21 E0W 504	BEARING ASSEMBLY		2	2	2		
6	M21 E2W 235	NOZZLE ASSEMBLY (LOWER)		1	1	1		
7	T2W A6T 306	DAMPER MOTOR	MV2	1	1	1	UP & DOWN	
8	T2W A4T 506	VANE MOTOR SUPPORT		1	1	1		
9	T2W A6T 049	SM SHAFT		1	1	1		
10	T2W A6T 047	DAMPER LIMIT SWITCH (CLOSE)	LS2	1	1	1		
11	T2W A4T 047	DAMPER LIMIT SWITCH (OPEN)	LS1	1	1	1		
12	M21 WJ7 306	DAMPER LOCK MOTOR	ML1,2	2	2	2	RIGHT & LEFT	
13	M21 W60 703	DRAIN HOSE		1	1	1		
14	T2W A6T 041	DAMPER		1	1	1		
15	T2W A4T 049	LOCK SHAFT		2	2	2		
16	T2W A5T 309	LINE FLOW FAN (LOWER)		1	1	1		
17	T2W A4T 301	INDOOR FAN MOTOR ASSEMBLY (LOWER)*	MF2	1	1	1	RC0J30- □□	
18	T2W A4T 515	MOTOR BAND		2	2	2		
19	T2W YH1 376	TERMINAL BLOCK	TB	1	1	1		
20	M21 H81 307	ROOM TEMPERATURE THERMISTOR	RT11	1	1	1		
	T2W A4T 450	ELECTRONIC CONTROL P.C. BOARD		1			AUTO RESTART	
21	T2W A5T 450	ELECTRONIC CONTROL P.C. BOARD			1		AUTO RESTART	
	T2W A6T 450	ELECTRONIC CONTROL P.C. BOARD				1	AUTO RESTART	
22	T2W A4T 328	DISPLAY RECEIVER SWITCH P.C. BOARD		1	1	1		
23	M21 E0W 043	LAMP COVER		1	1	1		
24	T2W A4T 306	HORIZONTAL VANE MOTOR UNIT	MV1	1	1	1	UP & DOWN	
25	T2W A4T 300	INDOOR FAN MOTOR ASSEMBLY (UPPER)*	MF1	1	1	1	RC0J30- □□	
26	T2W A4T 309	LINE FLOW FAN (UPPER)		1	1	1		
27)	T2W A4T 382		F11	1	1	1	T3.15AL250V	
28	T2W A4T 384	VARISTOR	NR11	1	1	1		

^{*} Including fan motor rubber mount (2PCS/SET)

PARTS LIST (non-RoHS compliant)

MFZ-KA25VA MFZ-KA35VA MFZ-KA50VA

12-4. INDOOR UNIT HEAT EXCHANGER

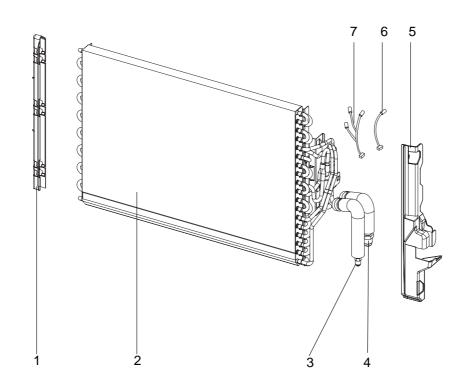

12-4. INDOOR UNIT HEAT EXCHANGER


			Symbol		Q'ty/unit			
No.	Part No.	Part name		MFZ-KA25VA - E1	MFZ-KA35VA - E1	MFZ-KA50VA - E1	Remarks	
1	T2W A4T 638	HAIR PIN COVER		1	1	1		
2	M21 E0W 620	INDOOR HEAT EXCHANGER		1	1			
-	M21 E8W 620	INDOOR HEAT EXCHANGER				1		
3	M21 VL4 664	UNION (LIQ)		1	1	1	ϕ 6.35	
4	M21 NJ9 663	UNION (GAS)		1	1		ϕ 9.52	
*	M21 VL4 663	UNION (GAS)				1	ϕ 12.7	
5	T2W A4T 791	WATER COVER		1	1	1		
6	T2W A5T 308	INDOOR COIL THERMISTOR	RT13	1	1	1		
7	T2W A4T 308	INDOOR COIL THERMISTOR SET	RT12,14,15	1	1	1	3PCS/SET	

13

RoHS PARTS LIST (RoHS compliant)

MFZ-KA25VA MFZ-KA35VA MFZ-KA50VA

13-1. INDOOR UNIT STRUCTURAL PARTS

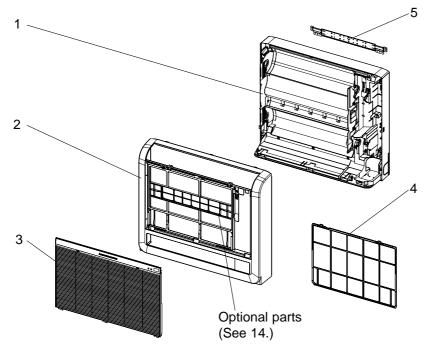

13-2. ACCESSORY AND REMOTE CONTROLLER



13-1. INDOOR UNIT STRUCTURAL PARTS

	.	Part No.		Symbol			Q'ty				
No.	oHS			in Wiring			MFZ				
INO.	8	Fait No.	rait liaille	-	25\	/A -	35V	/A -	50\	/A -	Remarks
	_			Diagram	E1	E2	E1	E2	E1	E2	
1	G	T2W L3V 234	BOX ASSEMBLY		1	1	1	1	1	1	
2	G	T2W L3V 000	PANEL ASSEMBLY		1	1	1	1	1	1	
3	G	T2W L3V 010	FRONT GRILLE		1	1	1	1	1	1	
4	G	M21 L3V 100	CATECHIN AIR FILTER		1	1	1	1	1	1	
5	G	T2W L3V 233	BACK PLATE		1	1	1	1	1	1	

13-2. ACCESSORY AND REMOTE CONTROLLER


Part number that is circled is not shown in the illustration.

6	G	T2W A4T 426	REMOTE CONTROLLER	1	1	1	1	1	1	KM05G
(7)	G	M21 L3V 256	FFI T TAPF	1	1	1	1	1	1	

RoHS PARTS LIST (RoHS compliant)

MFZ-KA25VA MFZ-KA35VA MFZ-KA50VA

13-3. INDOOR UNIT ELECTRICAL PARTS AND FUNCTIONAL PARTS

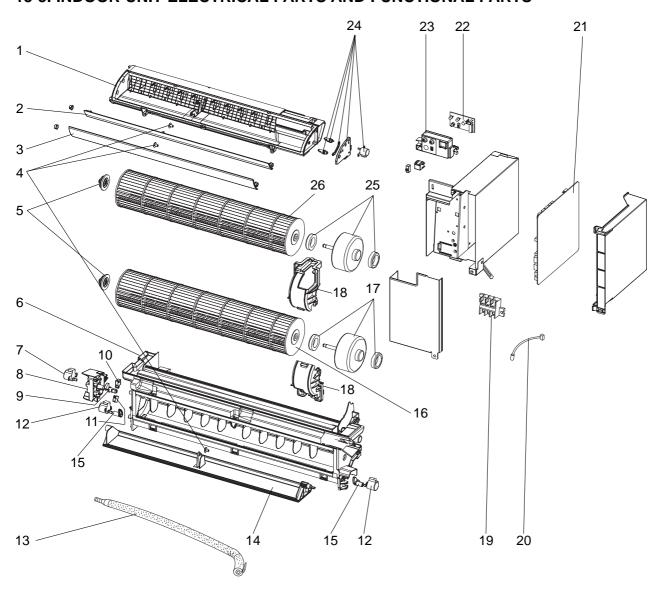

RoHS PARTS LIST (RoHS compliant)

13-3. INDOOR UNIT ELECTRICAL PARTS AND FUNCTIONAL PARTS

Part numbers that are circled are not shown in the illustration.


				Symbol				/unit			
No.	oHS	Part No.	Part name	in Wiring		MFZ-KA					Remarks
	8			Diagram		/A	35V			/A	
_	_		NOTE FACOURADING (UDDED)		E1	E2	E1	E2	E1	E2	
1	G		NOZZLE ASSEMBLY (UPPER)		1	1	1	1	1	1	
2	G		HORIZONTAL VANE (BACK)		1	1	1	1	1	1	
3	G		HORIZONTAL VANE (FRONT)		1	1	1	1	1	1	
4	G		VANE SLEEVE		3	3	3	3	3	3	
5	G		BEARING ASSEMBLY		2	2	2	2	2	2	
6	G		NOZZLE ASSEMBLY (LOWER)		1	1	1	1	1	1	
7	G		DAMPER MOTOR	MV2	1	1	1	1	1	1	UP & DOWN
8	G		VANE MOTOR SUPPORT		1	1	1	1	1	1	
9	G	M21 L3V 049			1	1	1	1	1	1	
10	G		DAMPER LIMIT SWITCH (CLOSE)	LS2	1	1	1	1	1	1	
11	G		DAMPER LIMIT SWITCH (OPEN)	LS1	1	1	1	1	1	1	
12	G		DAMPER LOCK MOTOR	ML1,2	2	2	2	2	2	2	RIGHT & LEFT
13	G	M21 L3V 703	DRAIN HOSE		1	1	1	1	1	1	
14	G	M21 L3V 041			1	1	1	1	1	1	
15	G	M21 L4V 049			2	2	2	2	2	2	
16	G	M21 L4V 302	LINE FLOW FAN (LOWER)		1	1	1	1	1	1	
17			INDOOR FAN MOTOR ASSEMBLY (LOWER)*	MF2	1	1	1	1	1	1	RC0J30-□□
18	G	M21 L3V 023	MOTOR BAND		2	2	2	2	2	2	
19	G	T2W L3V 376	TERMINAL BLOCK	TB	1	1	1	1	1	1	
20	G	M21 L3V 307	ROOM TEMPERATURE THERMISTOR	RT11	1	1	1	1	1	1	
	G	T2W L3V 450	ELECTRONIC CONTROL P.C. BOARD		1	1					AUTO RESTART
21	G	T2W L4V 450	ELECTRONIC CONTROL P.C. BOARD				1	1			AUTO RESTART
	G	T2W L5V 450	ELECTRONIC CONTROL P.C. BOARD						1	1	AUTO RESTART
22	G	M21 L3V 328	DISPLAY RECEIVER SWITCH P.C. BOARD		1	1	1	1	1	1	
23	G	T2W L3V 043	LAMP COVER		1	1	1	1	1	1	
24	G	M21 L3V 306	HORIZONTAL VANE MOTOR UNIT	MV1	1	1	1	1	1	1	UP & DOWN
25	G	M21 L3V 300	INDOOR FAN MOTOR ASSEMBLY (UPPER)*	MF1	1	1	1	1	1	1	RC0J30-□□
26	G		LINE FLOW FAN (UPPER)		1	1	1	1	1	1	
27)	G	T2W L3V 382		F11	1	1	1	1	1	1	T3.15AL250V
28	G	T2W L3V 384	VARISTOR	NR11	1	1	1	1	1	1	

^{*} Including fan motor rubber mount (2PCS/SET)

RoHS PARTS LIST (RoHS compliant)

MFZ-KA25VA MFZ-KA35VA MFZ-KA50VA

13-4. INDOOR UNIT HEAT EXCHANGER

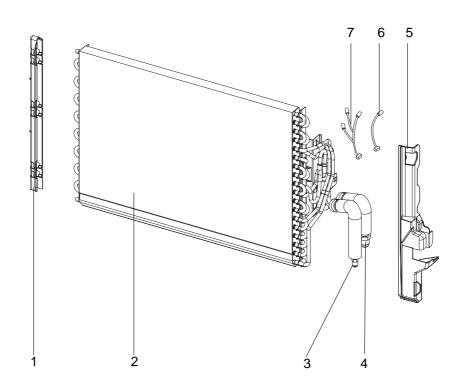

13-4. INDOOR UNIT HEAT EXCHANGER

	oHS	5		Symbol	METUA						
No	ᄝ	Part No.	Part name	in Wiring- Diagram	25\	/A -		/A -	50\	/A -	Remarks
					E1	E2	E1	E2	E1	E2	
1	G	M21 L3V 638	HAIR PIN COVER		1	1	1	1	1	1	
2	G	M21 L3V 620	INDOOR HEAT EXCHANGER		1	1	1	1			
-	G	M21 L5V 620	INDOOR HEAT EXCHANGER						1	1	
3	G	M21 L3V 664	UNION (LIQ)		1	1	1	1	1	1	ϕ 6.35
4	G	M21 L3V 663	UNION (GAS)		1	1	1	1			ϕ 9.52
4	G	M21 L5V 663	UNION (GAS)						1	1	ϕ 12.7
5	G	M21 L3V 791	WATER COVER		1	1	1	1	1	1	
6	G	M21 L4V 305	INDOOR COIL THERMISTOR	RT13	1	1	1	1	1	1	
7	G	M21 L3V 305	INDOOR COIL THERMISTOR SET	RT12,14,15	1	1	1	1	1	1	3PCS/SET


AIR CLEANING FILTER (ANTI-ALLERGY ENZYME FILTER)

- AIR CLEANING FILTER removes fine dust of 0.01 micron from air by means of static electricity.
- Normal life of AIR CLEANING FILTER is 1 year.
 If AIR CLEANING FILTER is to be washed, soak AIR CLEANING FILTER in water (when showing dirt, in lukewarm water) and rinse it delicately, without removing the filter from the frame about once every 3 months.
- Clogged AIR CLEANING FILTER may reduce the air conditioner capacity or cause frost on the air outlet.
- Do not remove or attach AIR CLEANING FILTER during unit operation.


Model	Part No.
MFZ-KA25VA- E1 MFZ-KA25VA- E2 MFZ-KA35VA- E1 MFZ-KA35VA- E2 MFZ-KA50VA- E1 MFZ-KA50VA- E2	MAC-415FT-E

Replacement of the air cleaning filter


(1) Remove the catechin air filter.

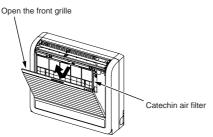


(2) Remove the air cleaning filter.

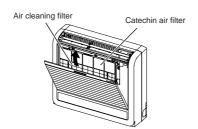

(3) Attach a new air cleaning filter. Fix the filter with the tabs securely.

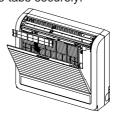

(4) Install the catechin air filter. Be sure to install its both ends into the tabs

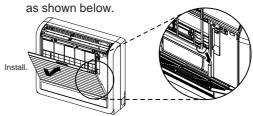

(5) Securely close the front grille.



HEAD OFFICE: TOKYO BLDG., 2-7-3, MARUNOUCHI, CHIYODA-KU, TOKYO100-8310, JAPAN